


All models

**Note:** A mirror can be used instead of an assistant when checking external lamps.

The following operations can be checked by turning the rotary lamp switch:


- Right and left side standing lamp
- Parking lamps/tail lamps/instrument lamps
- Low beam headlamps
- High beam headlamps and high beam indicator lamps
- Fog lamps/rear fog lamps and indicator lamp

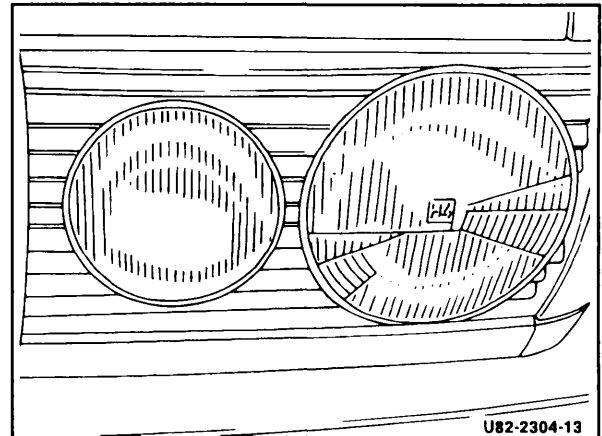

## Key in Ignition in position 0

Operational check of:

Warning flashers and indicator lamp

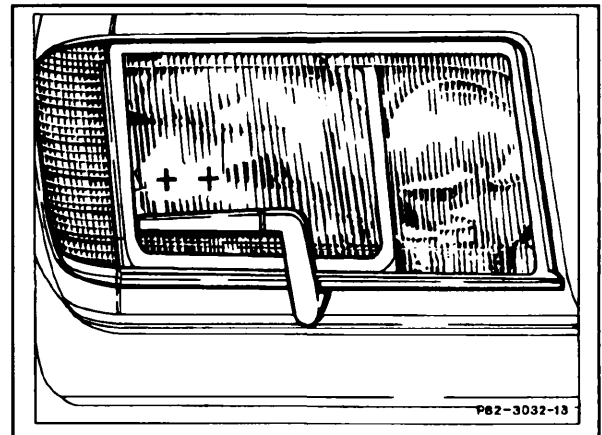

## Key in position 2

Engine switched off, parking brake engaged.

Operational checkup of:

Stop lamp (including center high mounted stop lamp[as of model year 1986]) by depressing brake pedal.

Backup lamps by selecting reverse gear.

