

MODEL	SALES DESIGNATION
126.120.....	300 SD (Turbo)

CIRCUIT	PAGE	CIRCUIT	PAGE
Anti Lock Brake System	136	Lights (continued)	
Anti Theft Alarm System	137/1	—Instrument Cluster	114
Automatic Antenna	123	—License	113
Auxiliary Fan	129	—Marker	113
Central Locking System	132	—Park	112
Charging System	108	—Stop	111
Cigar Lighters		—Tail	112
—Front	123	—Trunk	113/1
—Rear	115	—Turn Signal	118
Clock	121	Orthopedic Seats	125
Component Locations	201	Outside Heated Mirrors	135/1
Cruise Control	111	Power Distribution	104
Engine Overload Protection	109	Power Distribution—ACC	122
Exhaust Gas Recirculation	108/1	Power Seats	126
Fuse Box	103	Power Windows	130
Fuse-Circuit List	102	Pre-Glow System	106
Gauges	120	Radio	123
Ground Distribution	141	Rear Defogger	134
Ground Distribution—ACC	122	RH Outside Mirror	135
Heated Seats	128	Sliding Roof	134
Horns	115	Start/Stop (Ignition Switch)	107
Lights		Supplemental Restraint System	133
—Backup	109	Tachometer	120
—Center Console	114	Transmission Kickdown	109
—Courtesy	116	Warning Indicators	120
—Fog	110	Warning System	118/2
—Glove Box	115	Wiper/Washer	124
—Hazard	118		
—Headlights	110		

REVISIONS:

FUSE - CIRCUIT LIST

MY 1983/MY 1984/MY 1985

102

Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (color)			
1	8 (WT)	Lights: Marker/License	58R	113
		Lights: Park/Tail (RH)		112
		Warning System		118/2
		Illumination: Instrument Cluster/Center Console		114
2	8 (WT)	Headlights (RH High Beam/Indicator)	56a	110
3	8 (WT)	Lights: Park/Tail (LH)	58L	112
4	8 (WT)	Headlights (LH High Beam)	56a	110
5	25 (BU)	Power Seats (Front Power Seat Switches: Front Height and Fwd-Back)	15R/30	126
6	8 (WT)	Headlights (RH Low Beam)/Fog Lights	56b	110
7	16 (PK)	Headlights (Flash)	15R	110
		Wiper/Washer		124
		Power Windows		130
		RH Outside Mirror		135
		Power Seats		126
8	8 (WT)	Headlights (LH Low Beam)	56b	110
9	8 (WT) 16 (PK)*	Glove Box Light	15R	115
		Wiper/Washer (Washer Jet Heaters)		124
		Front Cigar Lighter/Radio		123
		*Heated Seats (Front)		128
		*Orthopedic Seats ①		125
10	8 (WT)	Backup Lights/Transmission Kickdown/Engine Overload Protection	15	109
		Auxiliary Fan		129
		Automatic Climate Control		122
		Outside Air Temperature		122
		Gauge ①		121

Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (color)			
11	25 (BU)	Automatic Climate Control	15X	122
12	8 (WT)	Stoplights/Cruise Control	15	111
		Warning Indicators/Gauges		120
		Turn Signal Lights		118
		Warning System		118/2
		Anti Lock Brake System ②		136
		Anti Theft Alarm System ①		139
13	8 (WT)	Hazard Lights	30	118
		Clock		121
		Radio		123
		Central Locking System		132
14	25 (BU)	Rear Defogger	15	134
		Heated Seats (Rear)		128
		Horns/Rear Cigar Lighters		115
15	8 (WT)	Trunk Light	30	113/1
		Power Seats		127/1
		Warning System		118/2
		Courtesy Lights		116
		Automatic Antenna		123
		Anti Theft Alarms System		137/1
16	16 (PK)	Sliding Roof	15	134
a	16 (PK)	Power Windows (RF/LR)	15R	130
b	16 (PK)	Power Windows (LF/RR)	15R	130
c	16 (PK)	Auxiliary Fan	30	129
d	25 (BU)	Power Seats (Front Power Seat Switches: Rear Height and Backrest)	15R/30	125
	80	Pre-Glow System (Part of Glow Plug Control Relay)	30	106


REVISIONS ① AS OF MODEL YEAR 1984
② AS OF MODEL YEAR 1985

126, 120

1/87

FUSE BOX

MY 1985

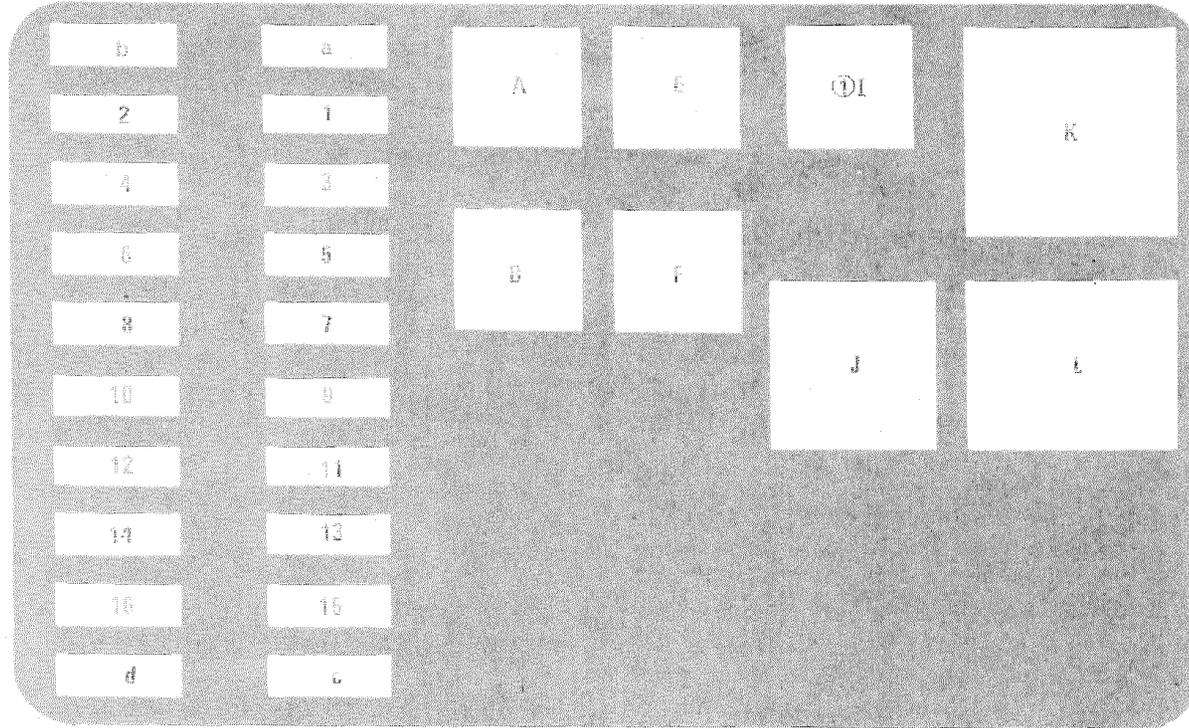

FUSES
(SEE PAGE 102)

RELAYS
(SEE BELOW)


RELAY CODE	RELAY USE
A	Seat Control Relay (Power Seats)
B	Auxiliary Fan Relay (Auxiliary Fan)
E	Power Separation Relay (Power Seats)
F	Window Relay (Power Windows)
I	Over Voltage Protection Relay (Exhaust Gas Recirculation)
J	Compressor Time Delay Relay (ACC)
K	Rear Defogger Timer Relay (Rear Defogger/Sliding Roof)
L	Interval Wipe Control (Wiper/Washer)

REVISIONS: ① AS OF MODEL YEAR 1984

POWER DISTRIBUTION

(For Component Locations See Page 211)

MY 1983/MY 1984/MY 1985

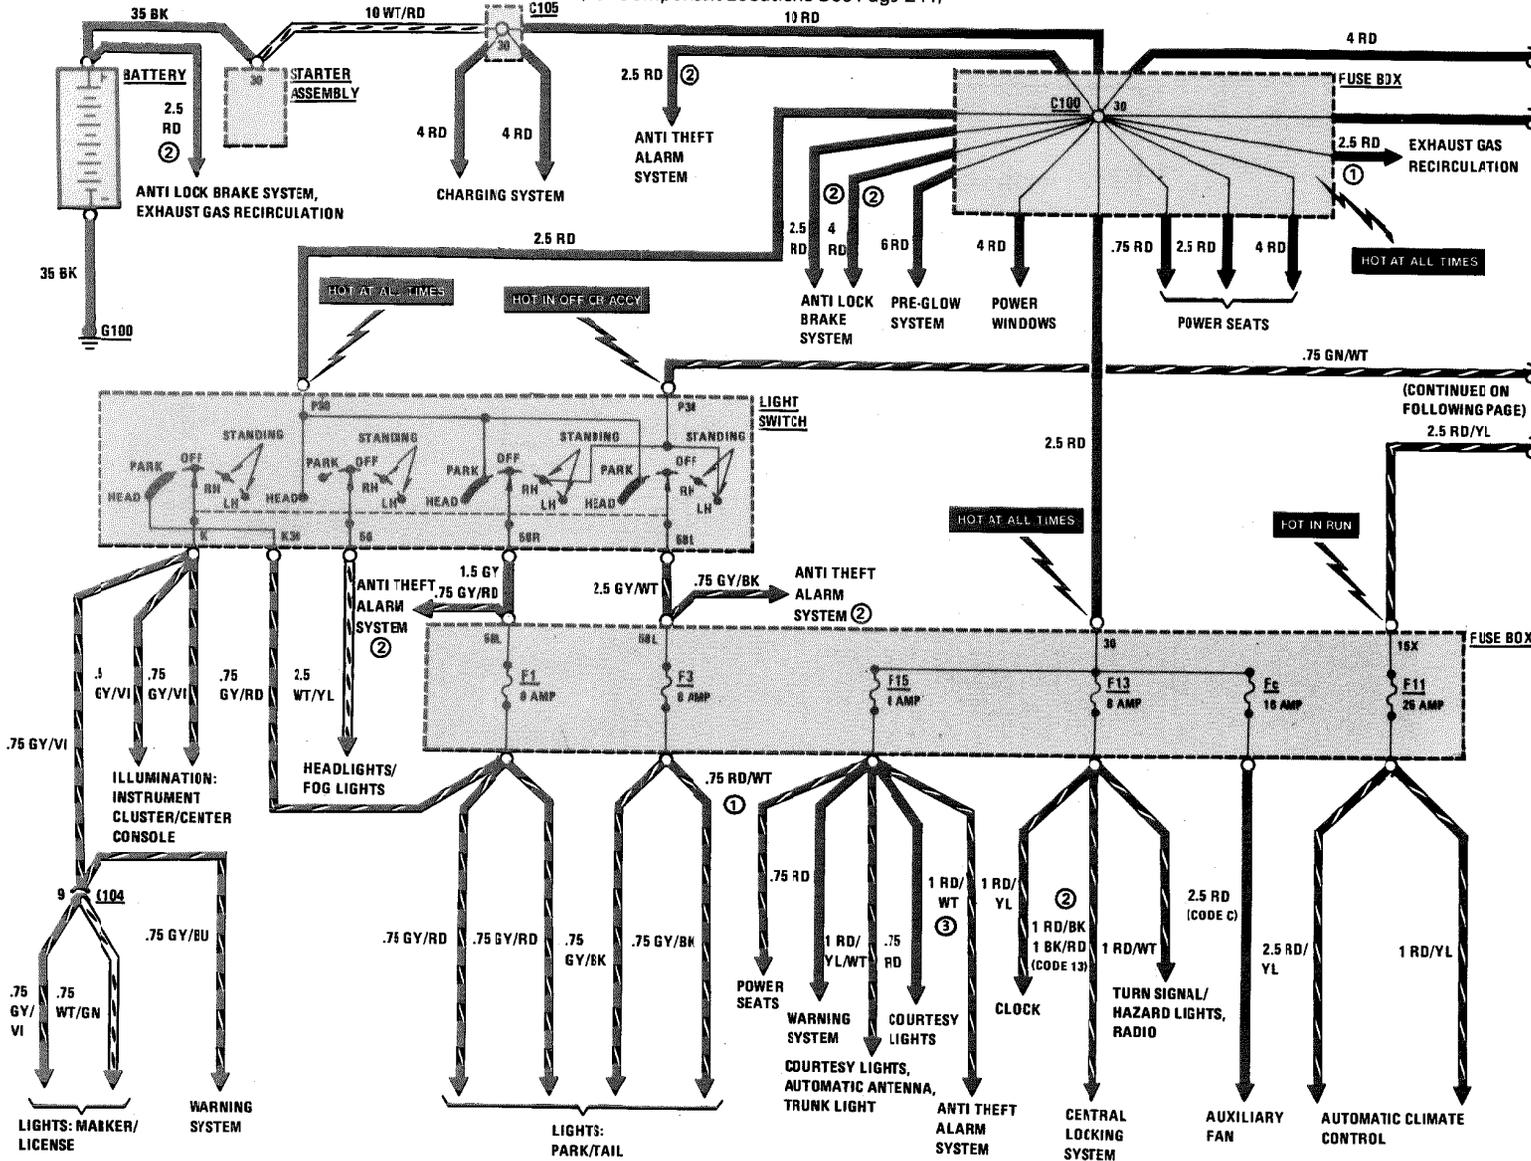


REVISIONS:

- ① AS OF MODEL YEAR 1984
- ② AS OF MODEL YEAR 1985
- ③ MODEL YEAR 1984 AND 1985

POWER DISTRIBUTION

(For Component Locations See Page 211)

MY 1983/MY 1984/MY 1985

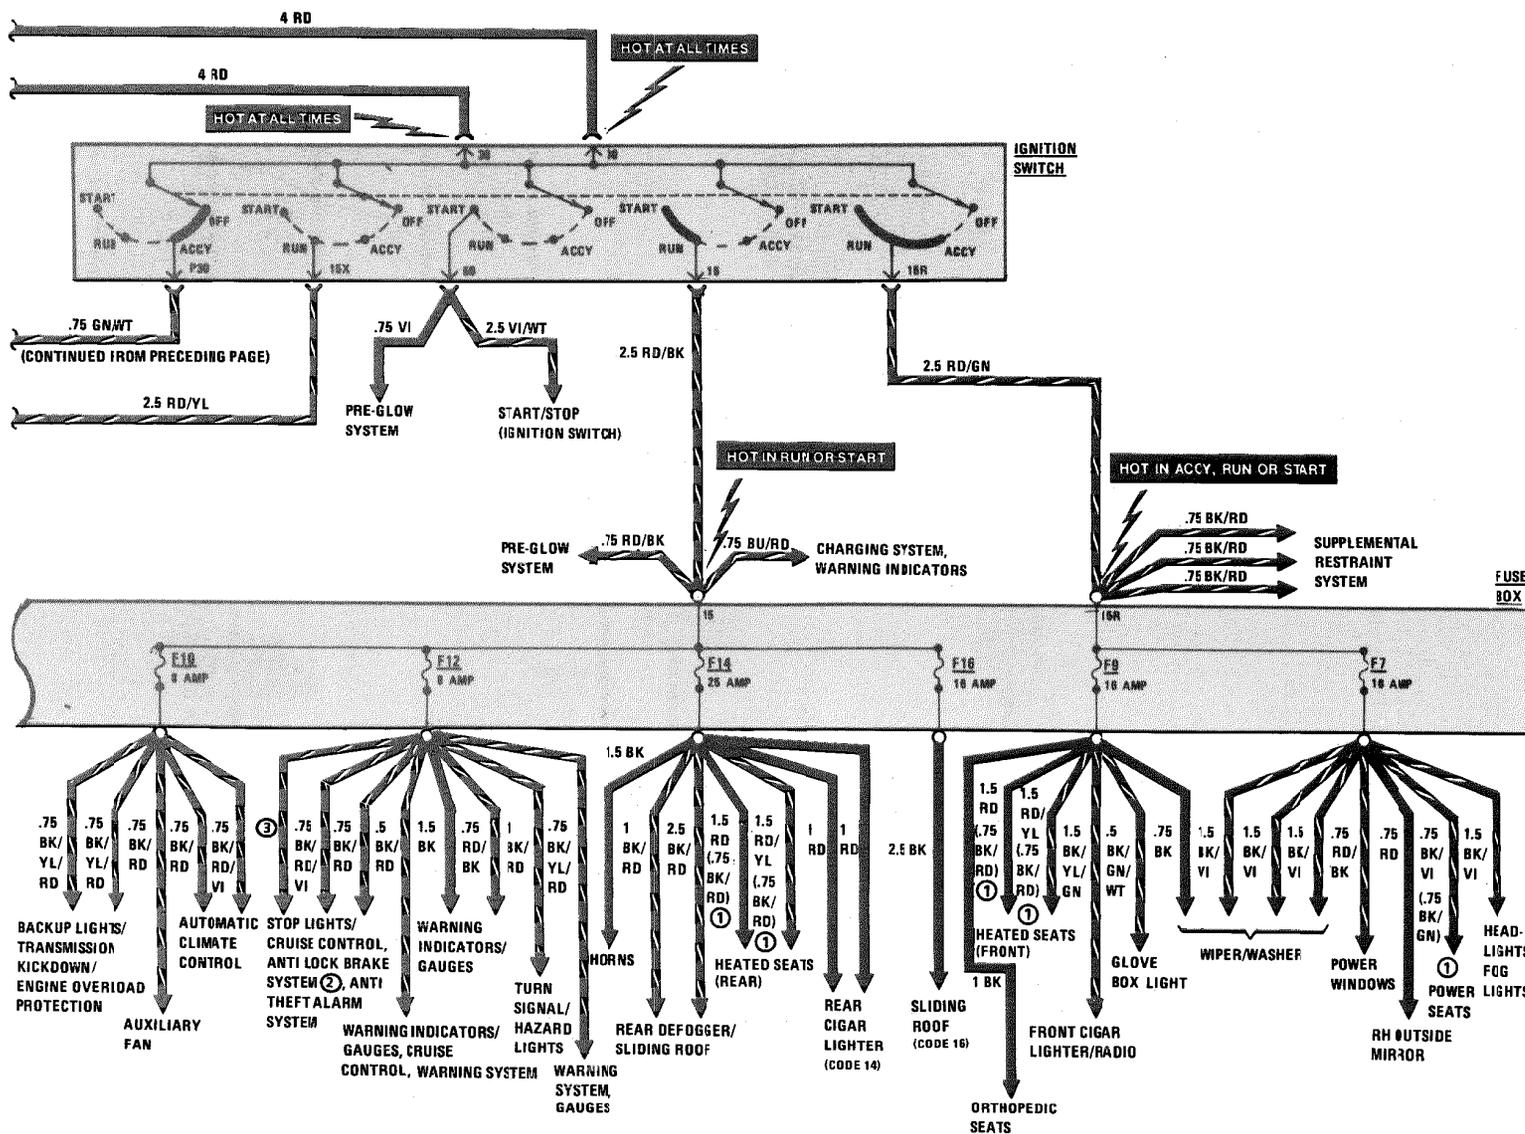


- REVISIONS: ① AS OF MODEL YEAR 1984
 ② AS OF MODEL YEAR 1985
 ③ .75 BK/YL (MODEL YEAR 1984), .75 BK/WT (MODEL YEAR 1985)

PRE-GLOW SYSTEM

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 213)

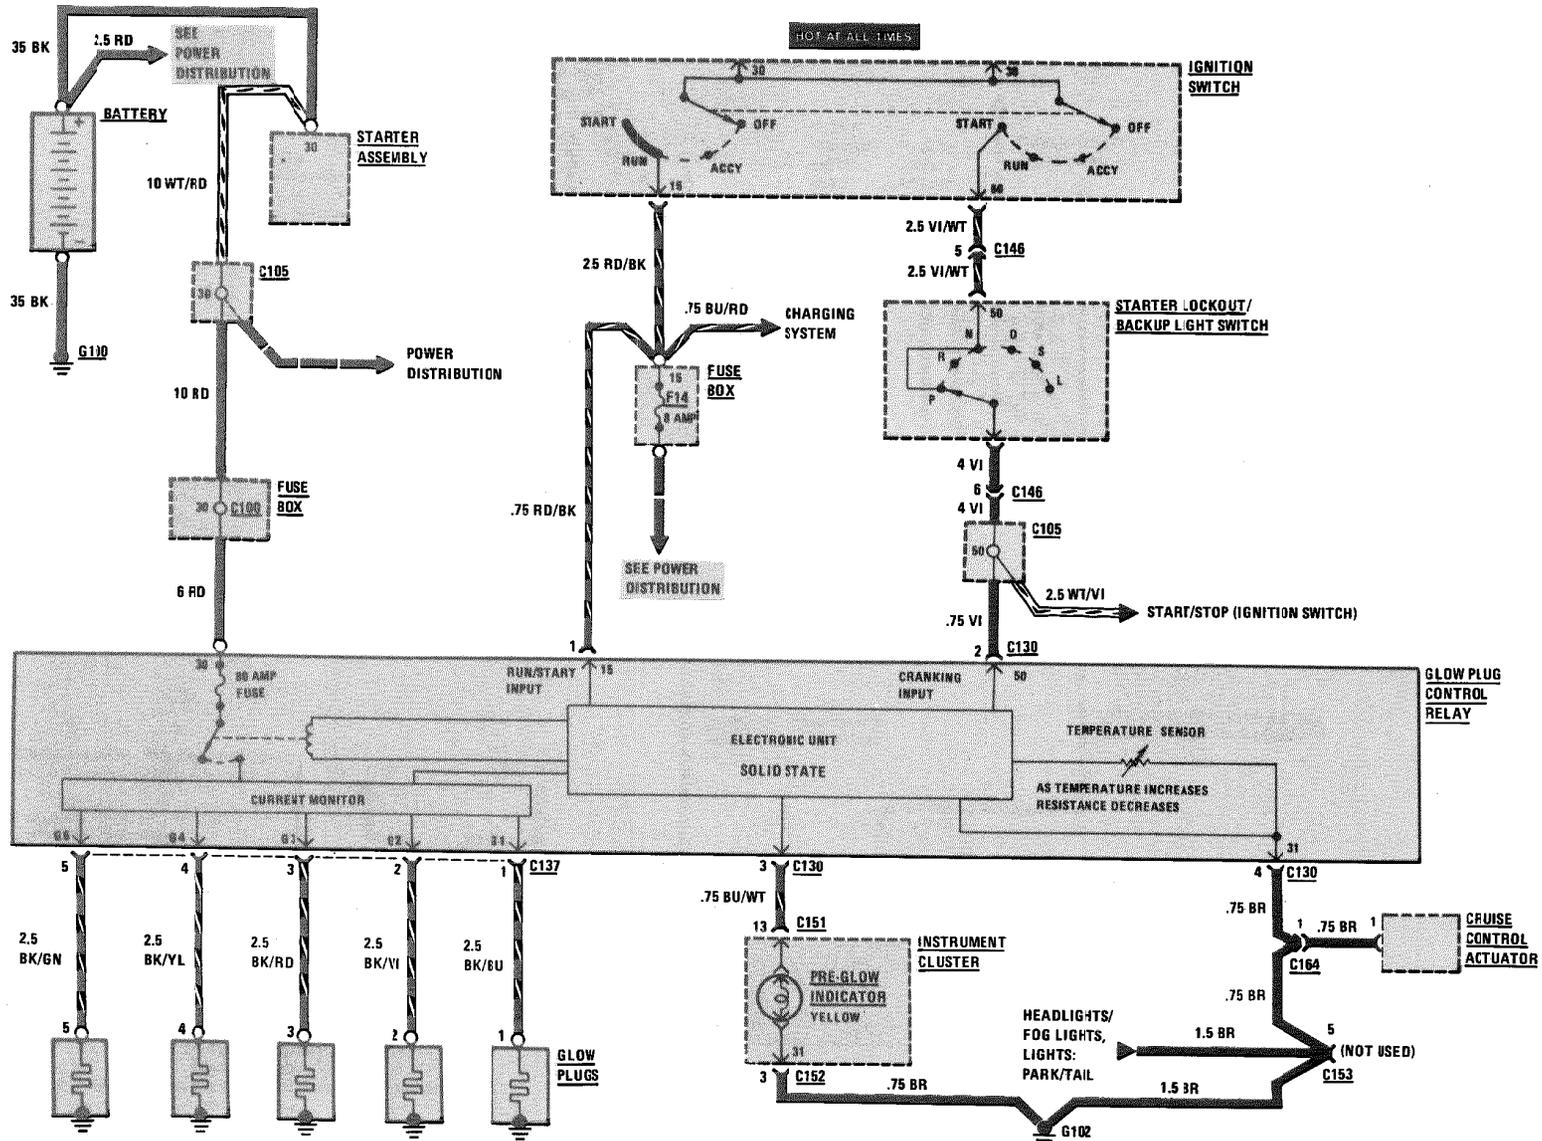


REVISIONS:

START/STOP (IGNITION SWITCH)

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 215)

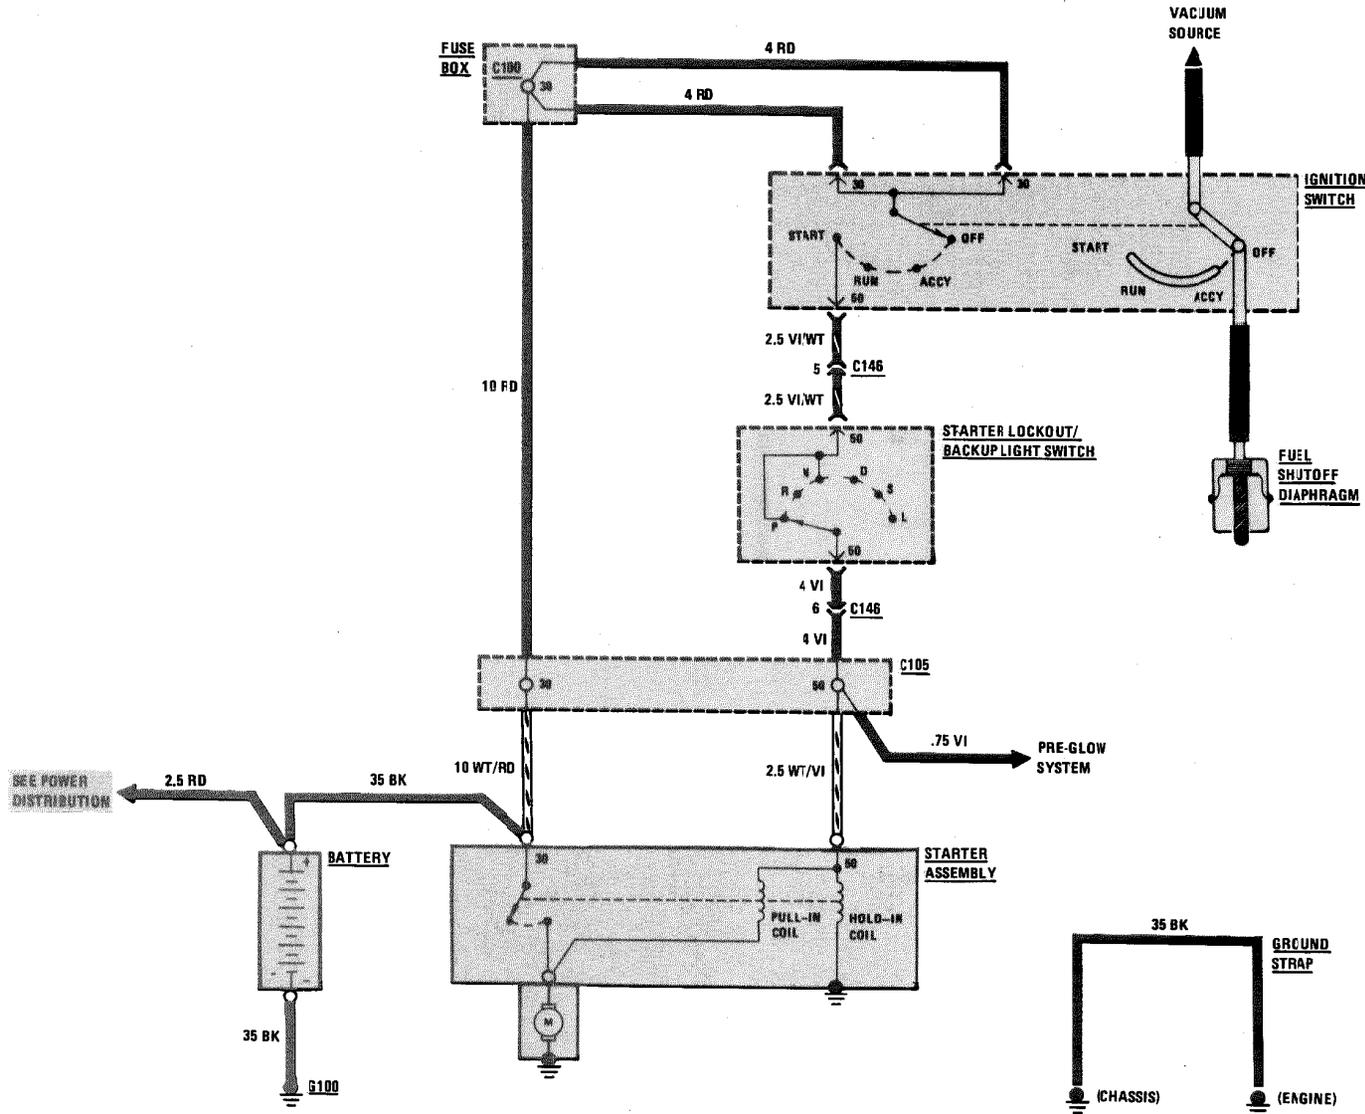

REVISIONS:


--

EXHAUST GAS RECIRCULATION

(For Component Locations See Page 207)

ALL STATES AS OF MY 1985

CALIFORNIA ONLY AS OF MY 1984

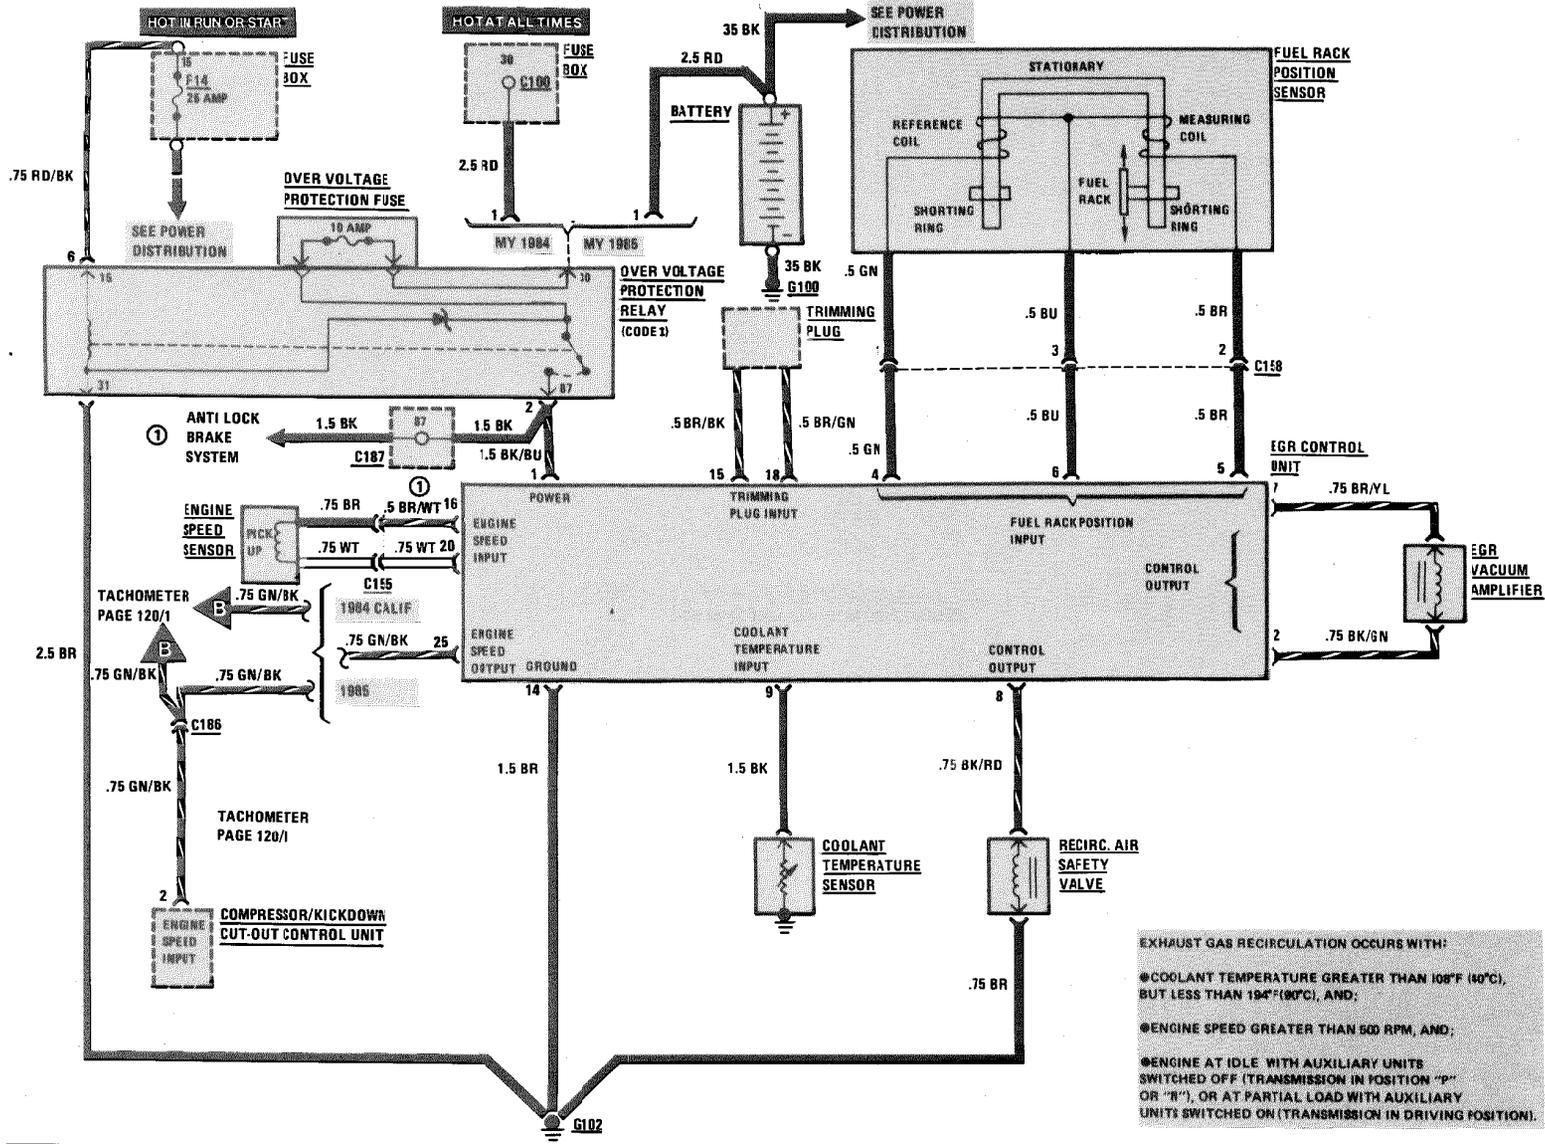

EXHAUST GAS RECIRCULATION OCCURS WITH:

- COOLANT TEMPERATURE GREATER THAN 100°F (40°C), BUT LESS THAN 194°F (90°C), AND;
- ENGINE SPEED GREATER THAN 500 RPM, AND;
- ENGINE AT IDLE WITH AUXILIARY UNITS SWITCHED OFF (TRANSMISSION IN POSITION "P" OR "R"), OR AT PARTIAL LOAD WITH AUXILIARY UNITS SWITCHED ON (TRANSMISSION IN DRIVING POSITION).

REVISIONS: ① AS OF MODEL YEAR 1985

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ENGINE OVERLOAD PROTECTION

(For Component Locations See Page 203)

MY 1983/MY 1984

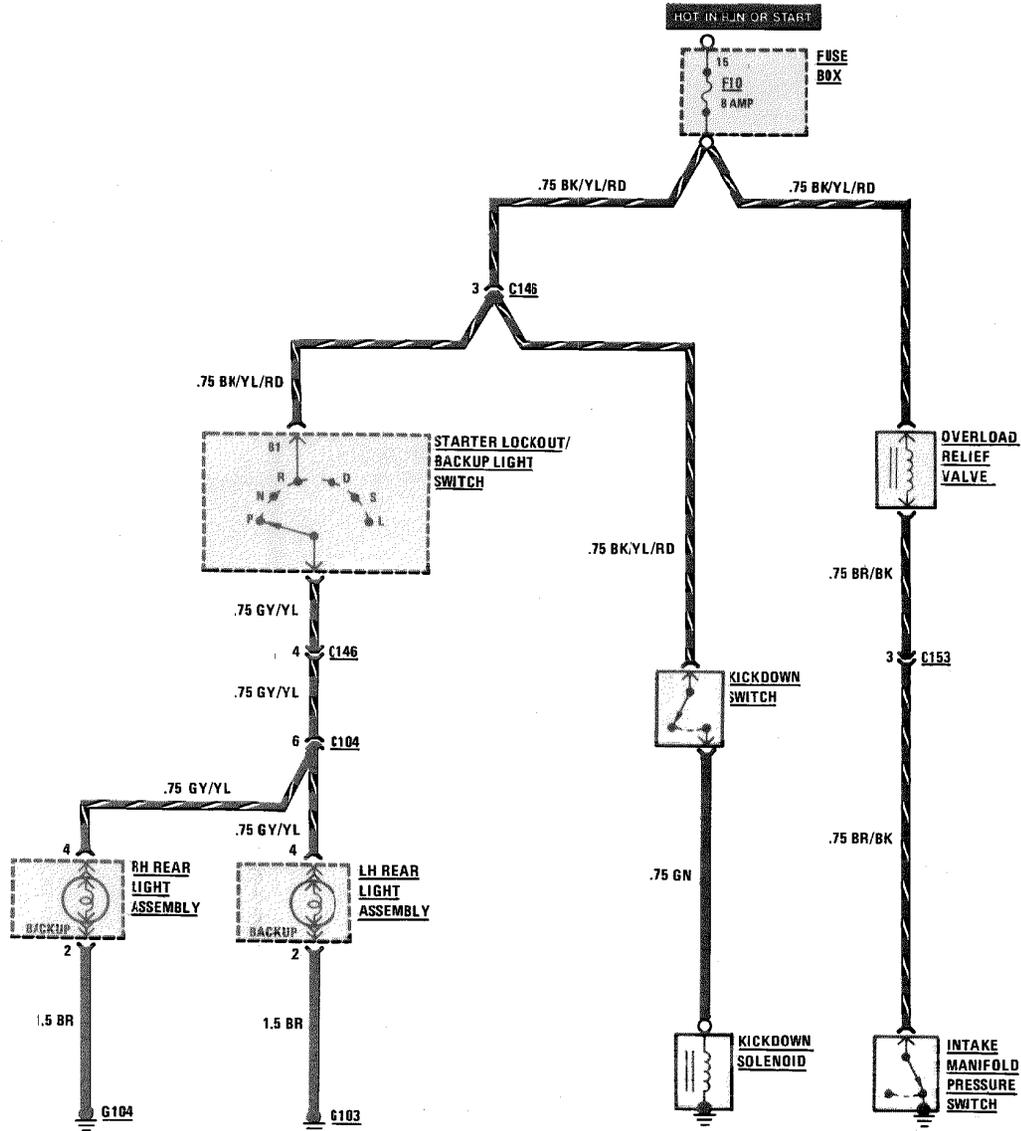

4/86

126.120

109

REVISIONS:


--

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ENGINE OVERLOAD PROTECTION MY 1985

(For Component Locations See Page 203)

109/1

126.120

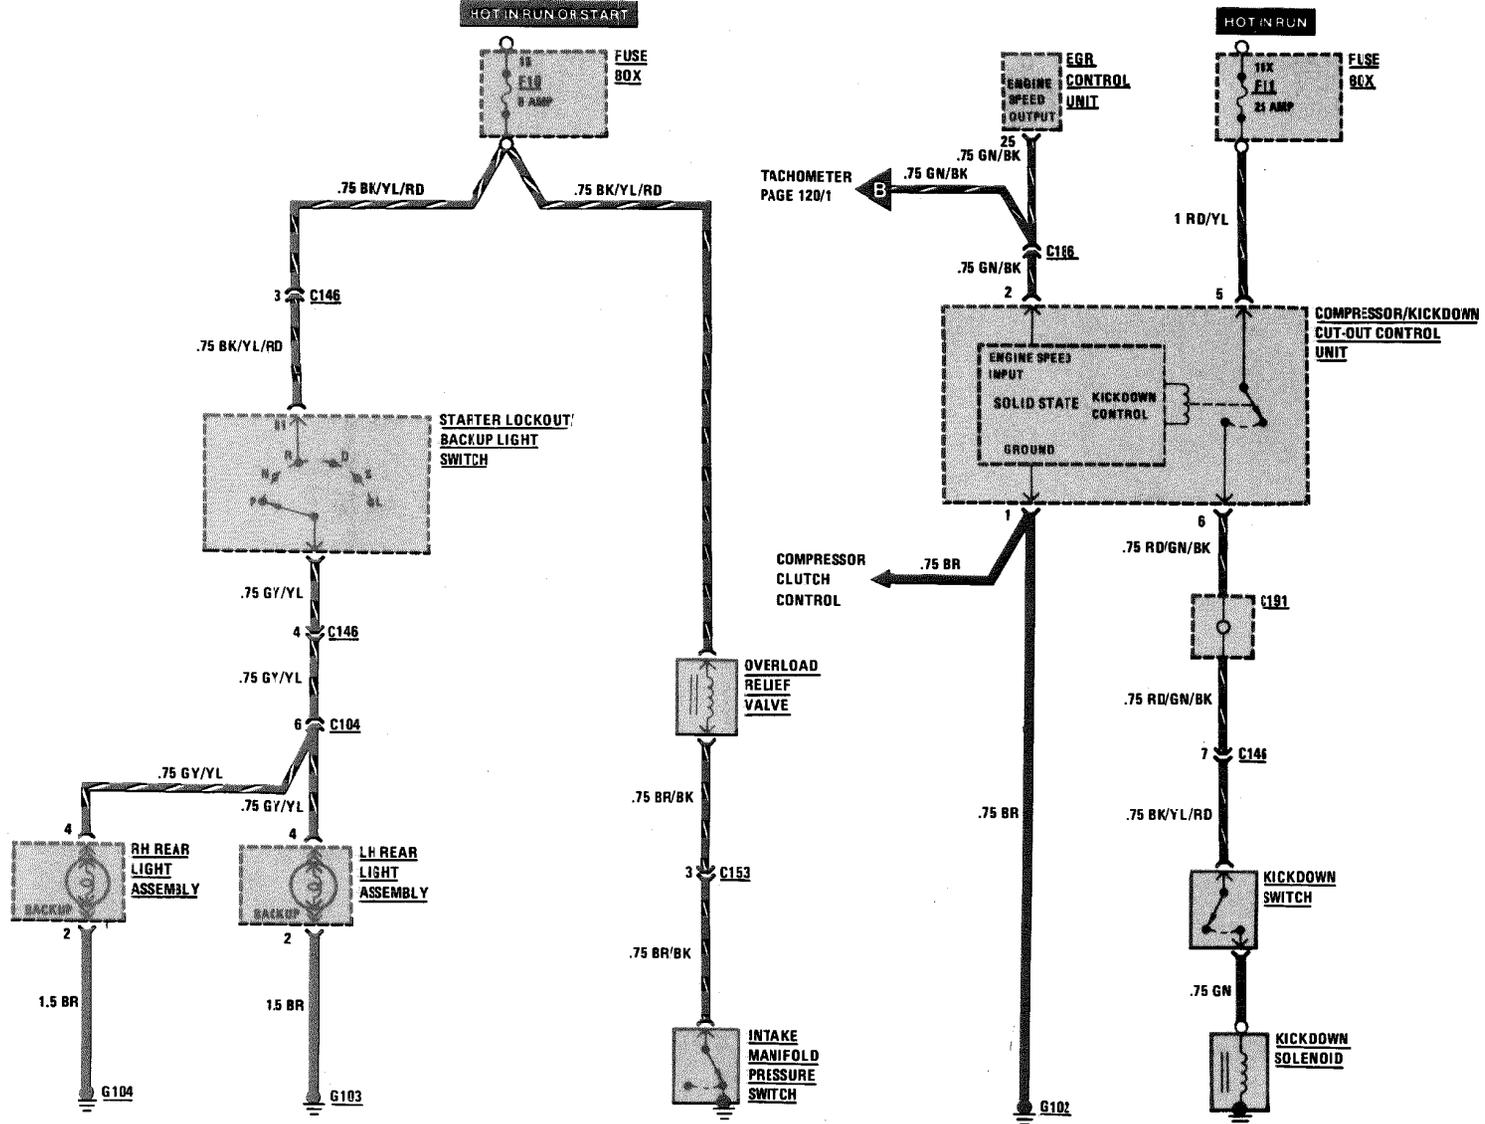

REVISIONS:

4/86

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

HEADLIGHTS/FOG LIGHTS

(For Component Locations See Page 209)

MY 1983 / MY 1984 / MY 1985

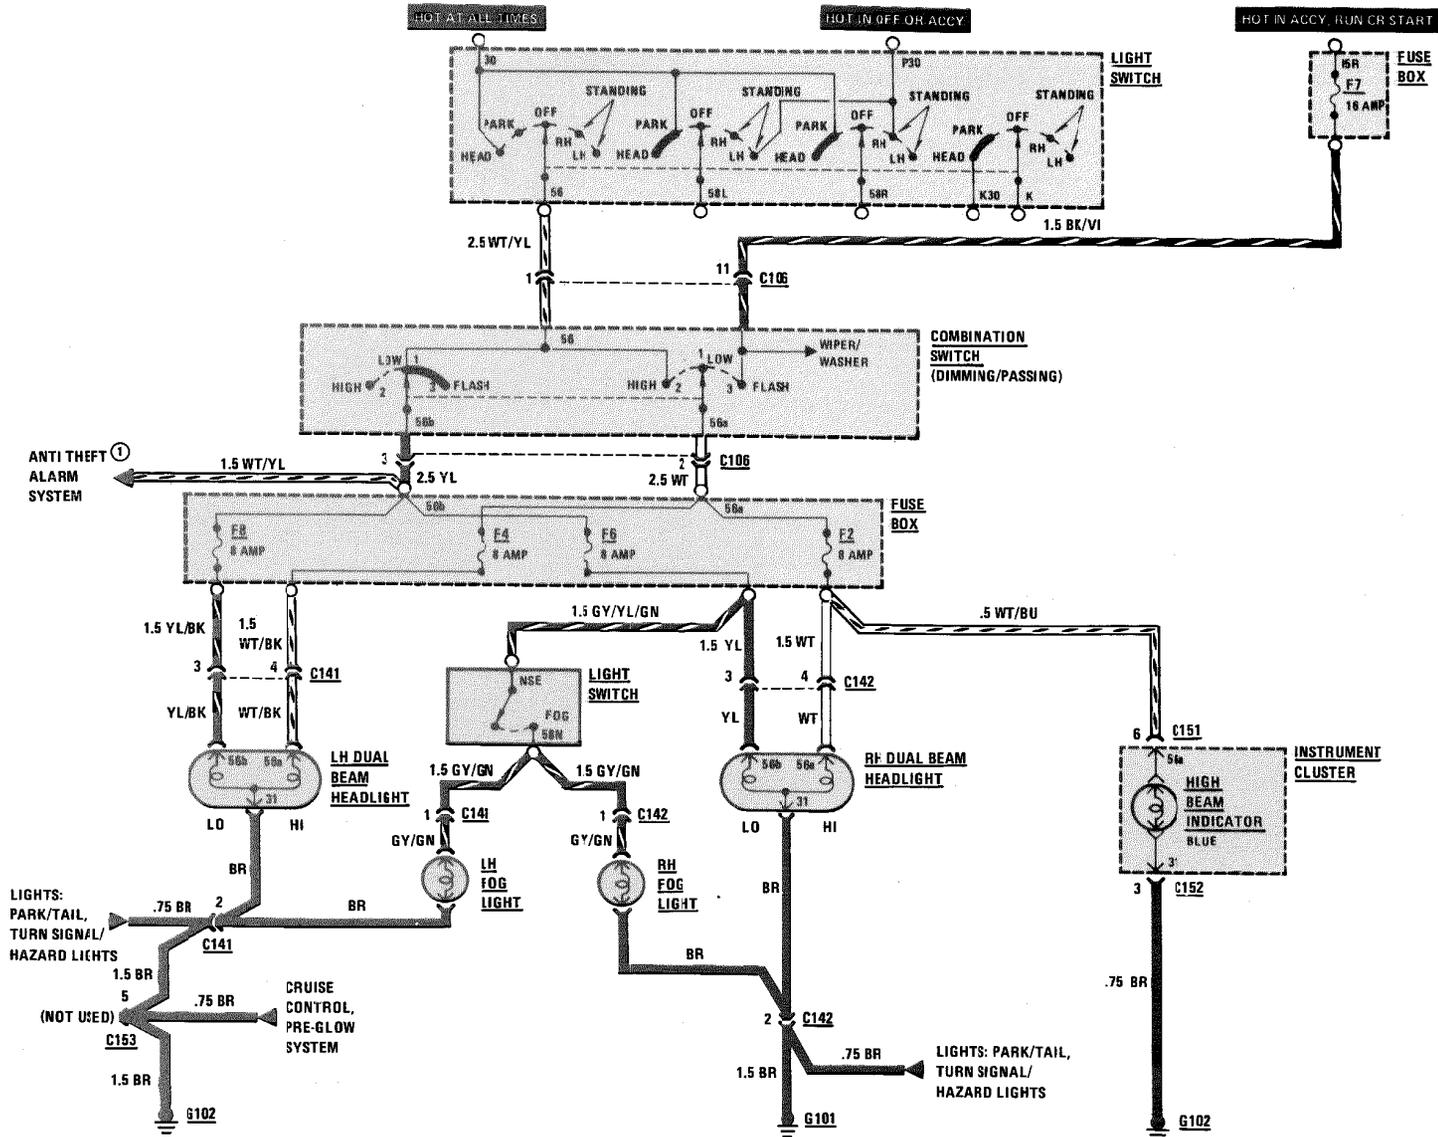


REVISIONS: ① AS OF MODEL YEAR 1985

STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 215)

MY 1983/MY 1984

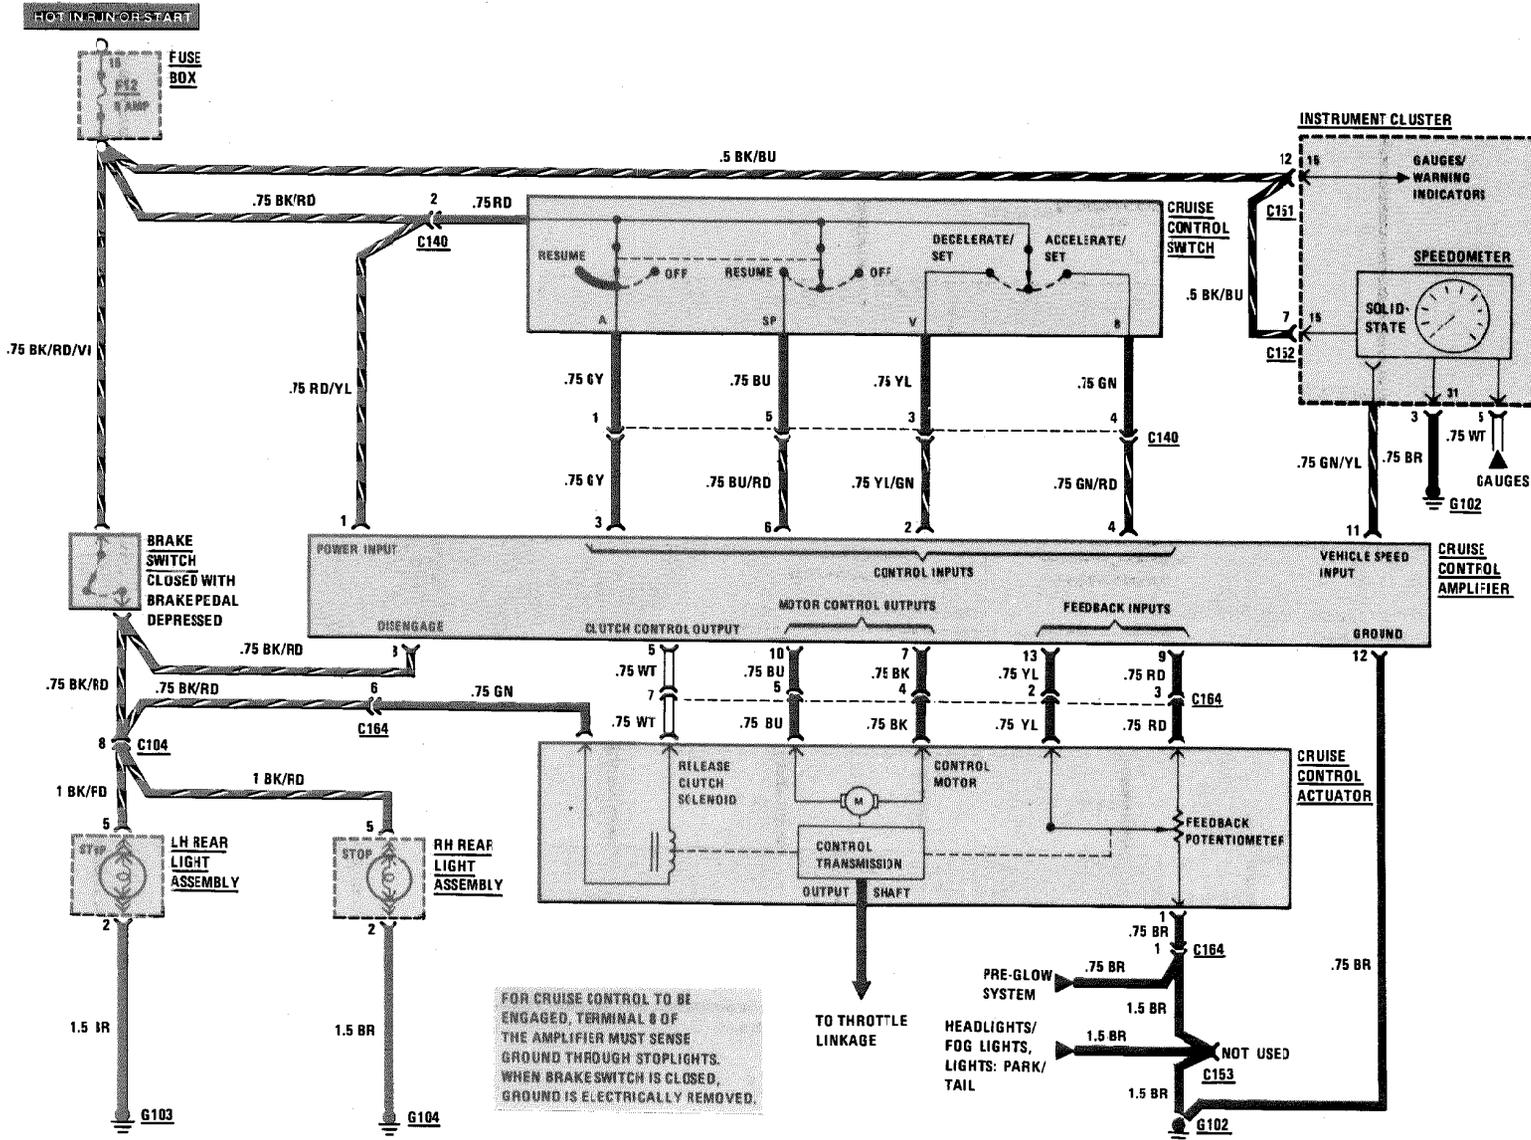

FOR CRUISE CONTROL TO BE ENGAGED, TERMINAL 8 OF THE AMPLIFIER MUST SENSE GROUND THROUGH STOPLIGHTS. WHEN BRAKE SWITCH IS CLOSED, GROUND IS ELECTRICALLY REMOVED.

REVISIONS:

--	--	--

126.120

111


STOPLIGHTS/CRUISE CONTROL

MY 1985

(For Component Locations See Page 215)

111/1

126.120

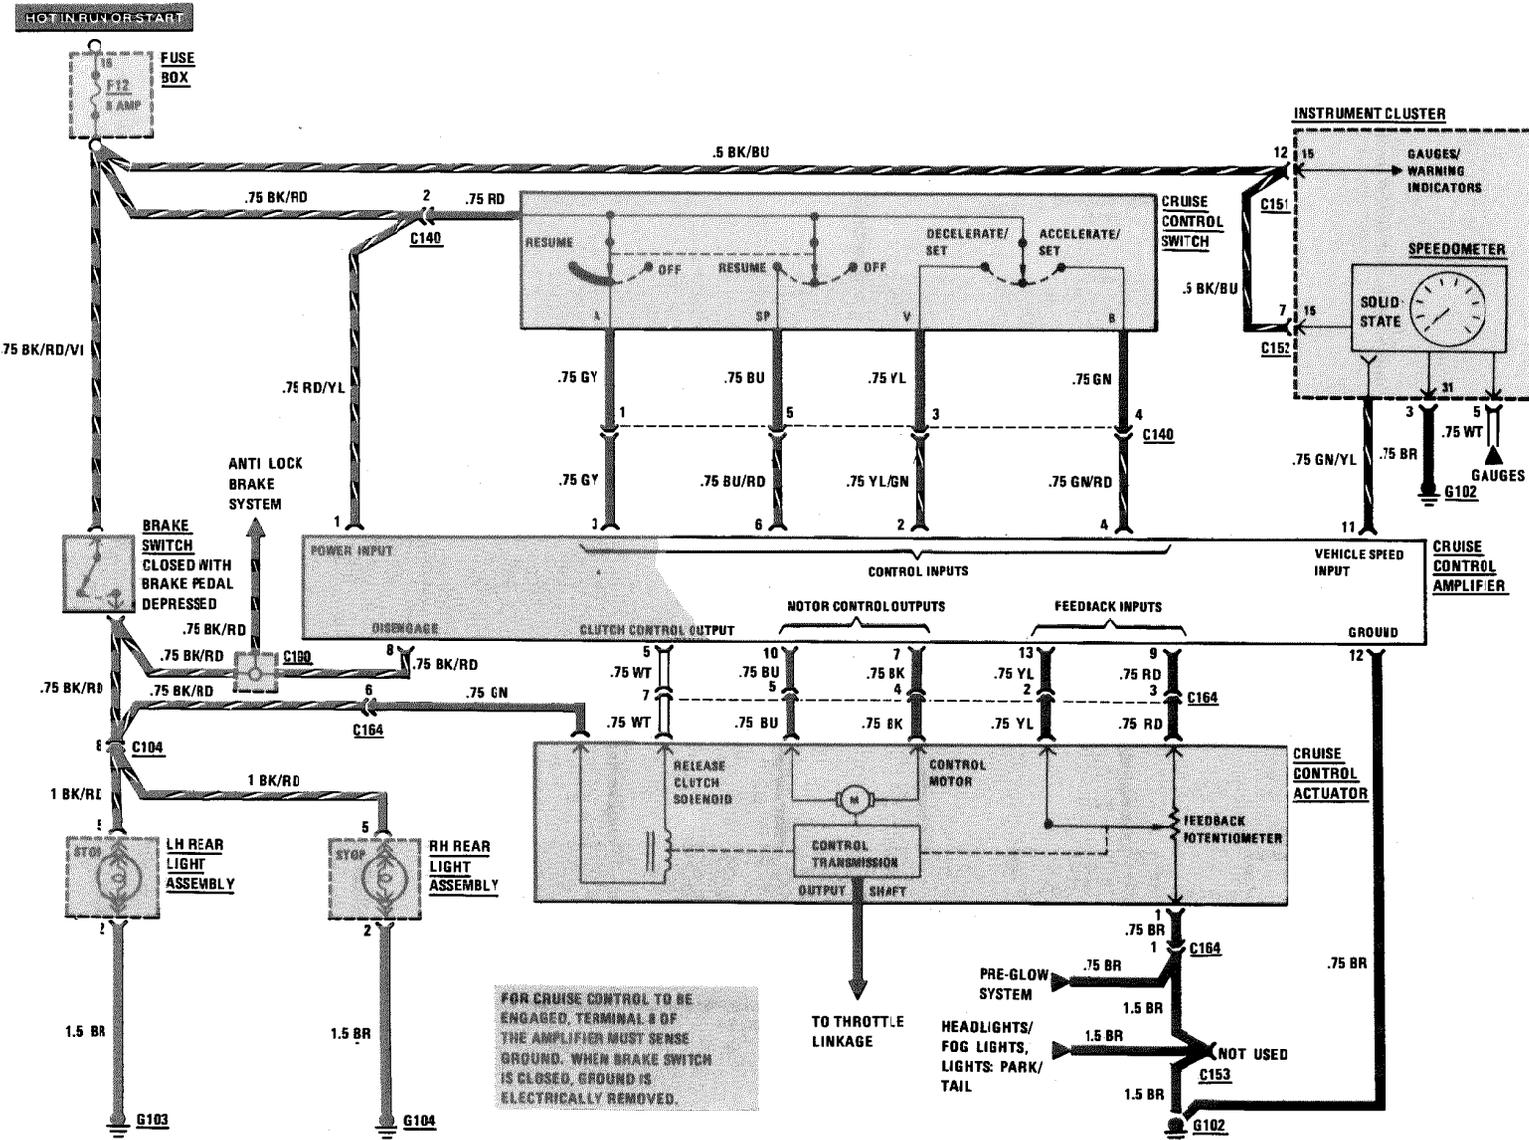

REVISIONS:

4/86


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

LIGHTS: PARK/TAIL

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 210)

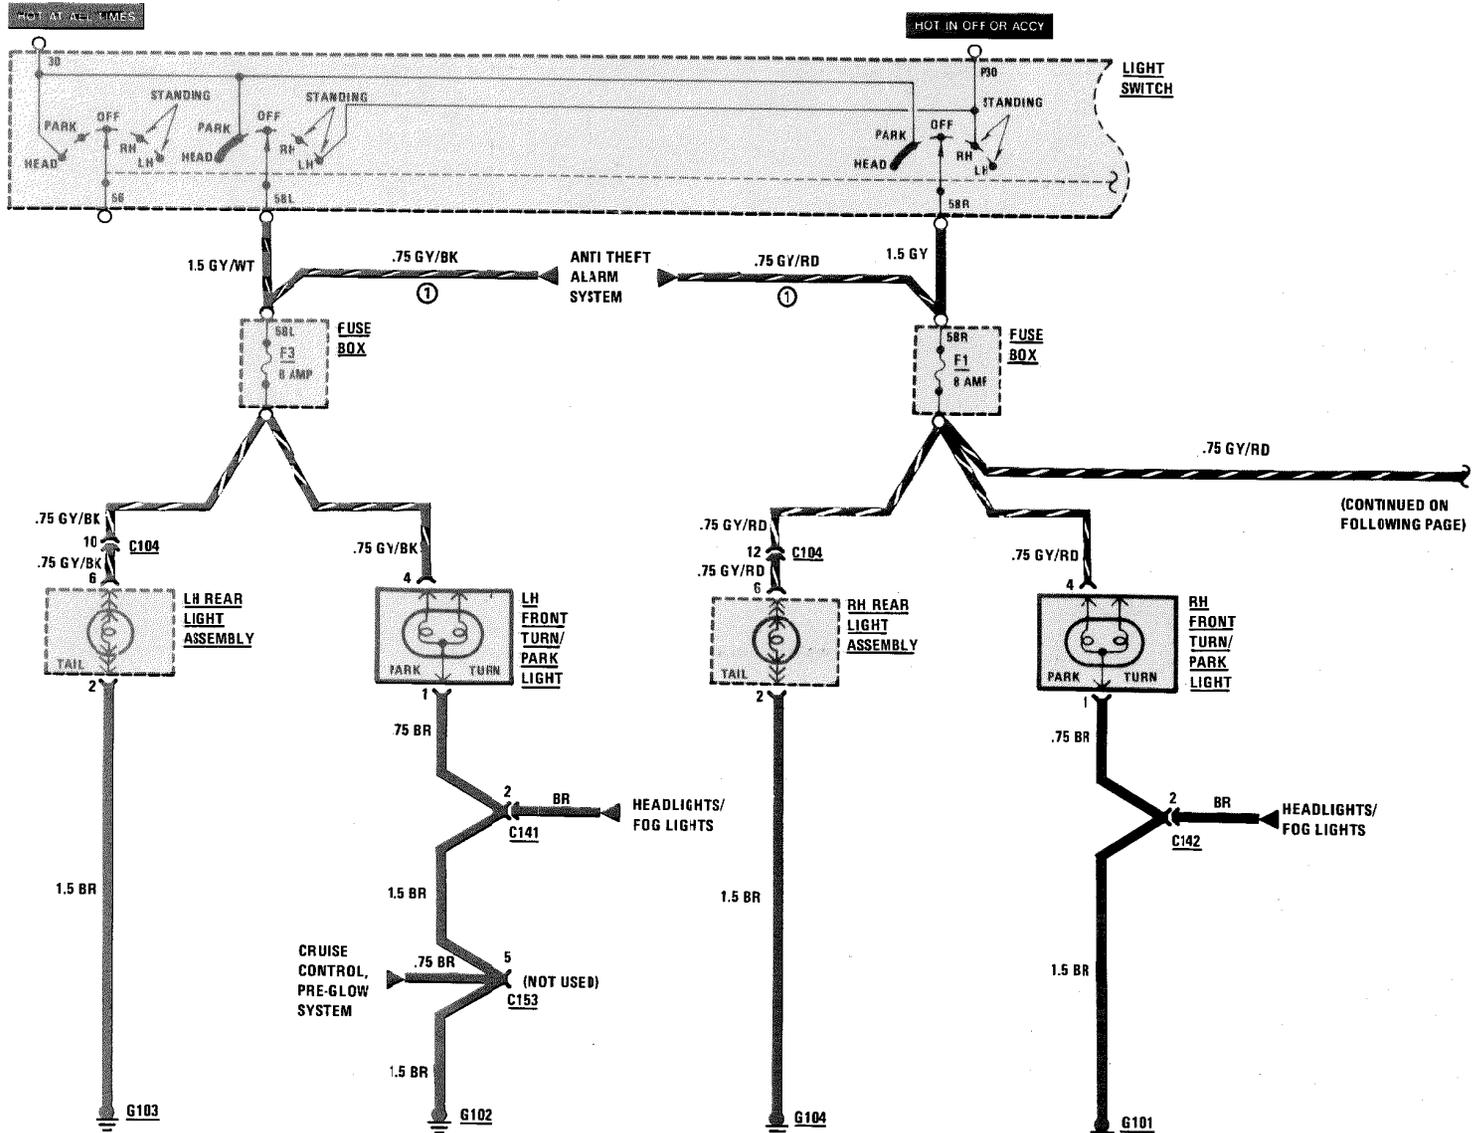


REVISIONS: ① AS OF MODEL YEAR 1985

LIGHTS: MARKER/LICENSE

(For Component Locations See Page 210)

MY 1983/MY 1984/MY 1985

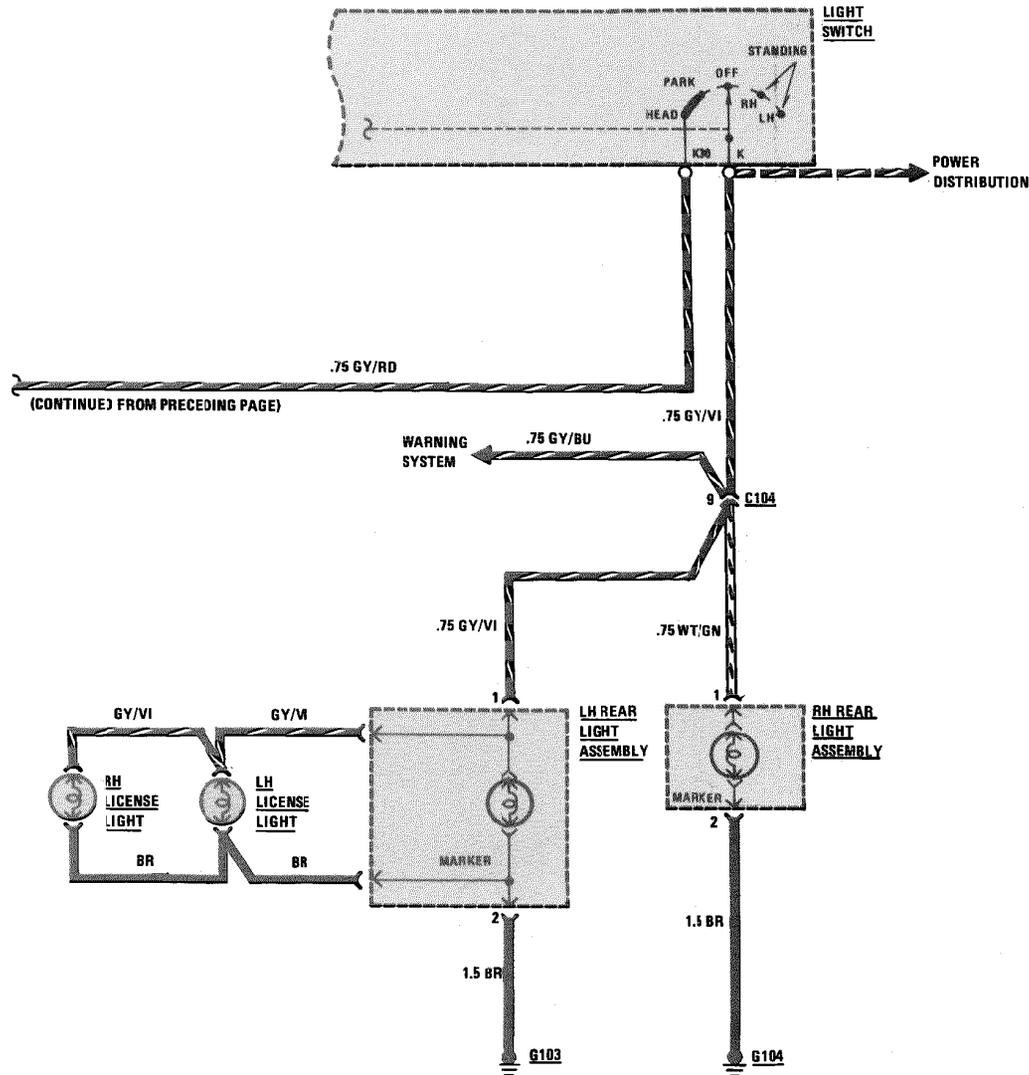

REVISIONS:

--

1/87


126.120

113

TRUNK LIGHT

(For Component Locations See Page 216)

MY 1983/MY 1984/MY 1985

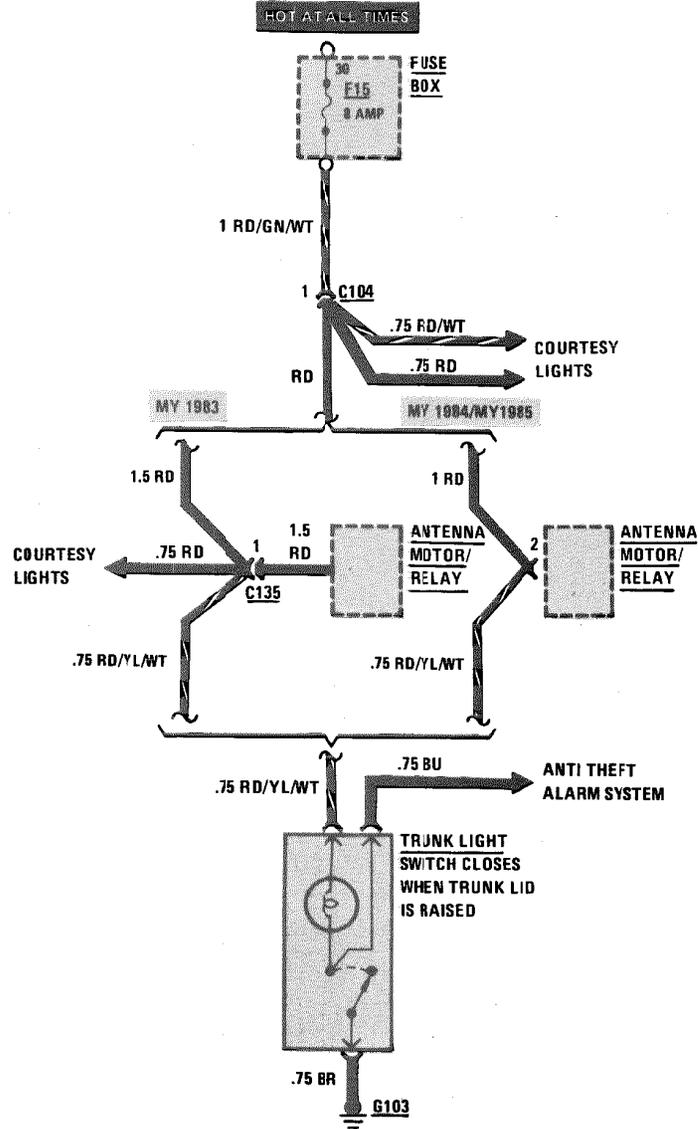

REVISIONS:

--

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

MY 1984/1985

(For Component Locations See Page 210)

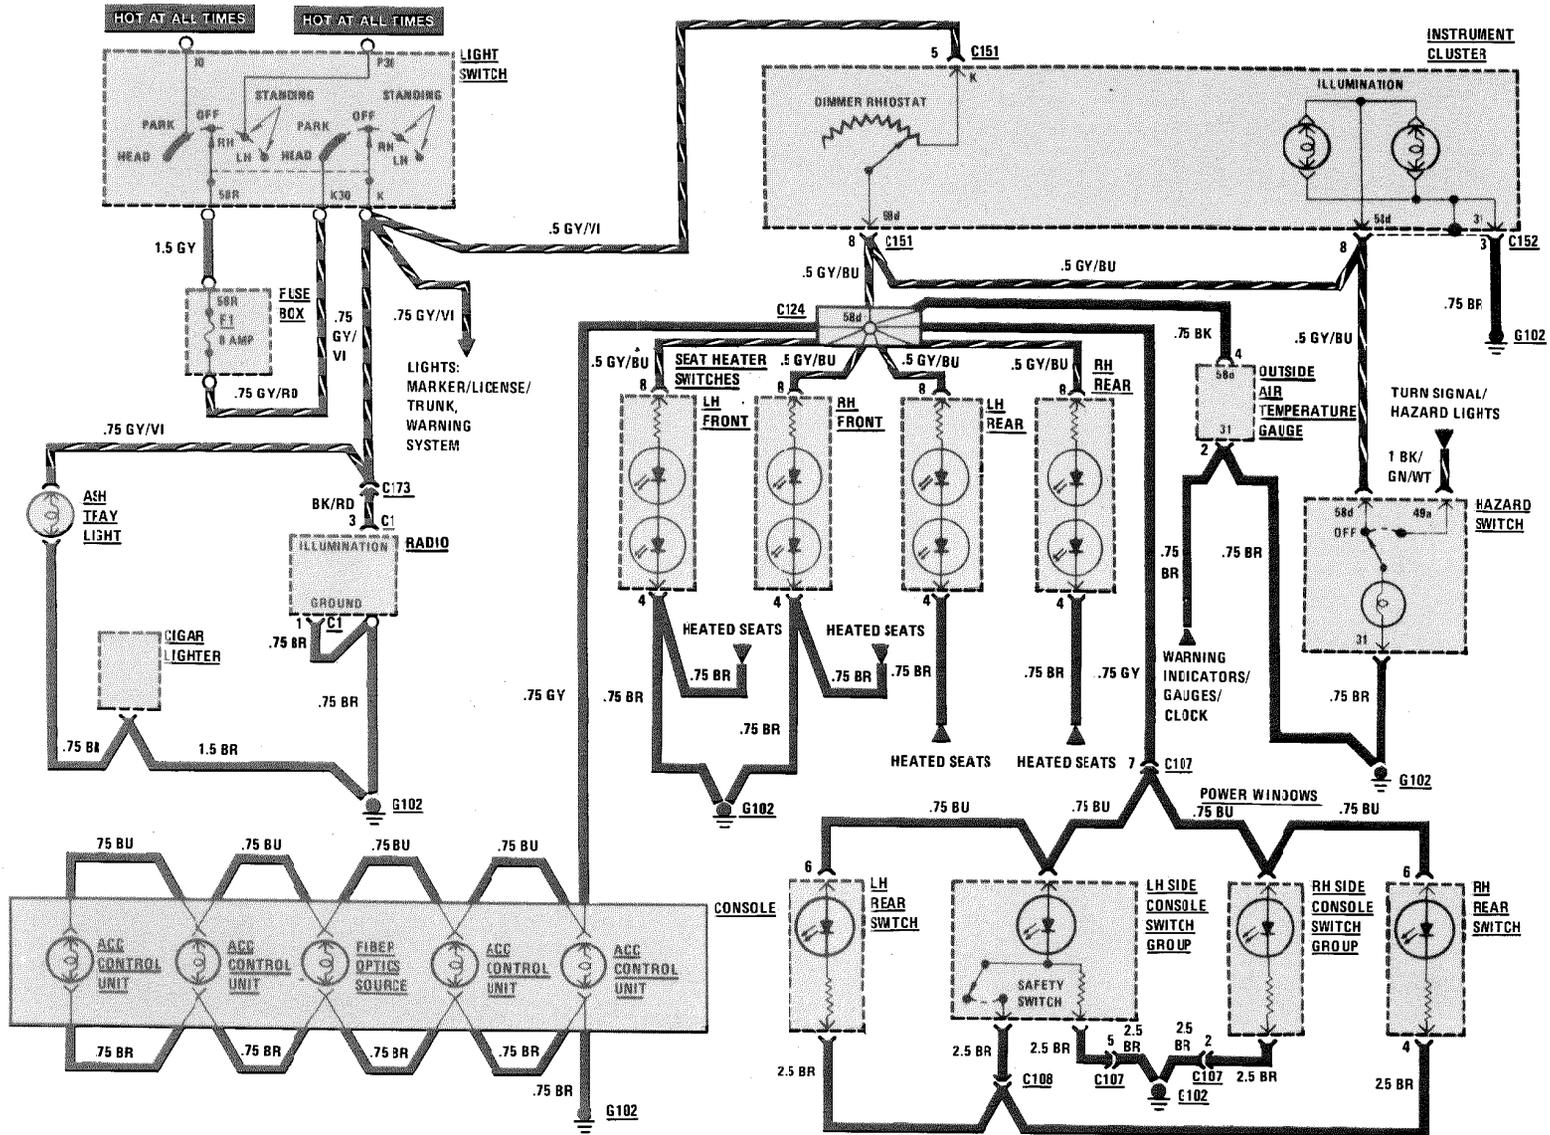

REVISIONS:

1/87

126.120

114/1

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

1/87


GLOVE BOX LIGHT

(For Component Locations See Page 208)

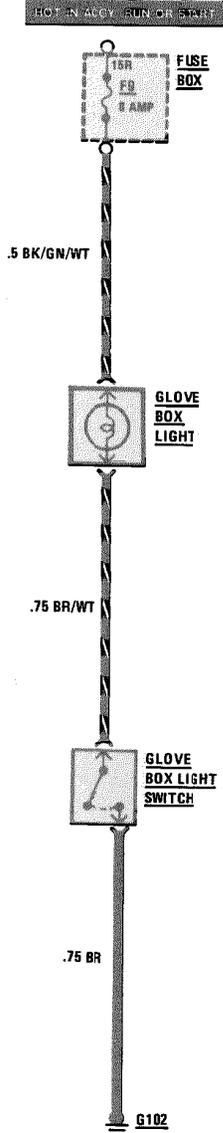


REAR CIGAR LIGHTERS

(For Component Locations See Page 208)

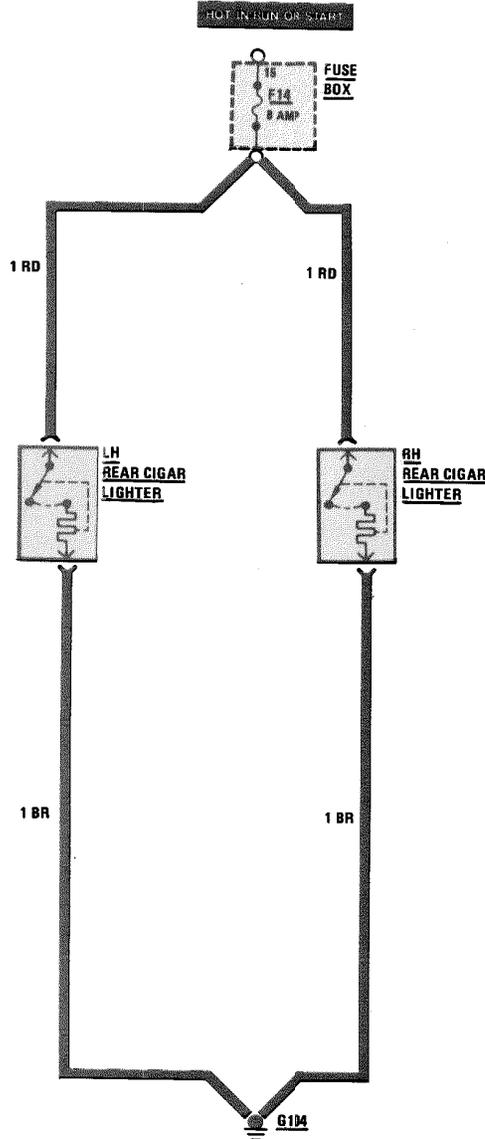

HORNS

(For Component Locations See Page 208)

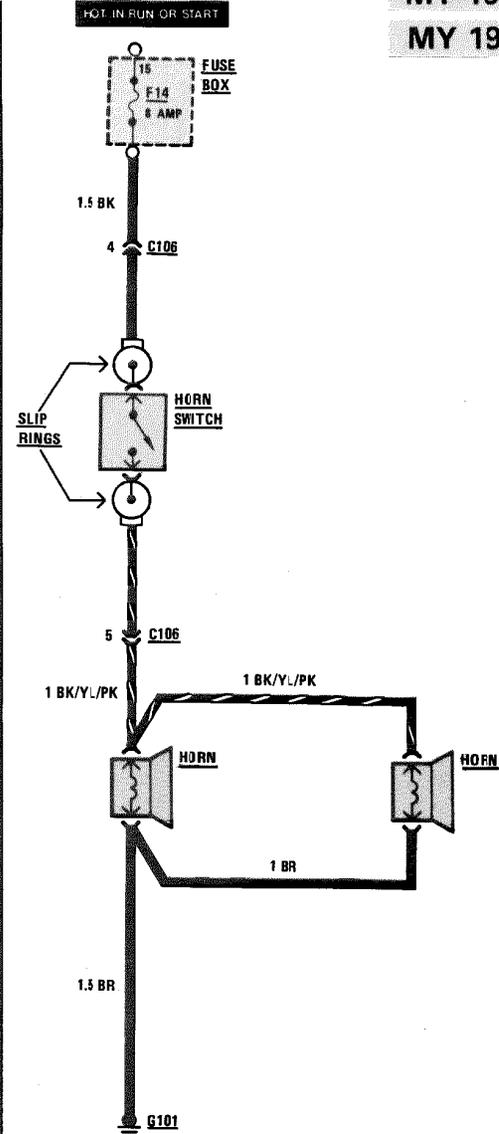

MY 1983/
 MY 1984/
 MY 1985

126.120

115

REVISIONS:


--

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1983

380 SEL

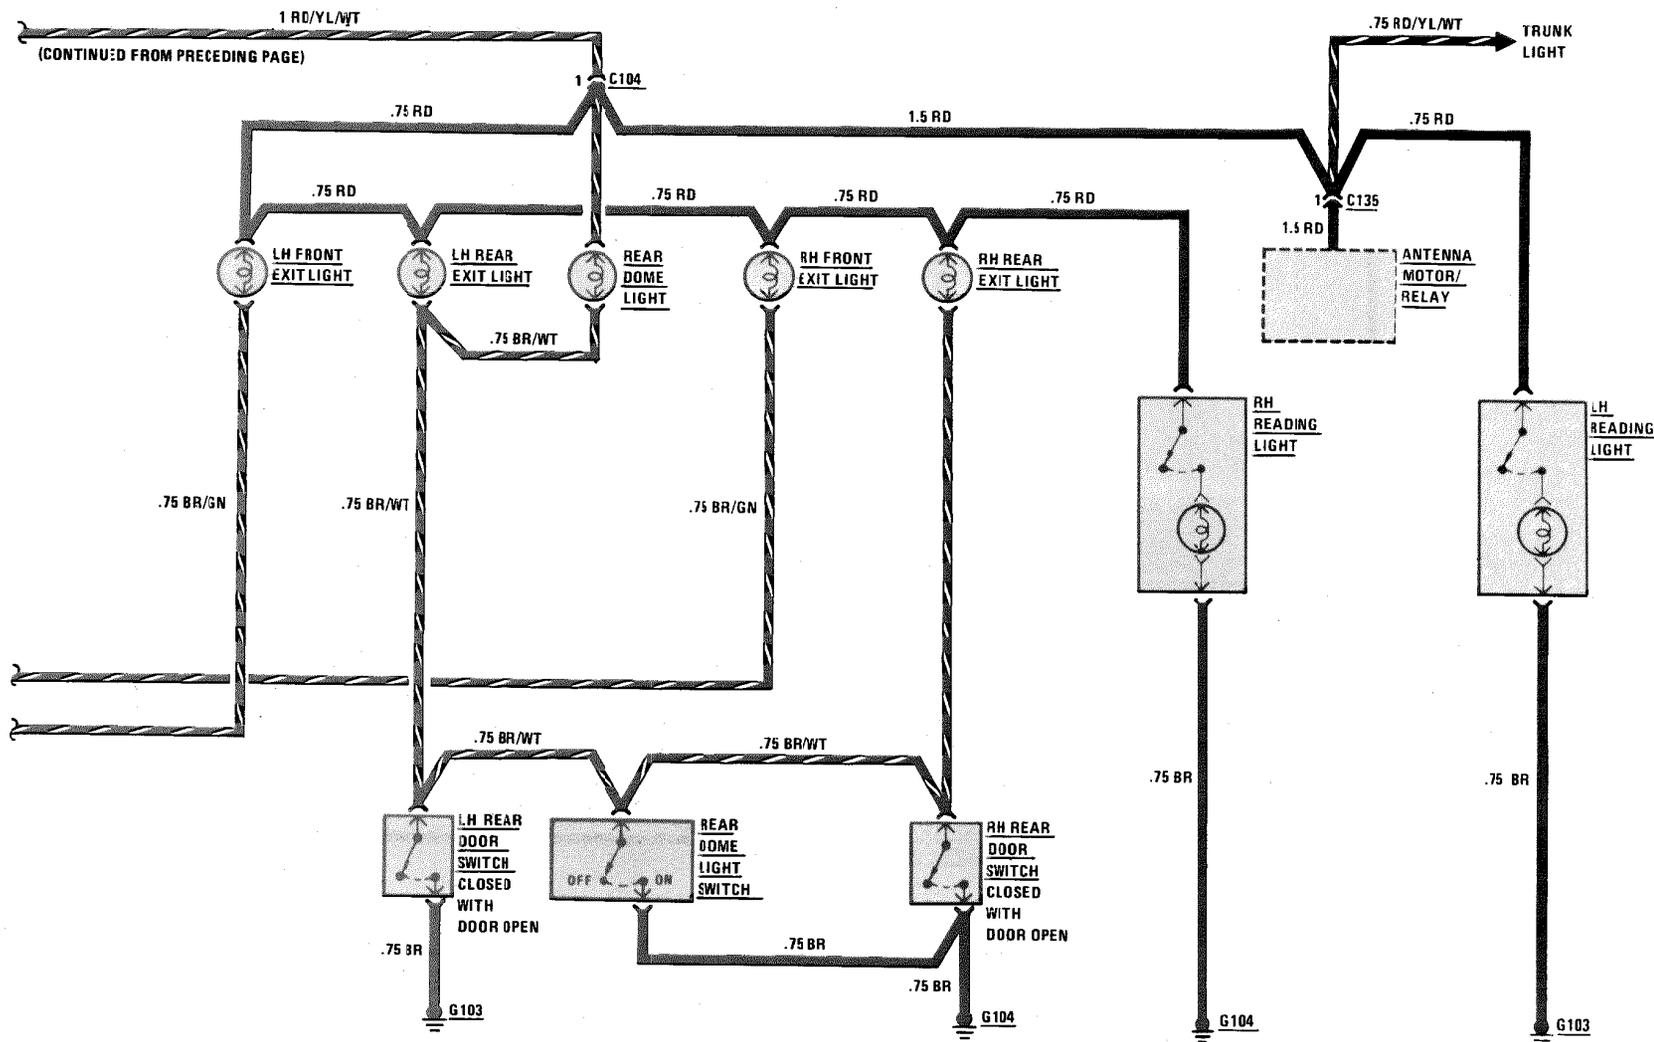

126.120

116/1


REVISIONS:

--	--	--

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1984/MY 1985

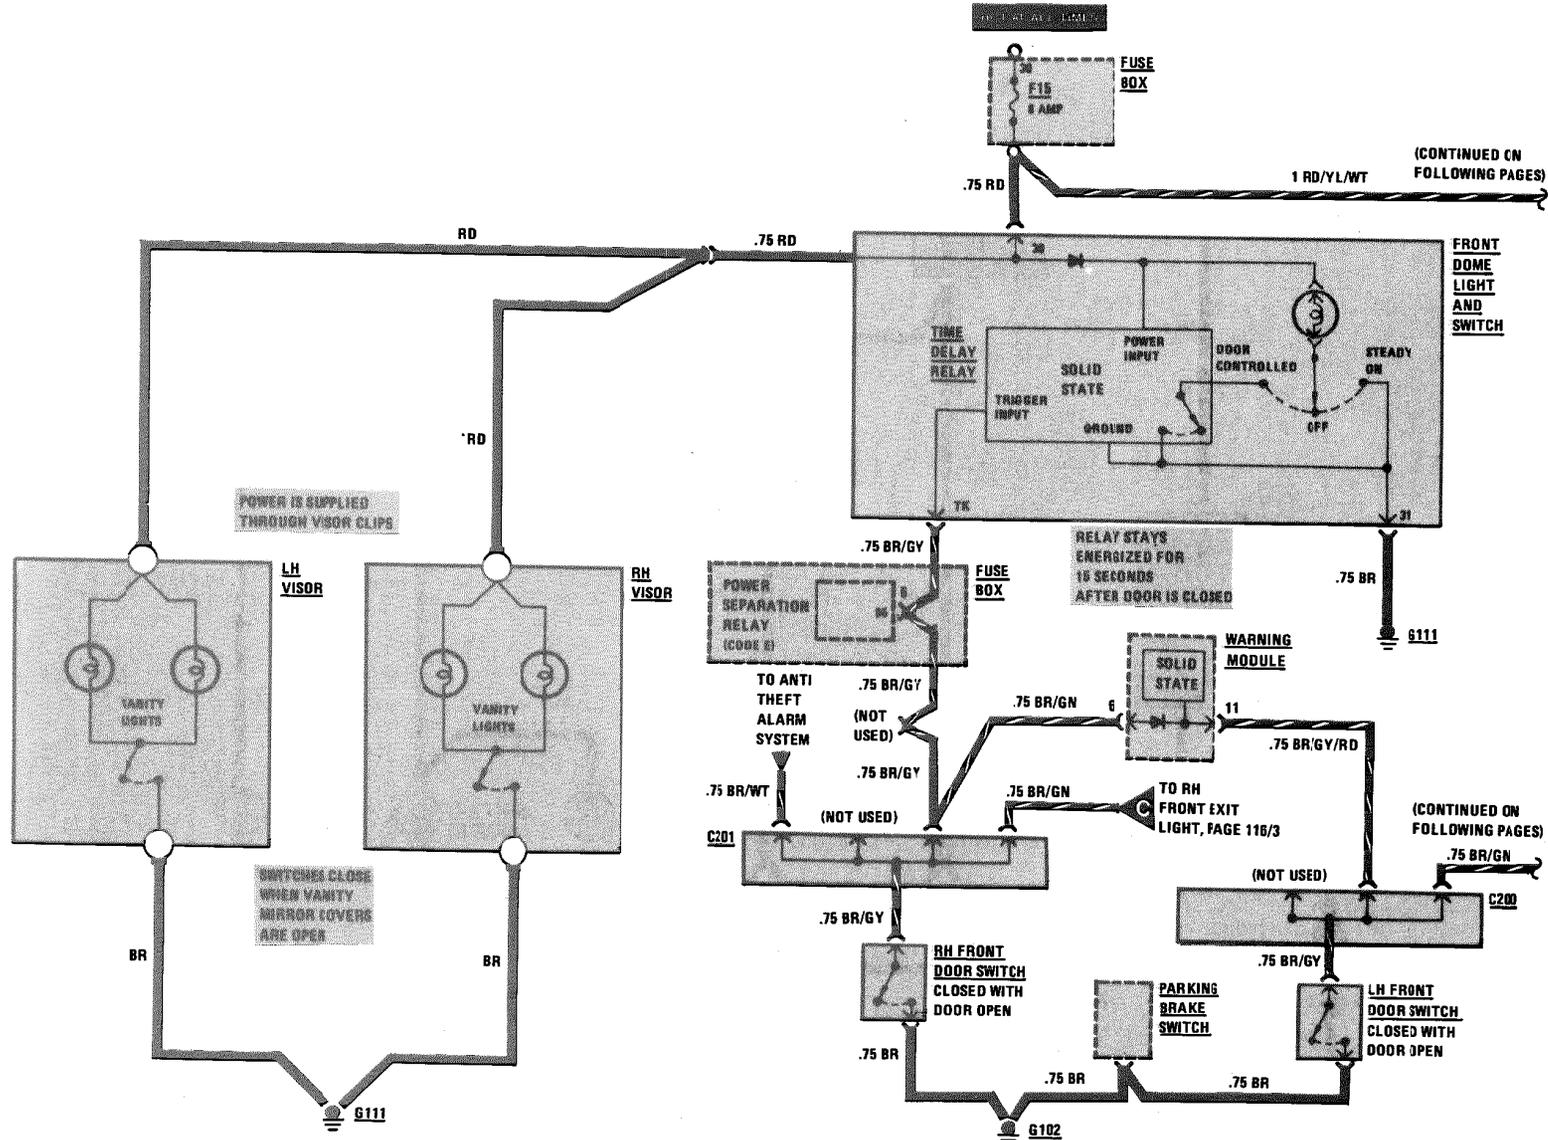


126.120

REVISIONS:

COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1984

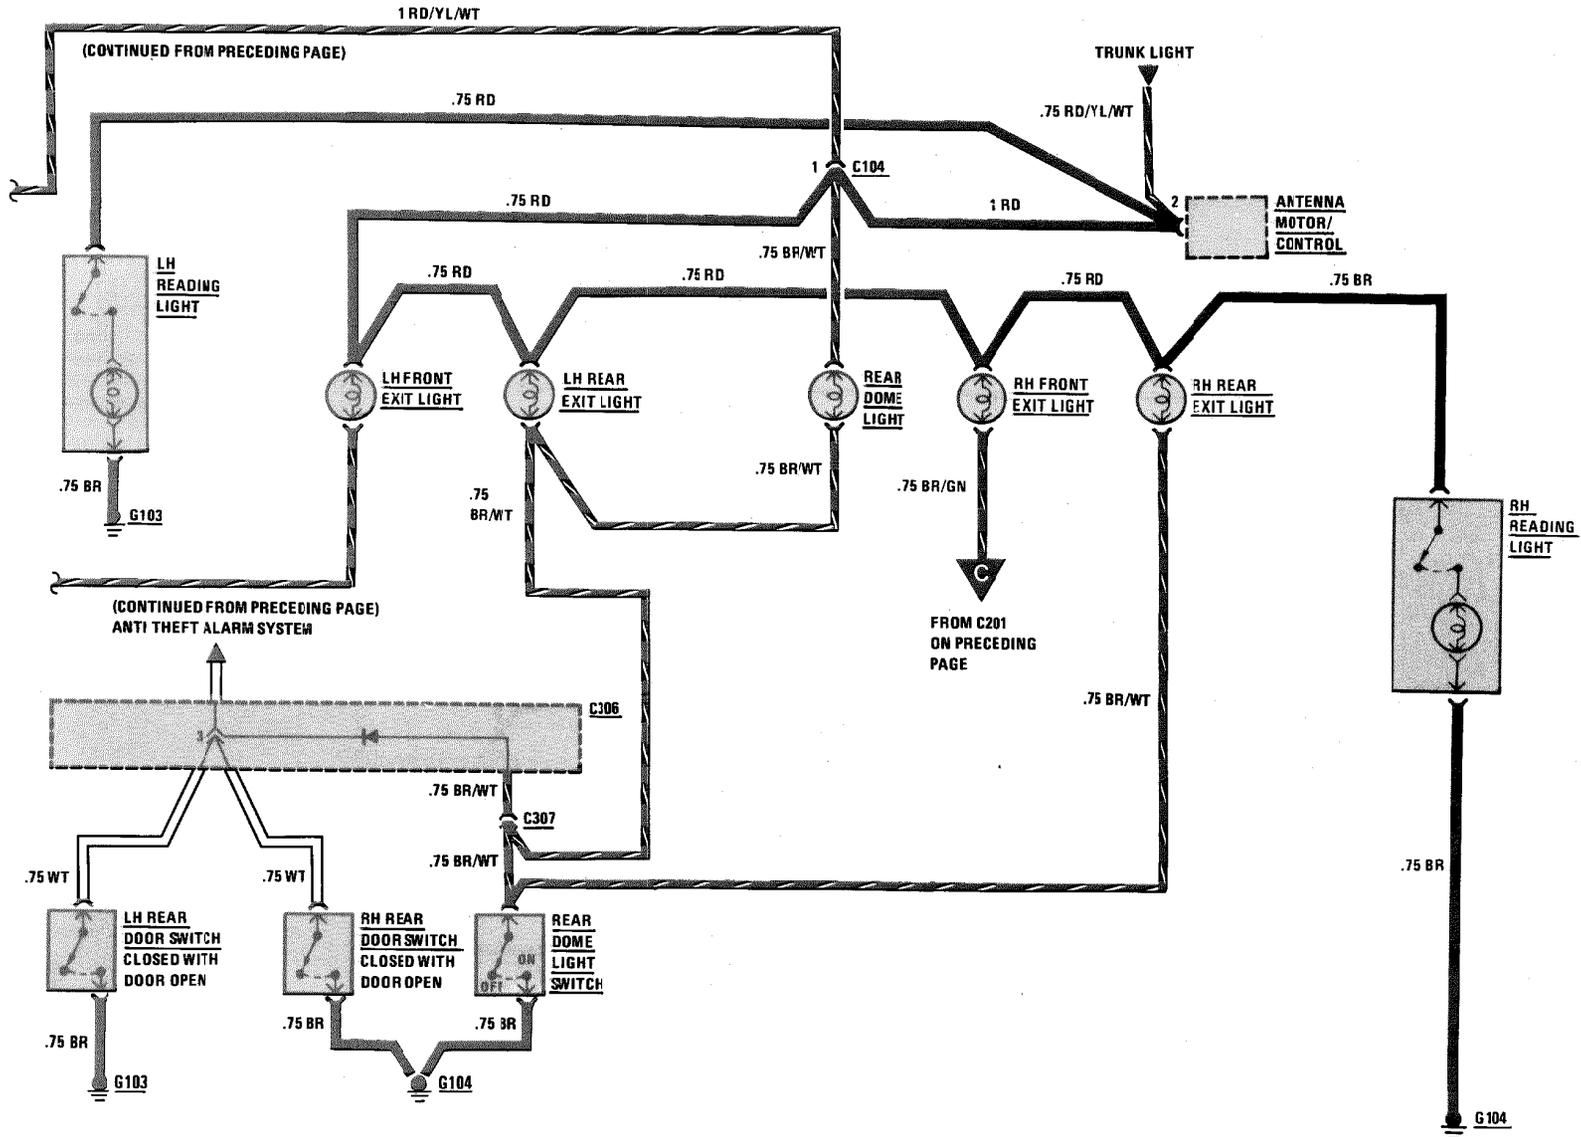

REVISIONS:


COURTESY LIGHTS

(For Component Locations See Page 205)

MY 1985

116/4

126, 120

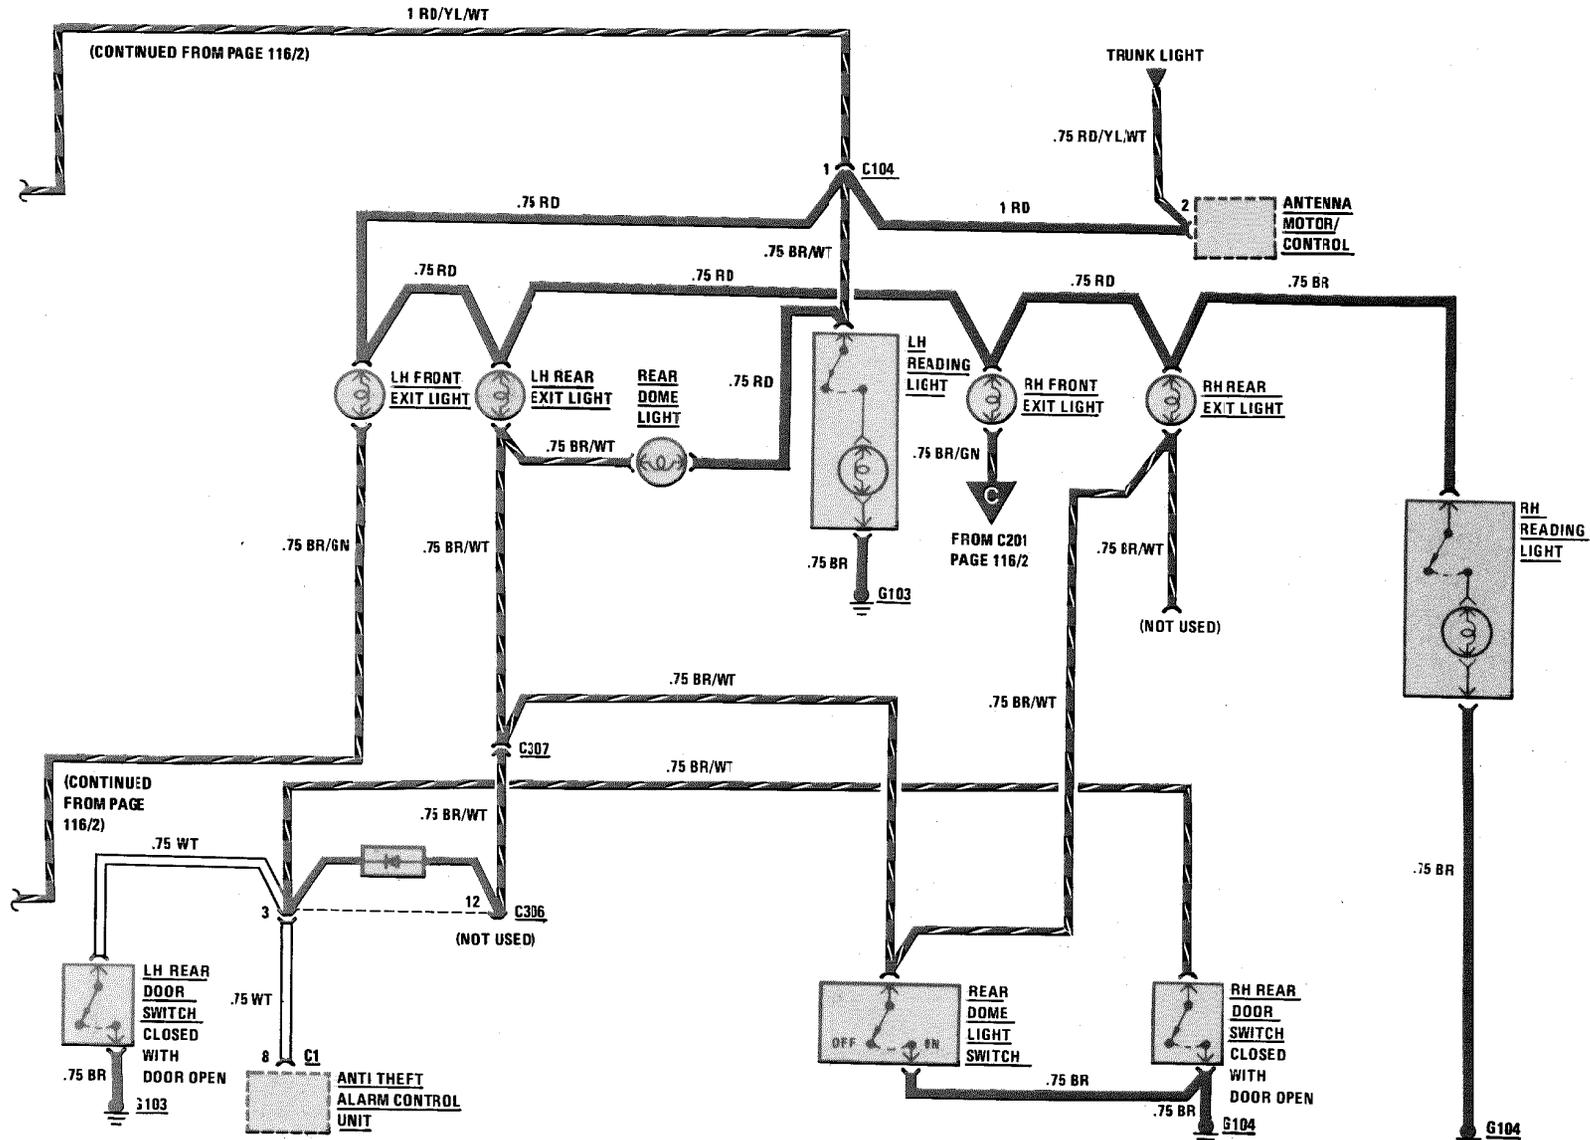

REVISIONS:

4/06

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

TURN SIGNAL/HAZARD LIGHTS

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 217)

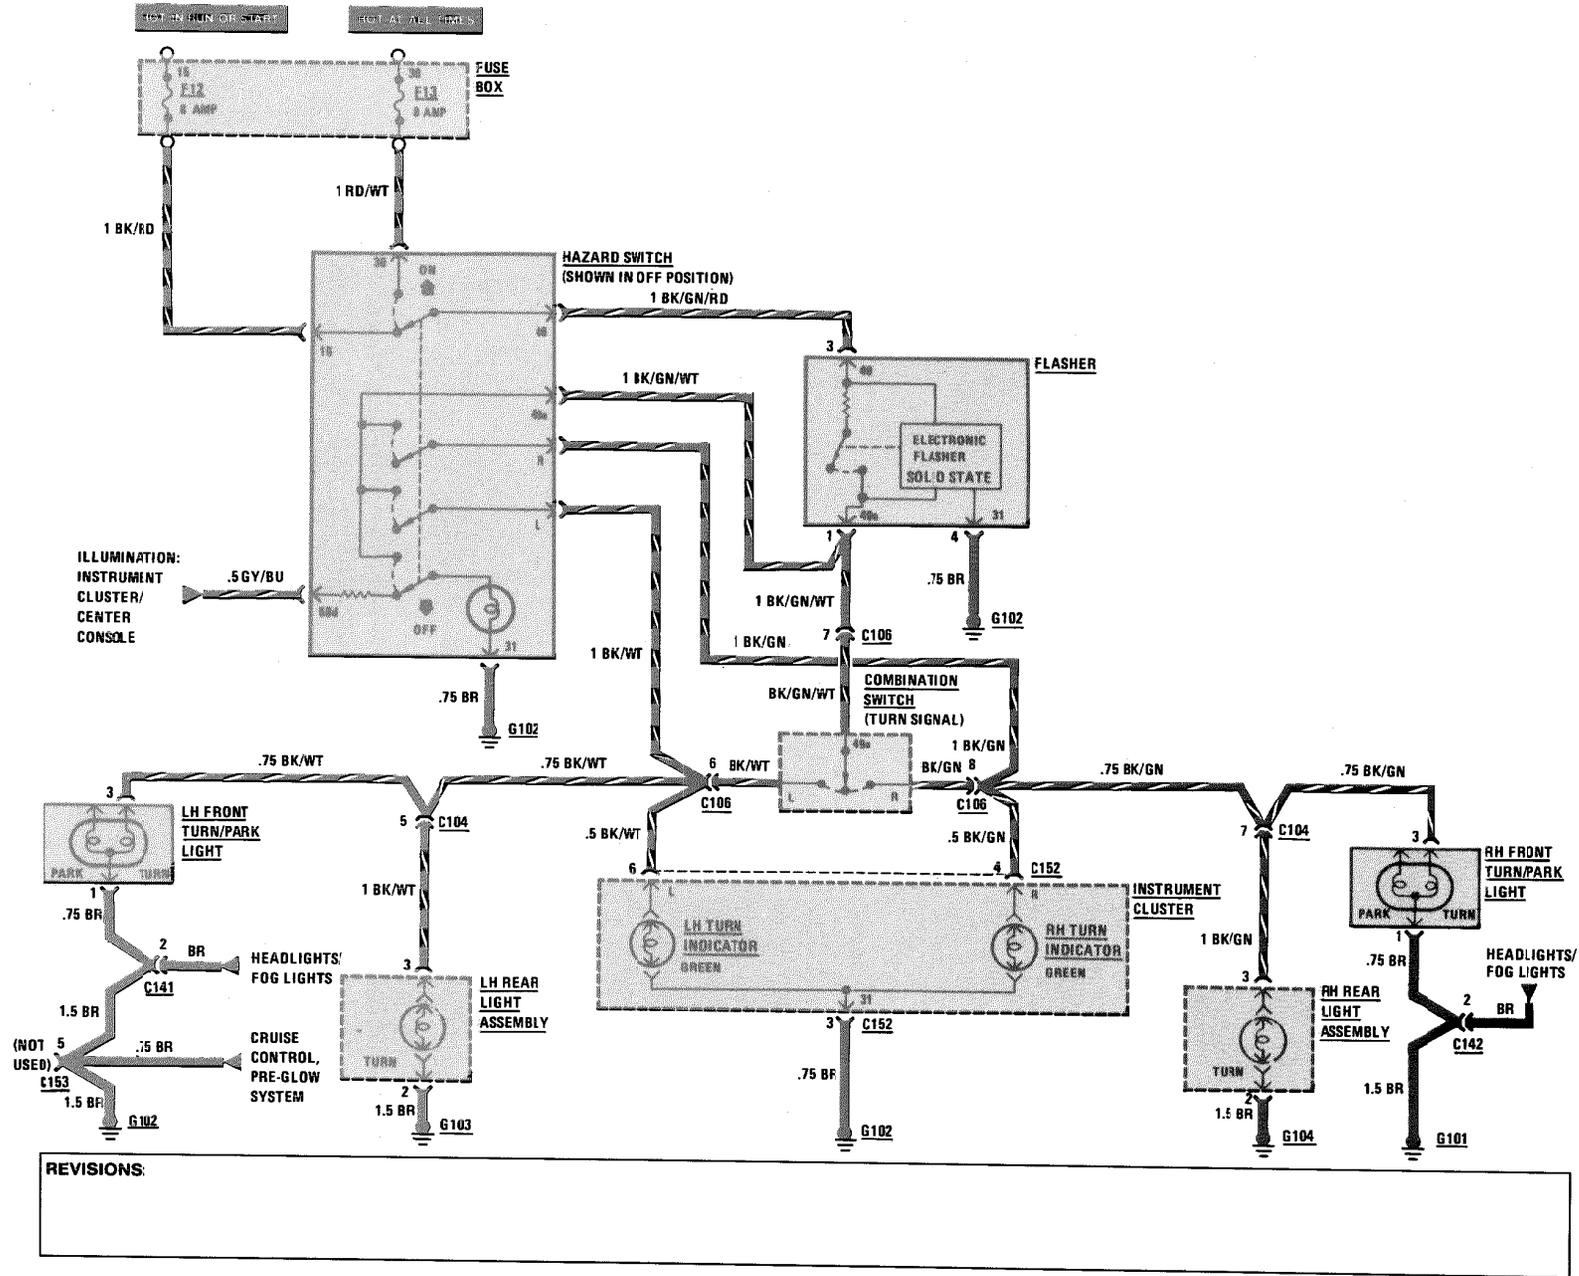

118

126.120

1/87


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

WARNING SYSTEM

(For Component Locations See Page 218)

MY 1983

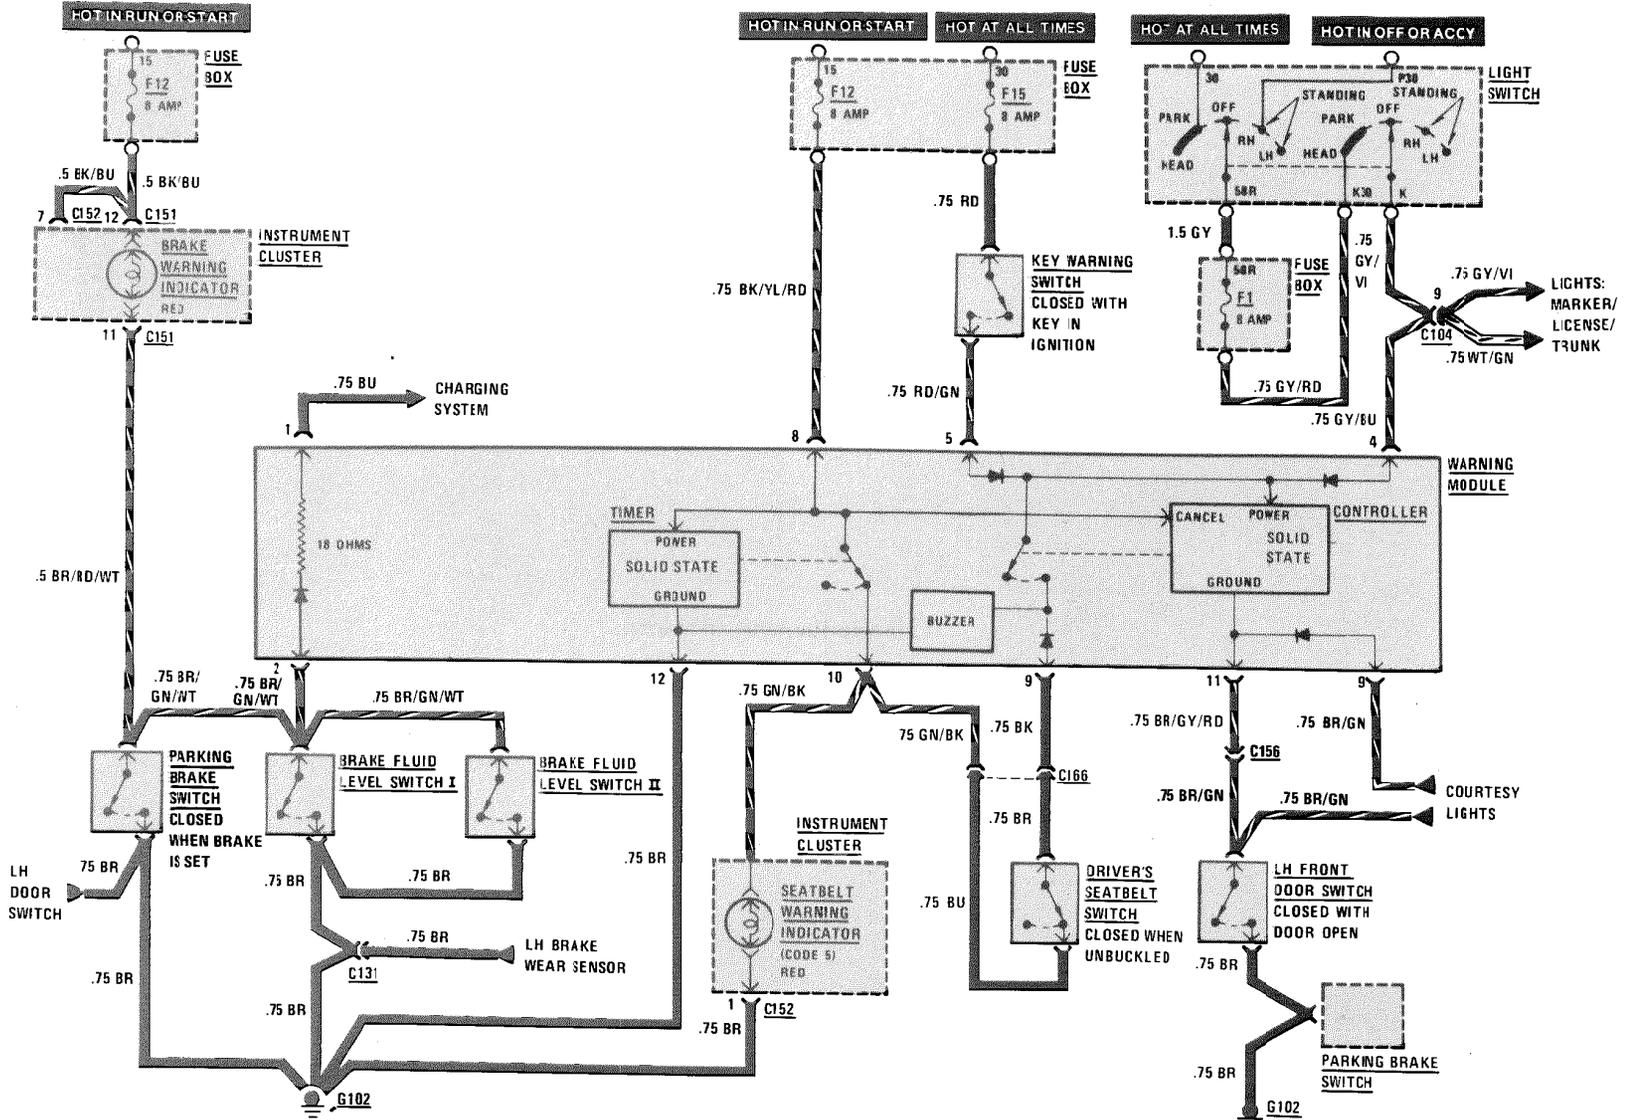

REVISIONS:

118/2


126.120

1/87

WARNING INDICATORS/GAUGES

(For Component Locations See Page 217)

MY 1983

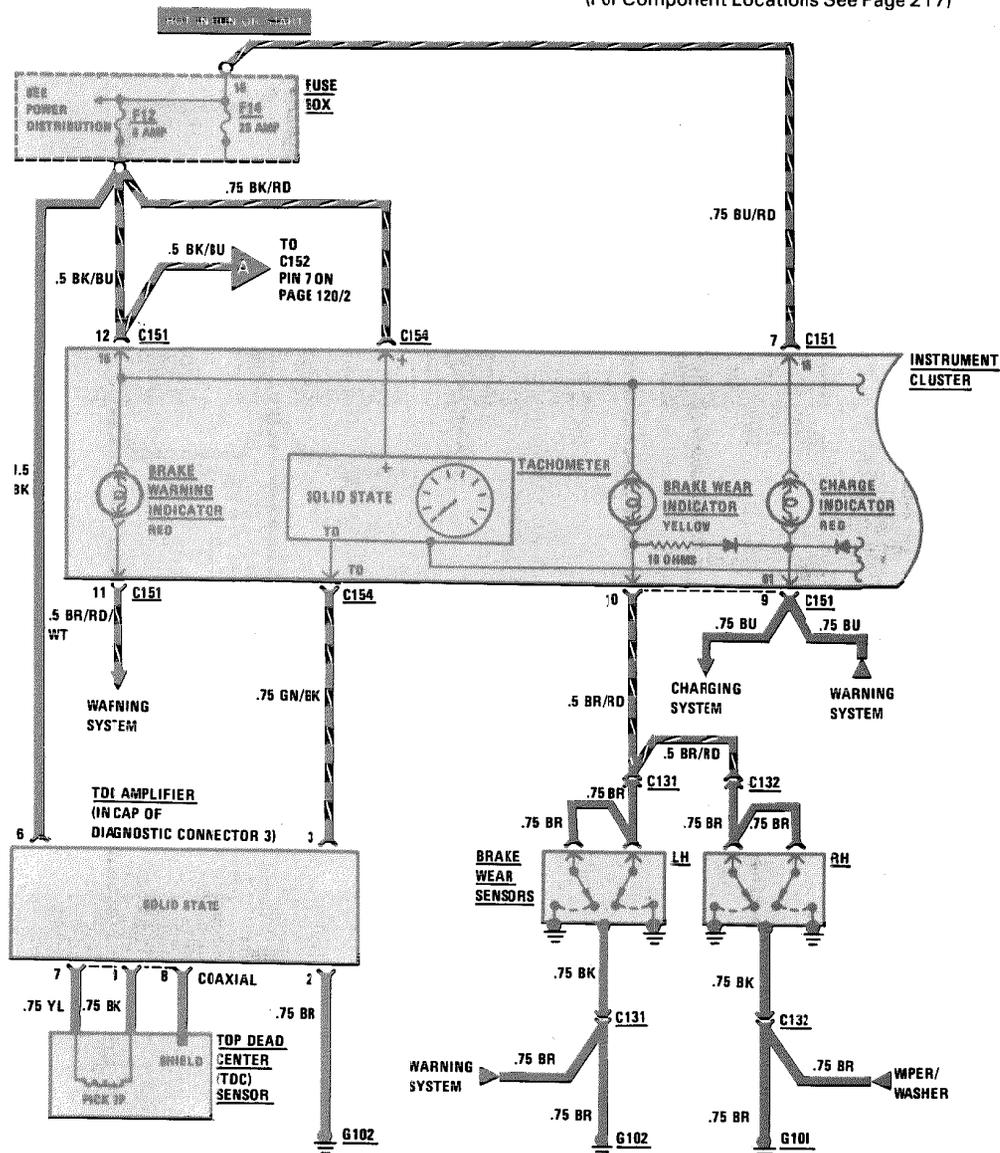

REVISIONS:

120


126.120

1/87

WARNING INDICATORS/GAUGES

MY 1984/MY 1985

(For Component Locations See Page 217)

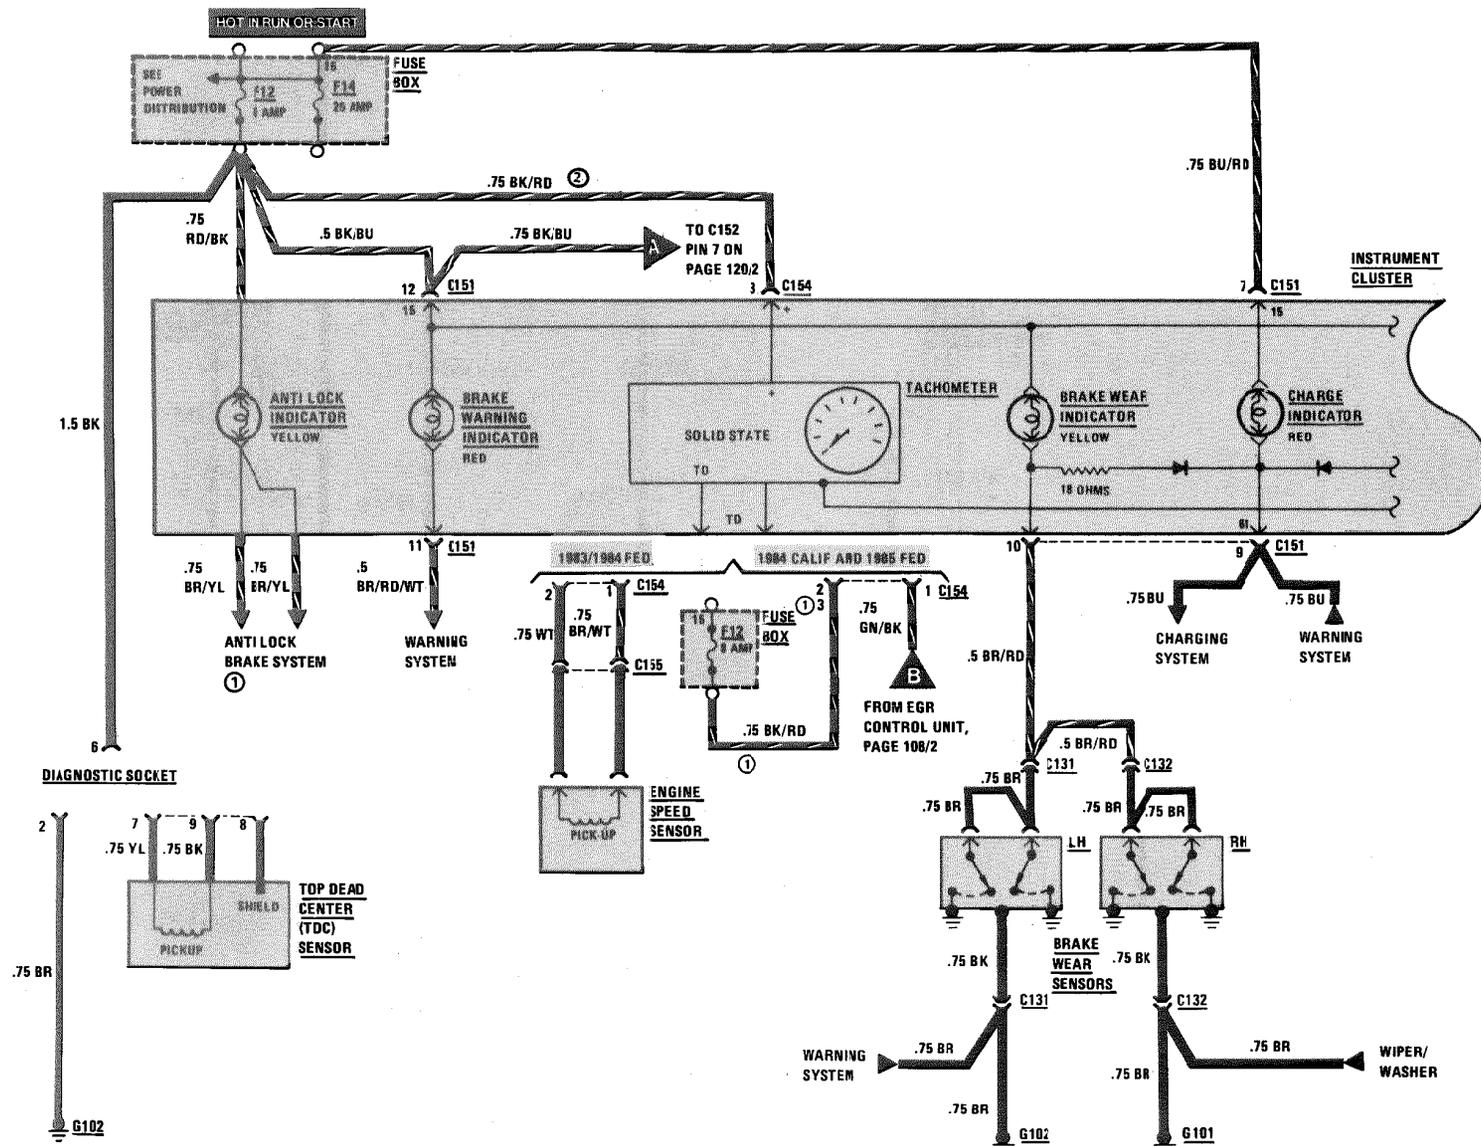

REVISIONS: ① AS OF MODEL YEAR 1985
 ② MODEL YEAR 1983/1984 FED ONLY

1/87

126.120


120/1

120/2

WARNING INDICATORS/GAUGES

(For Component Locations See Page 217)

MY 1983/MY 1984/
MY 1985

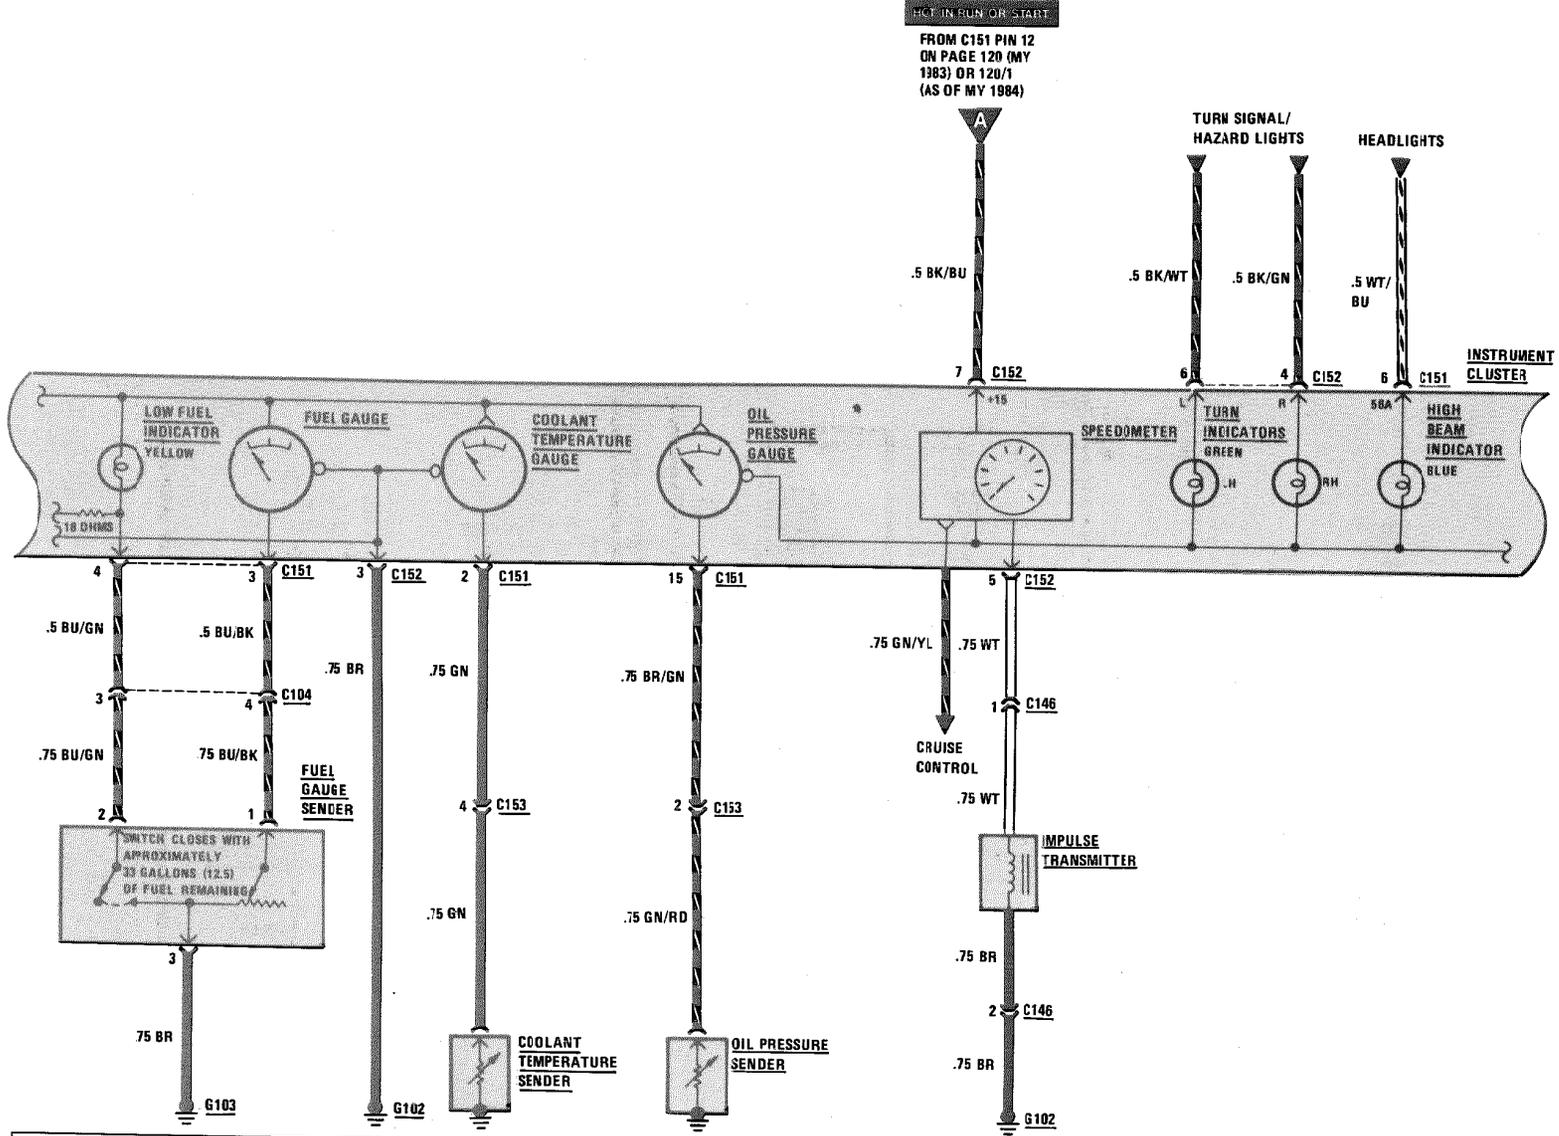

REVISIONS:


126.120

1/87


WARNING INDICATORS/GAUGES/CLOCK

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 217)

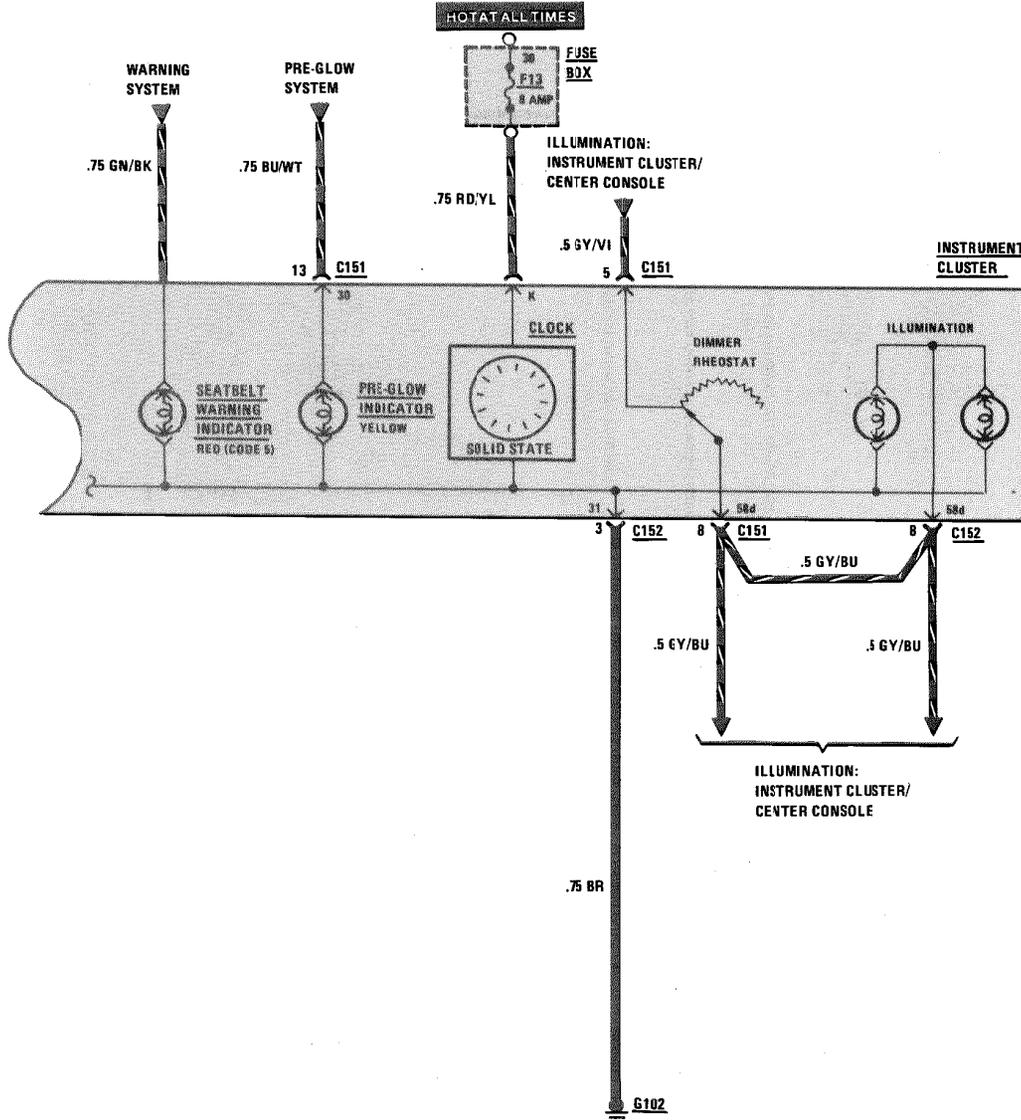

AS OF MY 1984

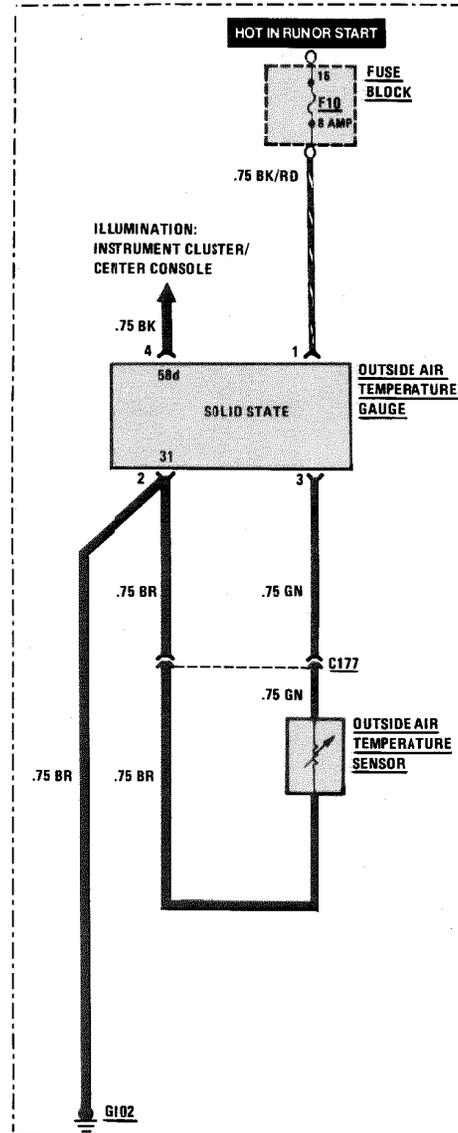


REVISIONS:

--	--	--

AUTOMATIC CLIMATE CONTROL (ACC) POWER AND GROUND DISTRIBUTION

(For Component Locations See Page 311)

MY 1983/
MY 1984

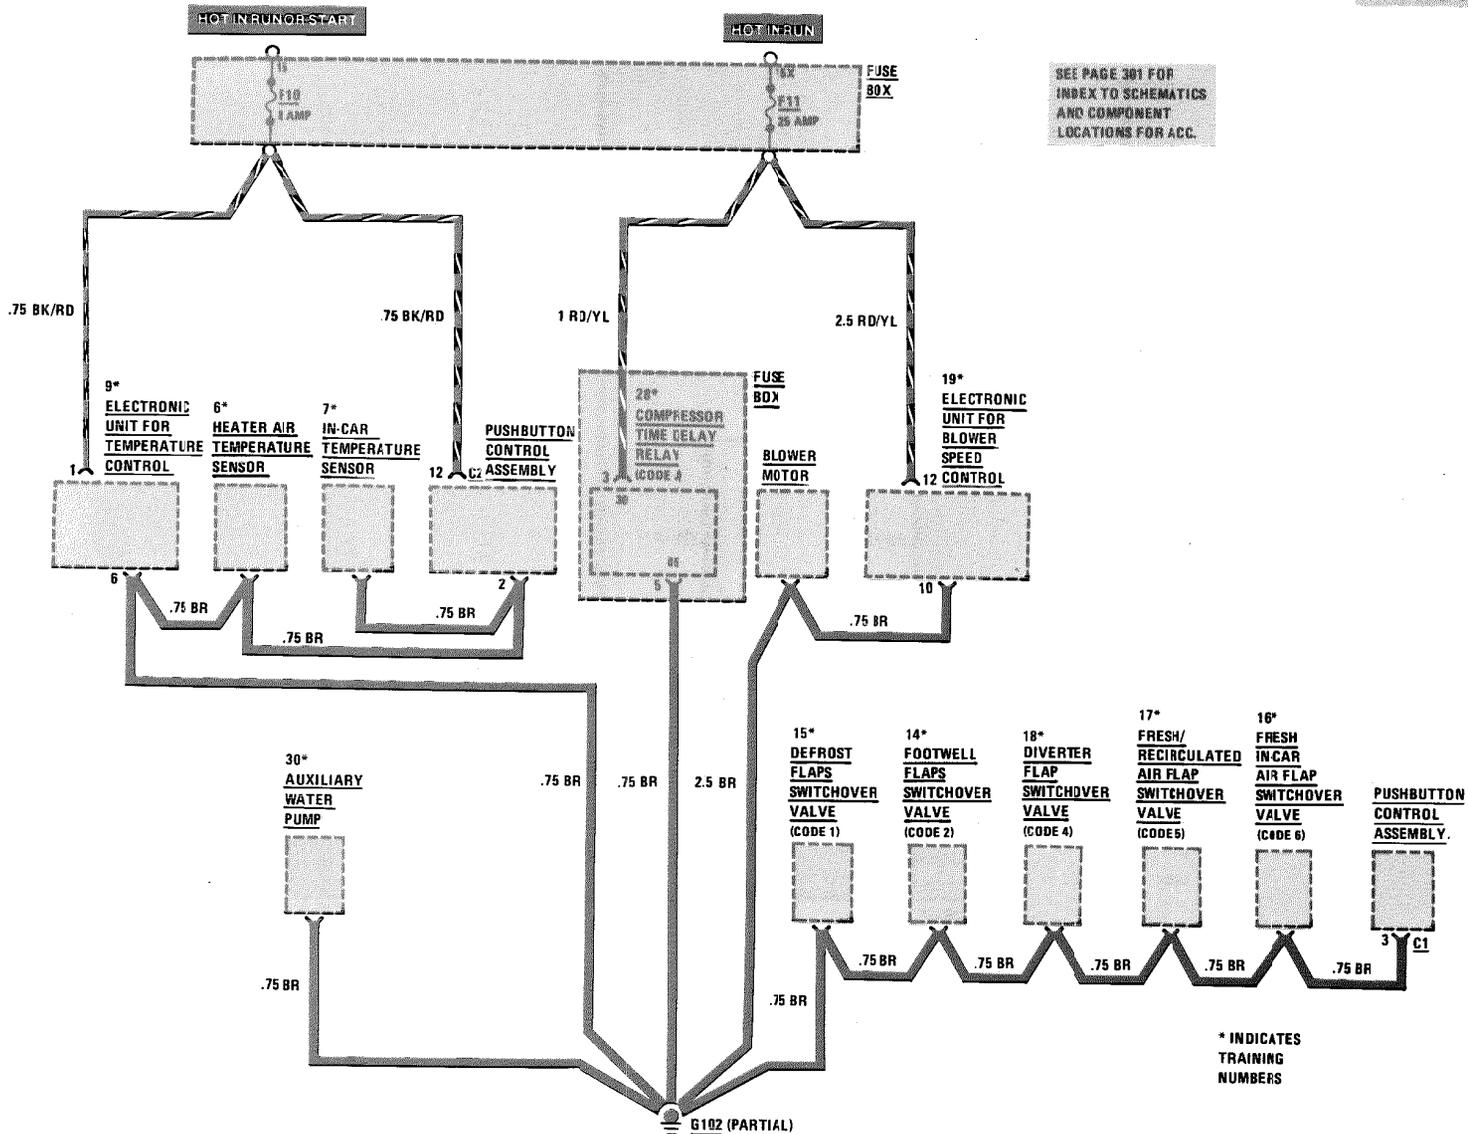

REVISIONS:

122

126, 120

1/87

122/2

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:


1/87

123/1

FRONT CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

(For Component Locations See Page 208)

MY 1984/
MY 1985

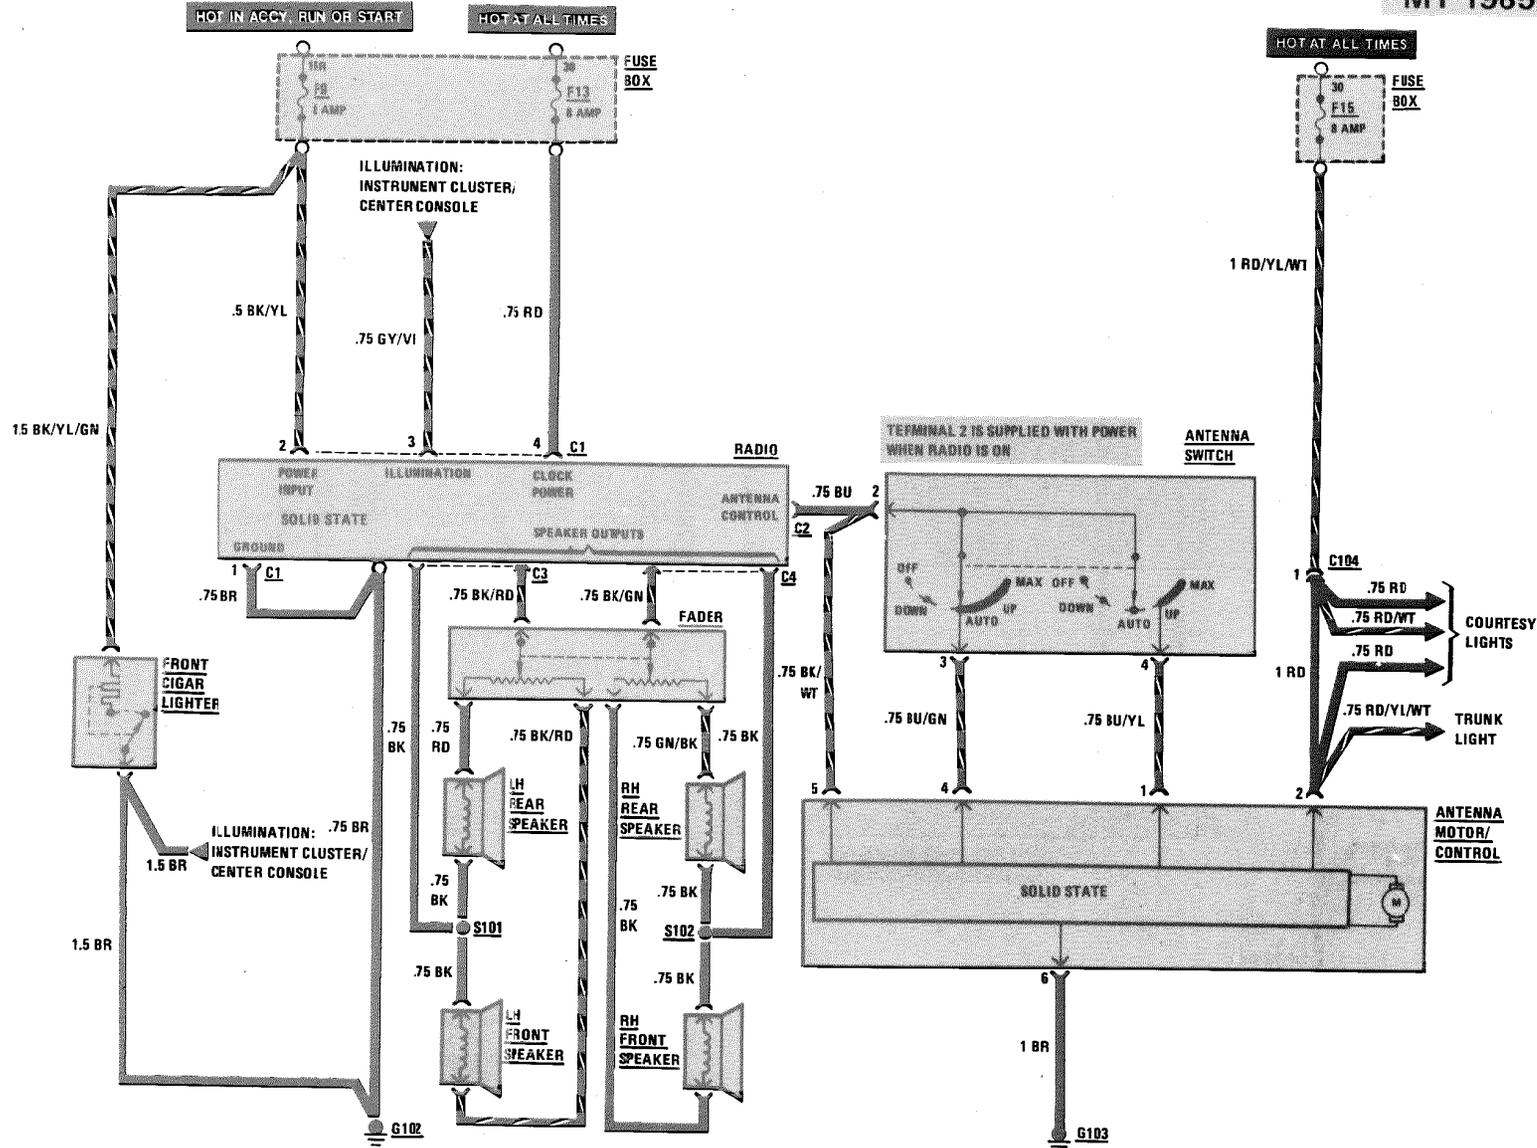

126.120

REVISIONS:

--

4/86

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

WIPER/WASHER

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 219)

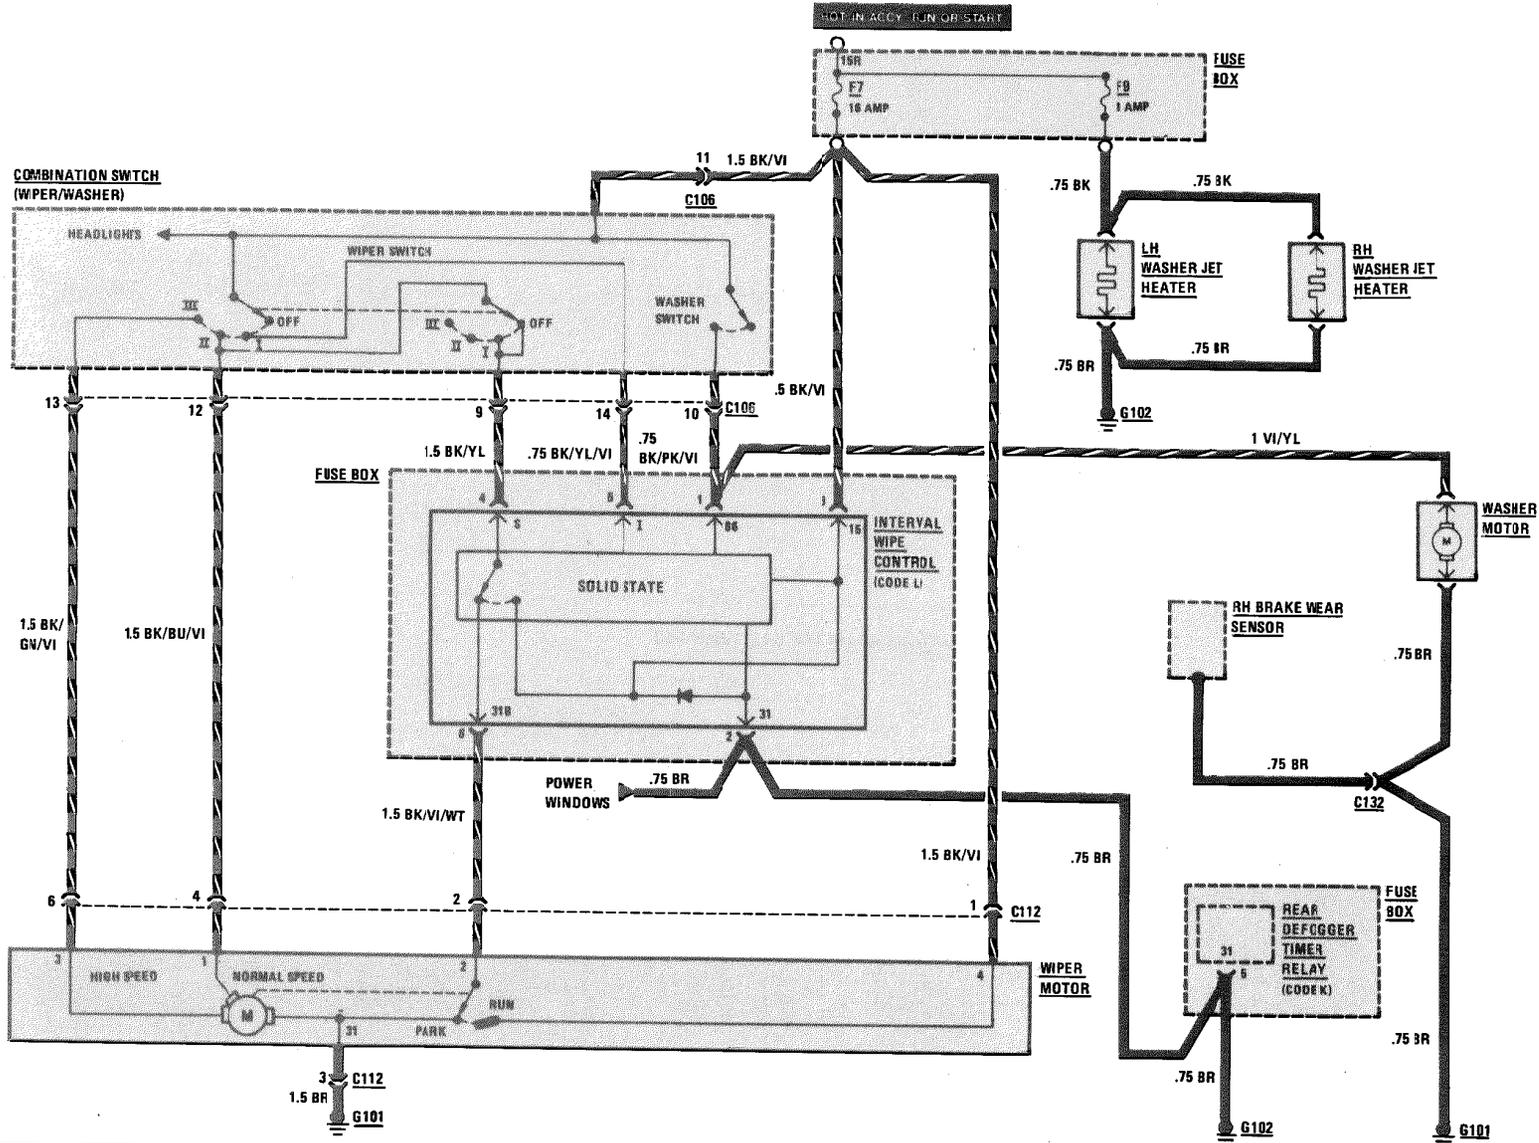


REVISIONS:

ORTHOPEDIC SEATS

(For Component Locations See Page 211)

MY 1984/MY 1985

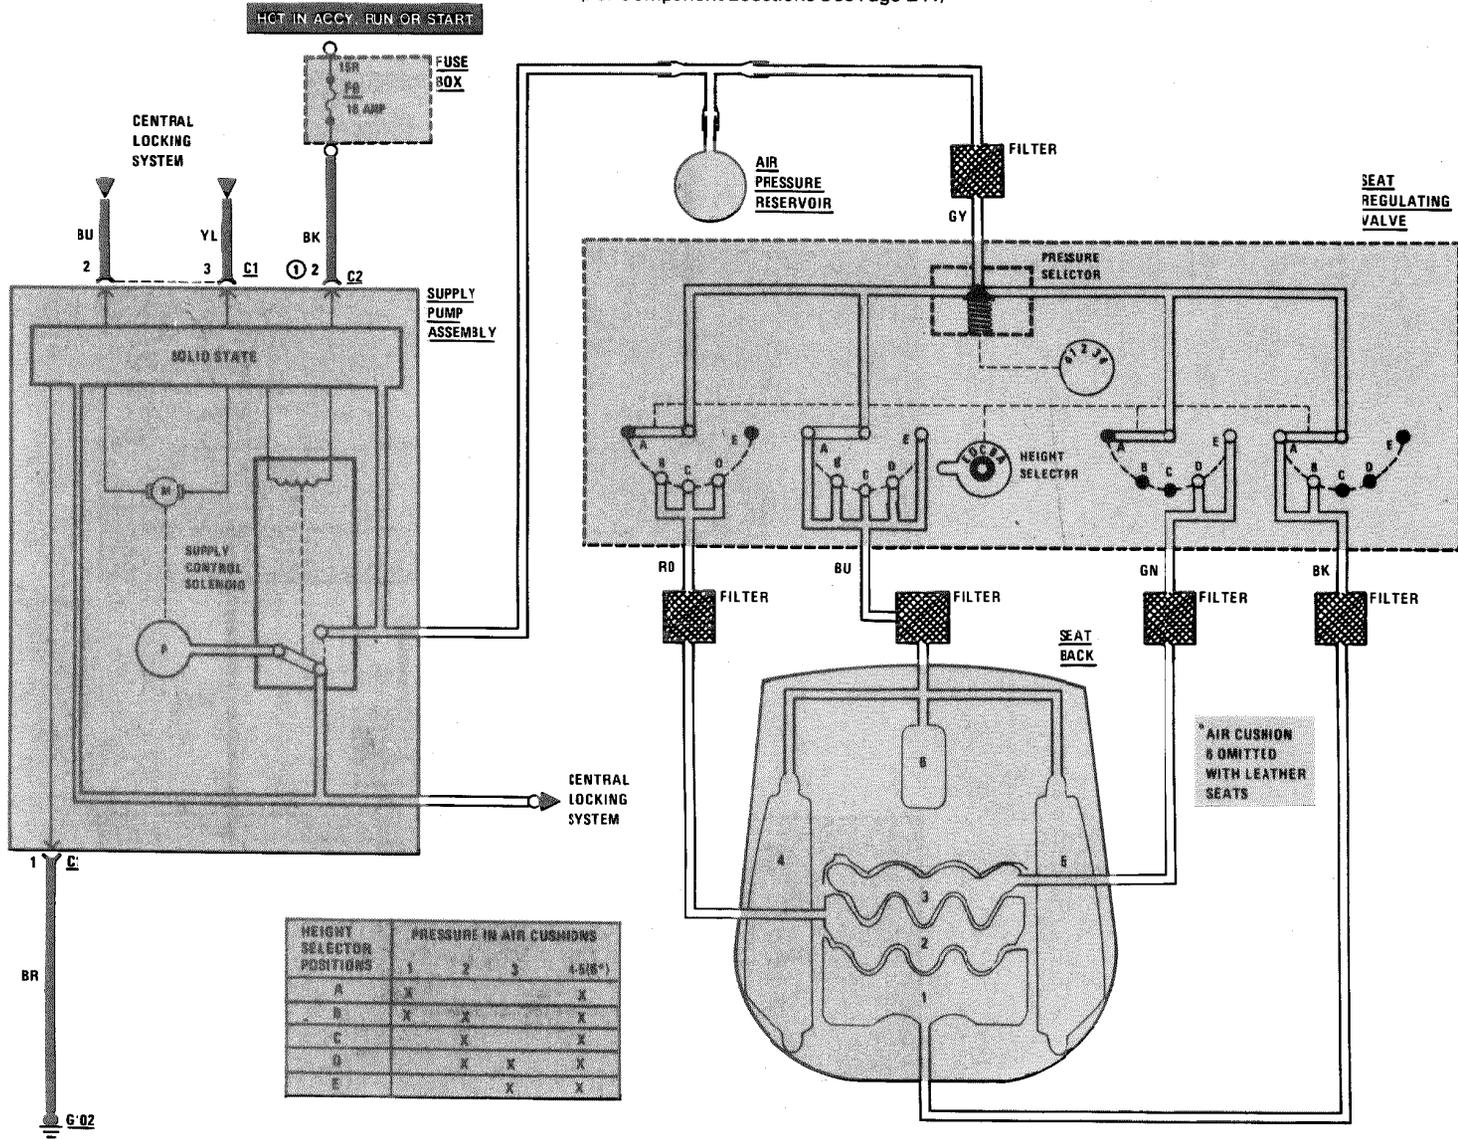

126.120

125

REVISIONS: ① AS OF MODEL YEAR 1985

126


126.120

4/86

POWER SEATS

(For Component Locations See Page 212)

MY 1983

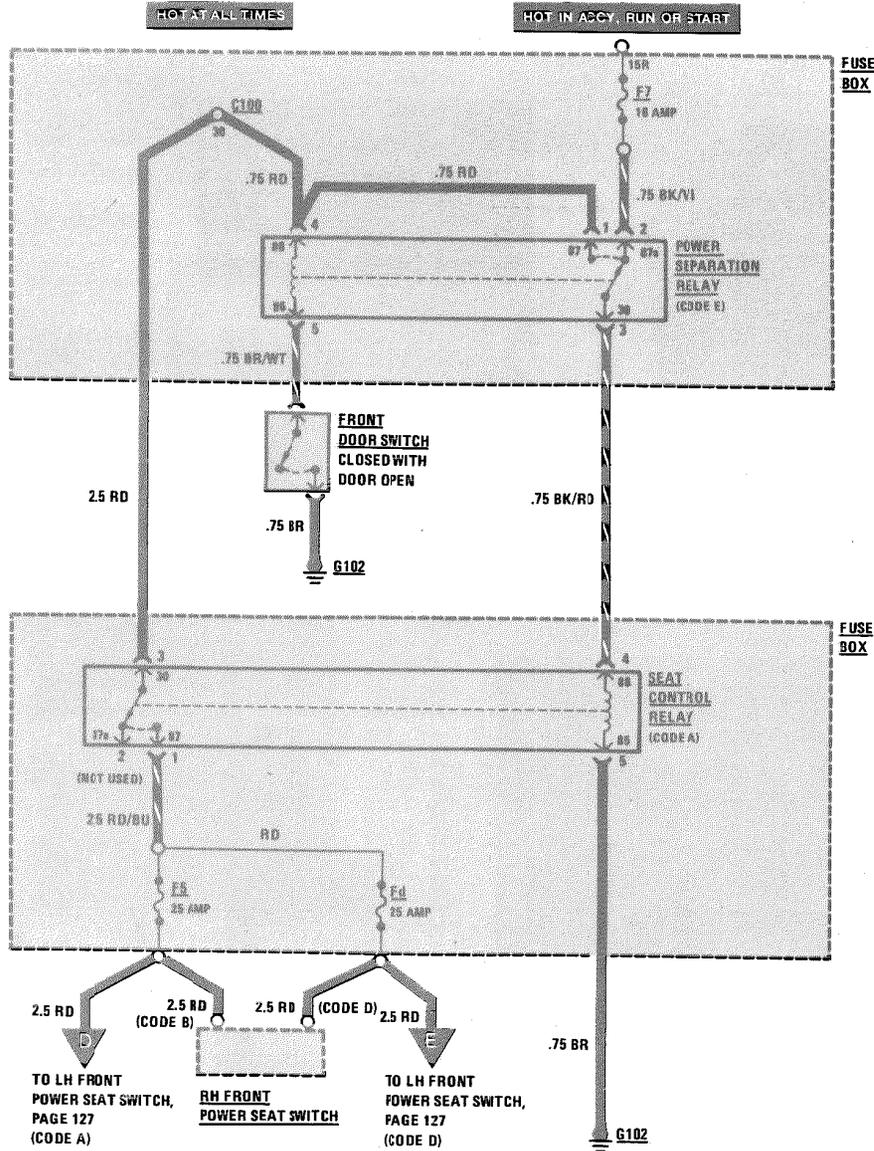

REVISIONS:


RH POWER SEAT

(For Component Locations See Page 212)

MY 1983

4/86

126.120

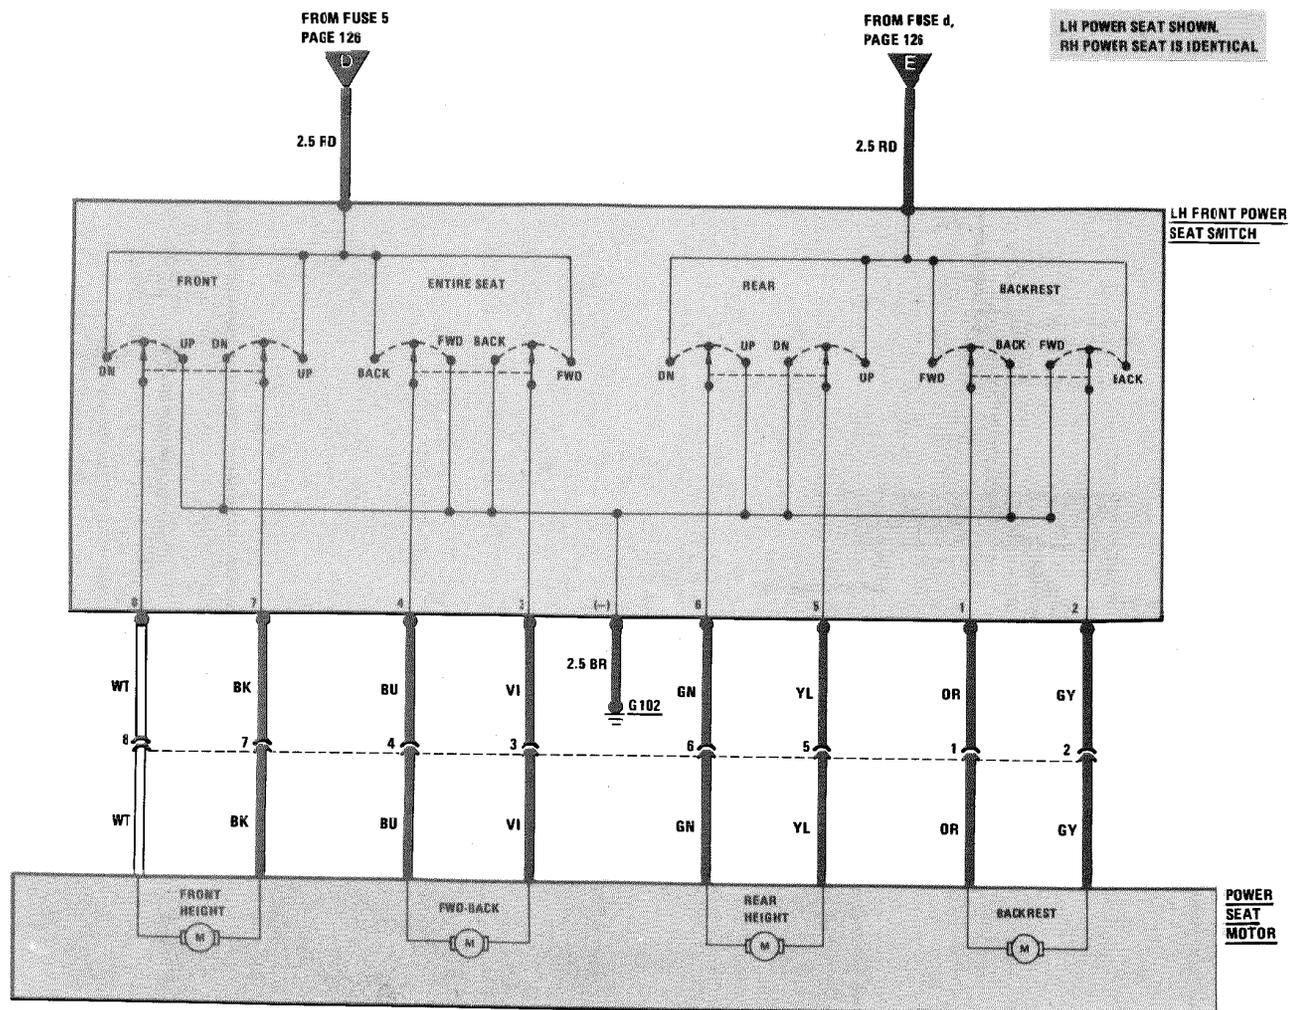

REVISIONS:


127

POWER SEATS

(For Component Locations See Page 212)

MY 1984

127/1

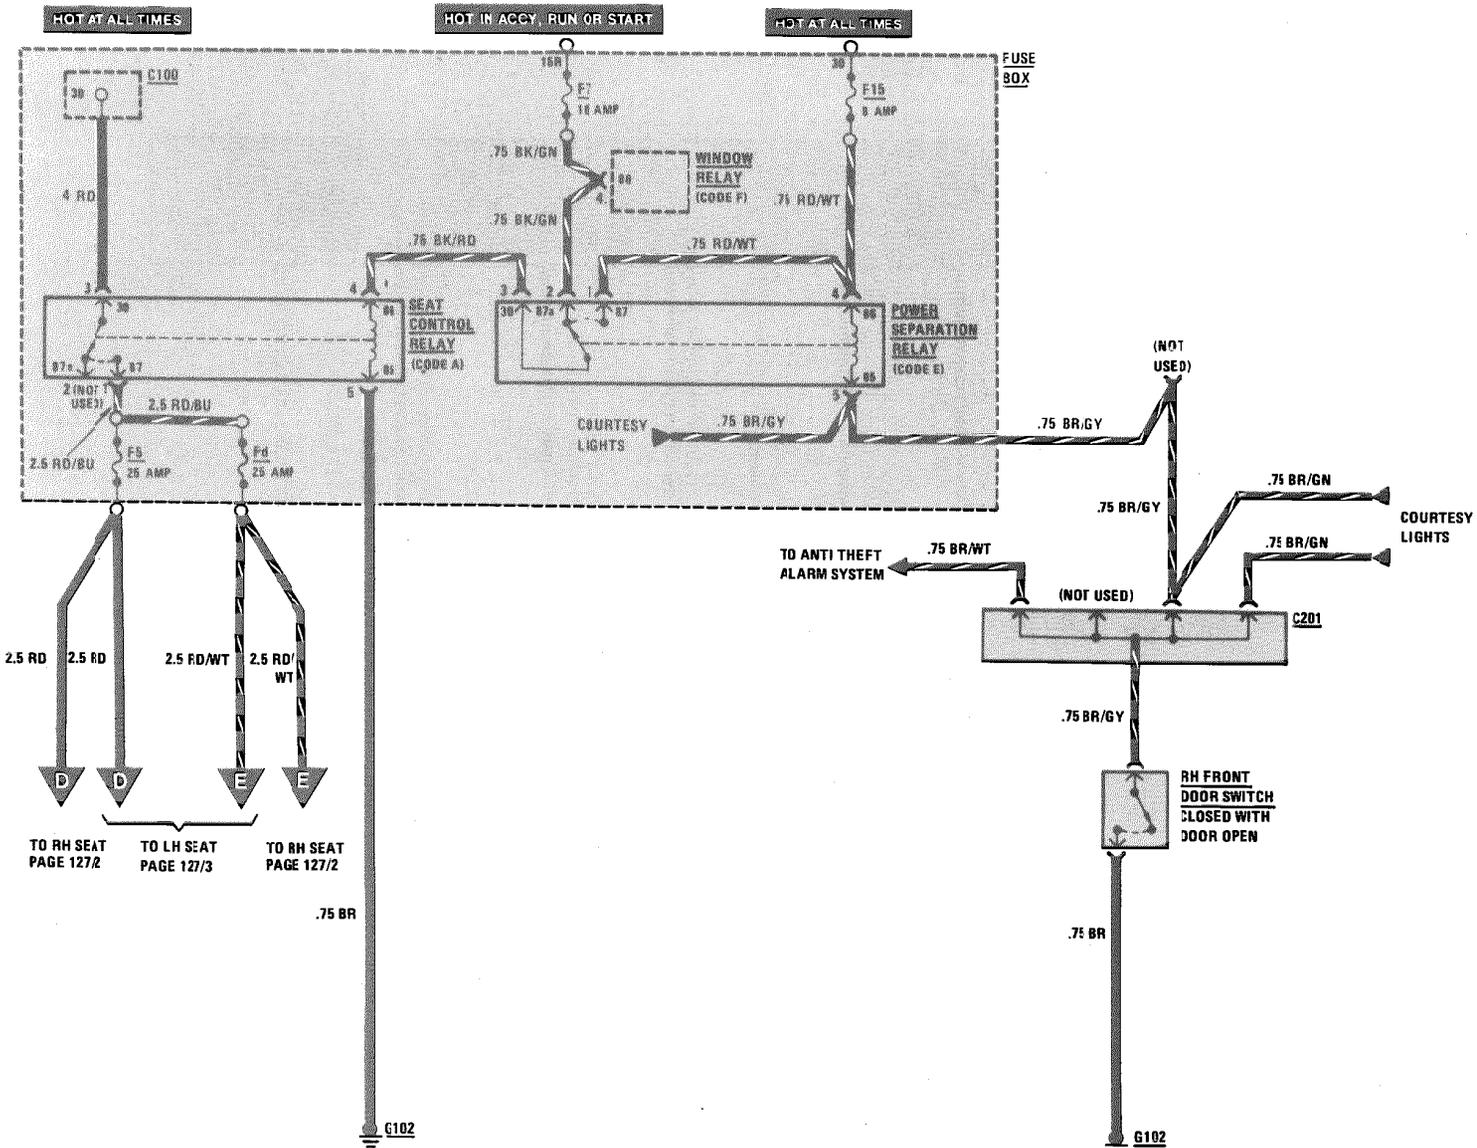

126.120


REVISIONS:

4/86

RH POWER SEAT

(For Component Locations See Page 212)

MY 1984

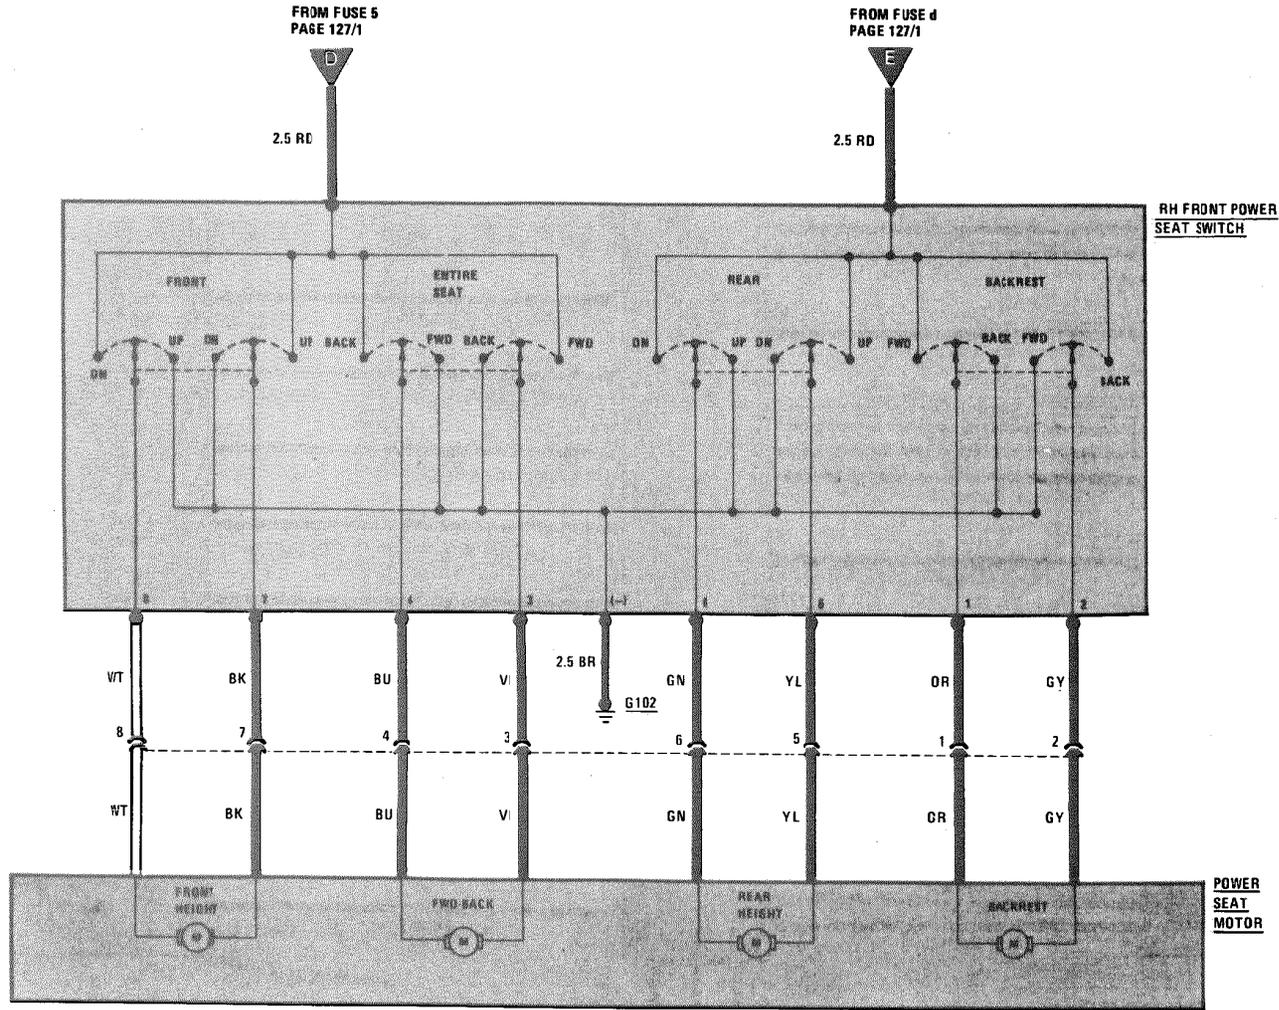

126.120

127/2


REVISIONS:

--

LH POWER SEAT (WITH MEMORY)

MY 1984

(For Component Locations See Page 212)

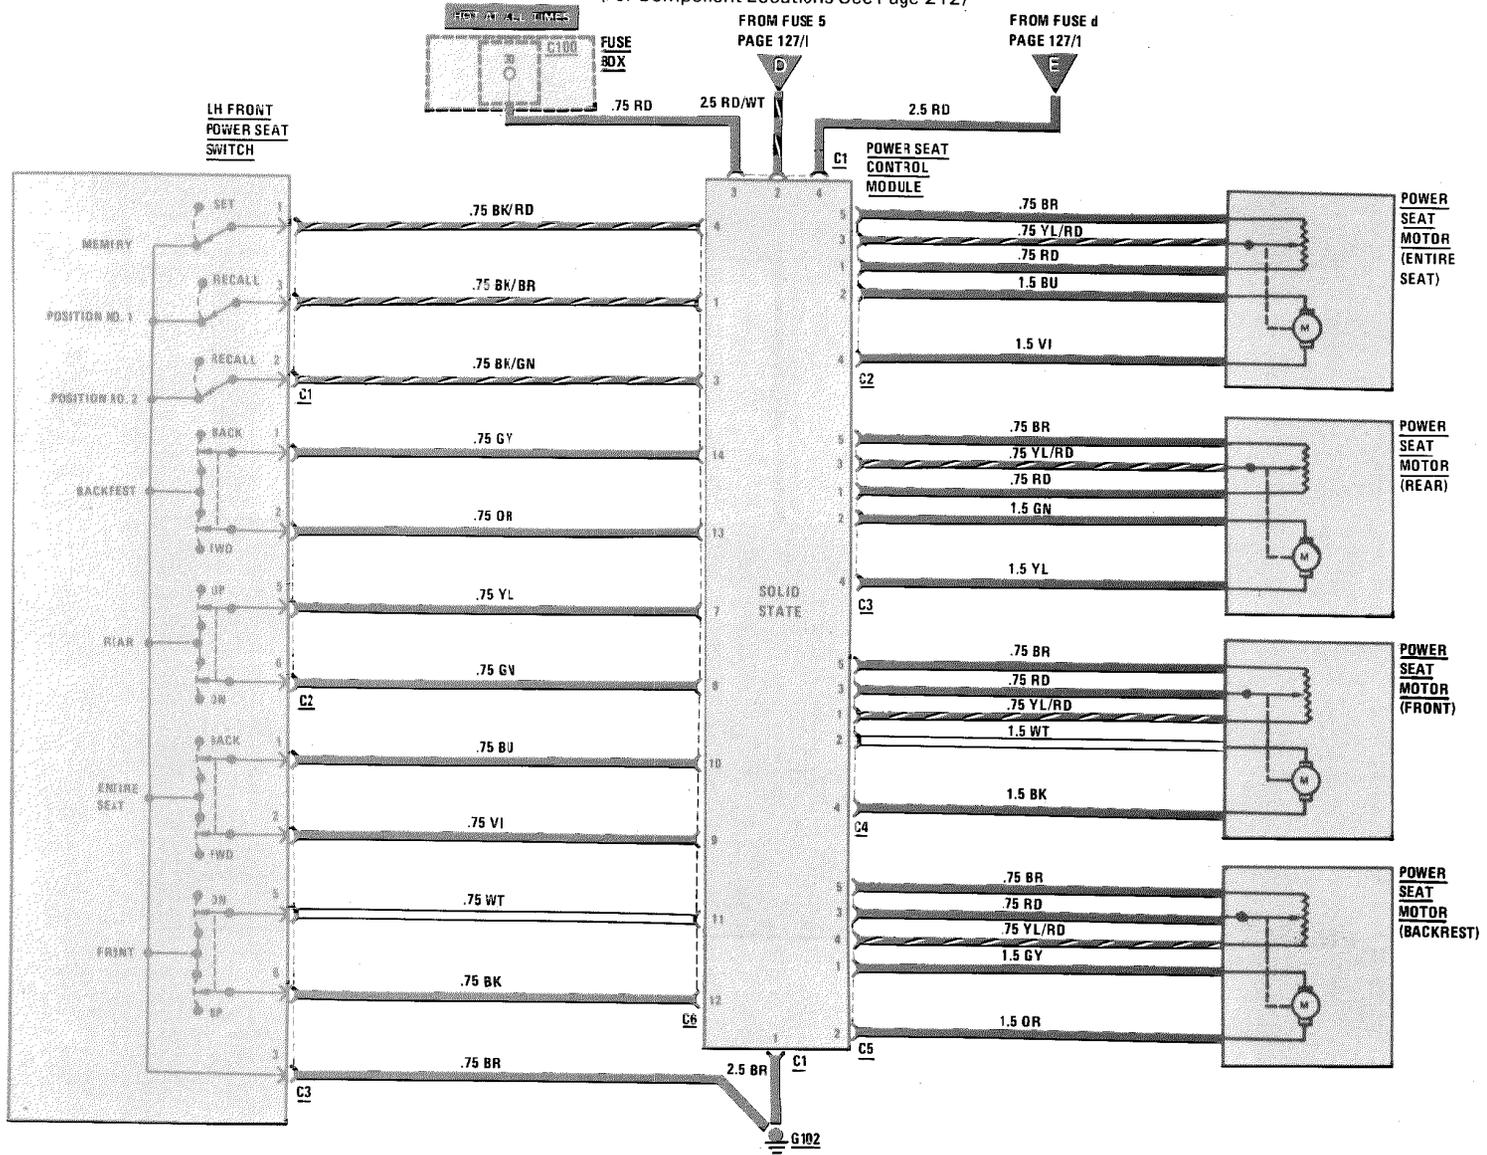

REVISIONS

127/3

126.120


4/86

4/86

POWER SEATS

MY 1985

(For Component Locations See Page 212)

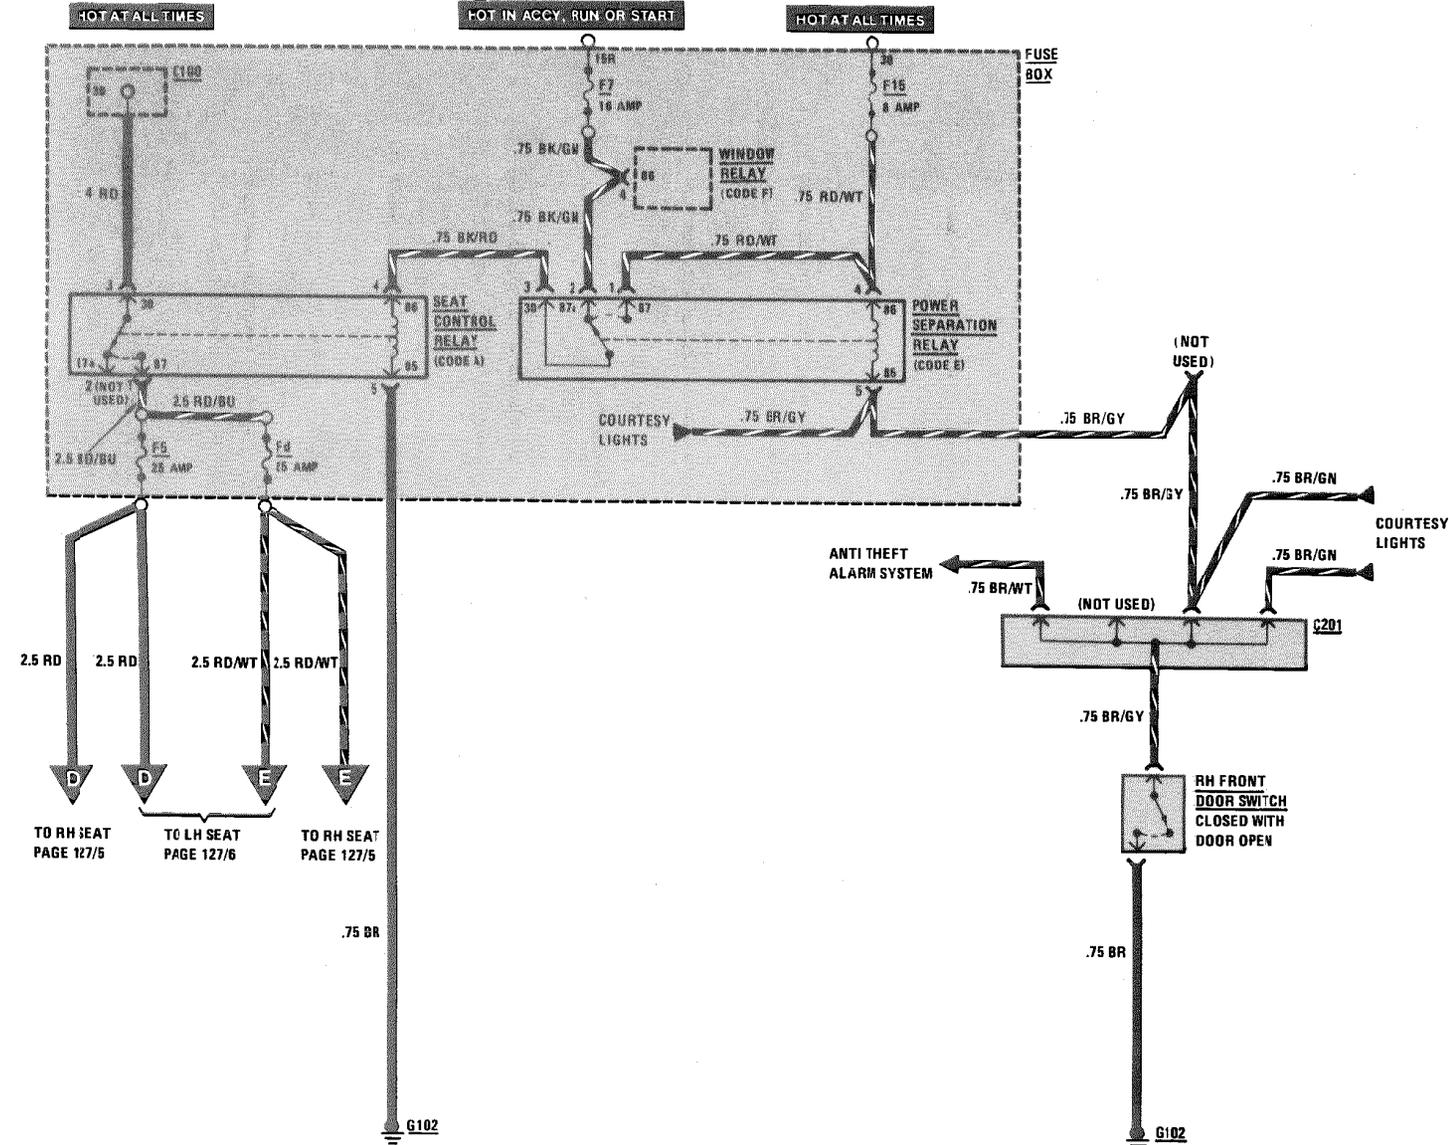

126.120

127/4

REVISIONS:


127/15

RH POWER SEAT

(For Component Locations See Page 212)

MY 1985

HOT IN ACCY, RUN OR START

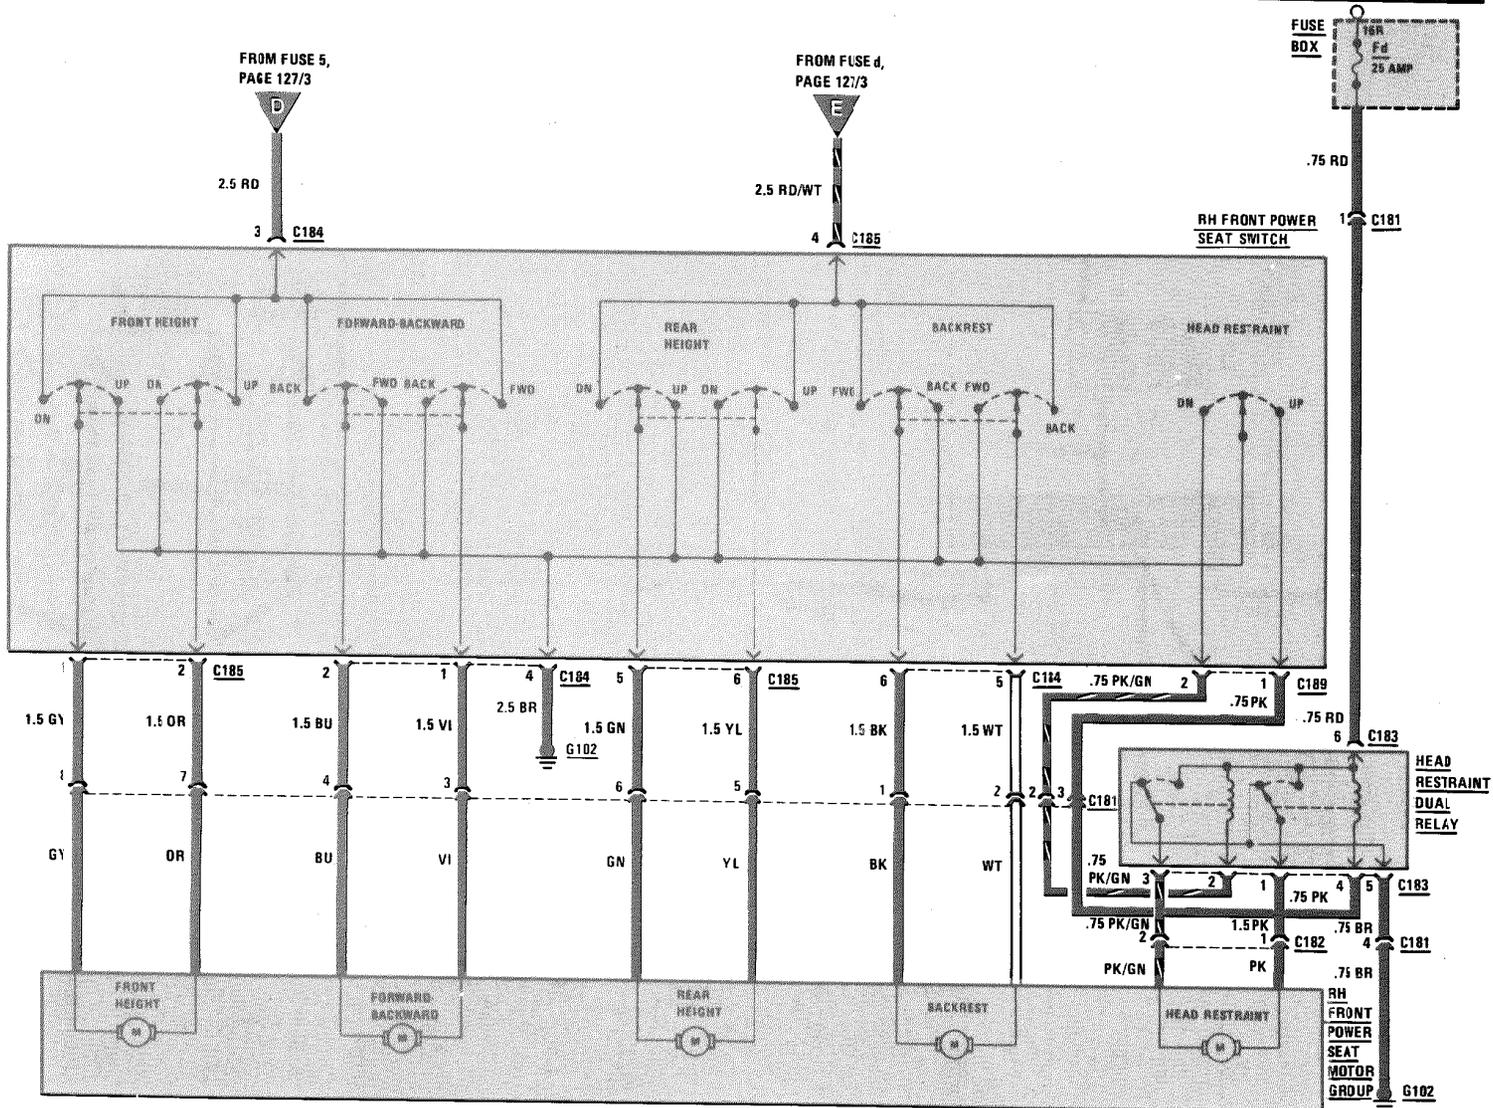

REVISIONS:

126.120


4/86

127/7

LH POWER SEAT (WITH MEMORY)

(For Component Locations See Page 212)

MY 1985

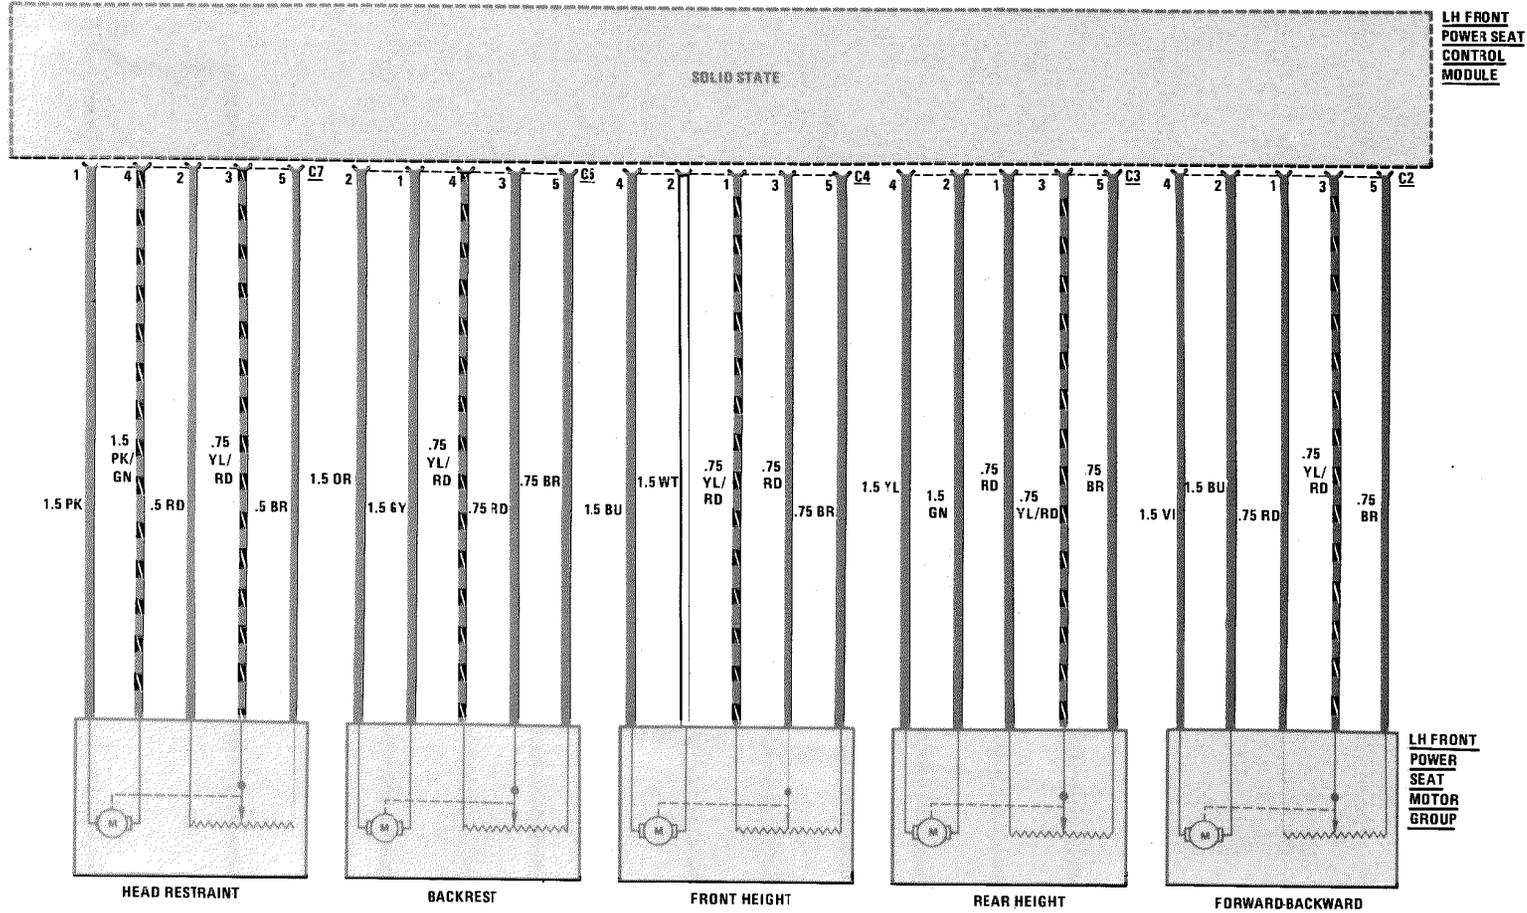

126.120

REVISIONS:

4/86

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

HEATED SEATS

(For Component Locations See Page 209)

MY 1983

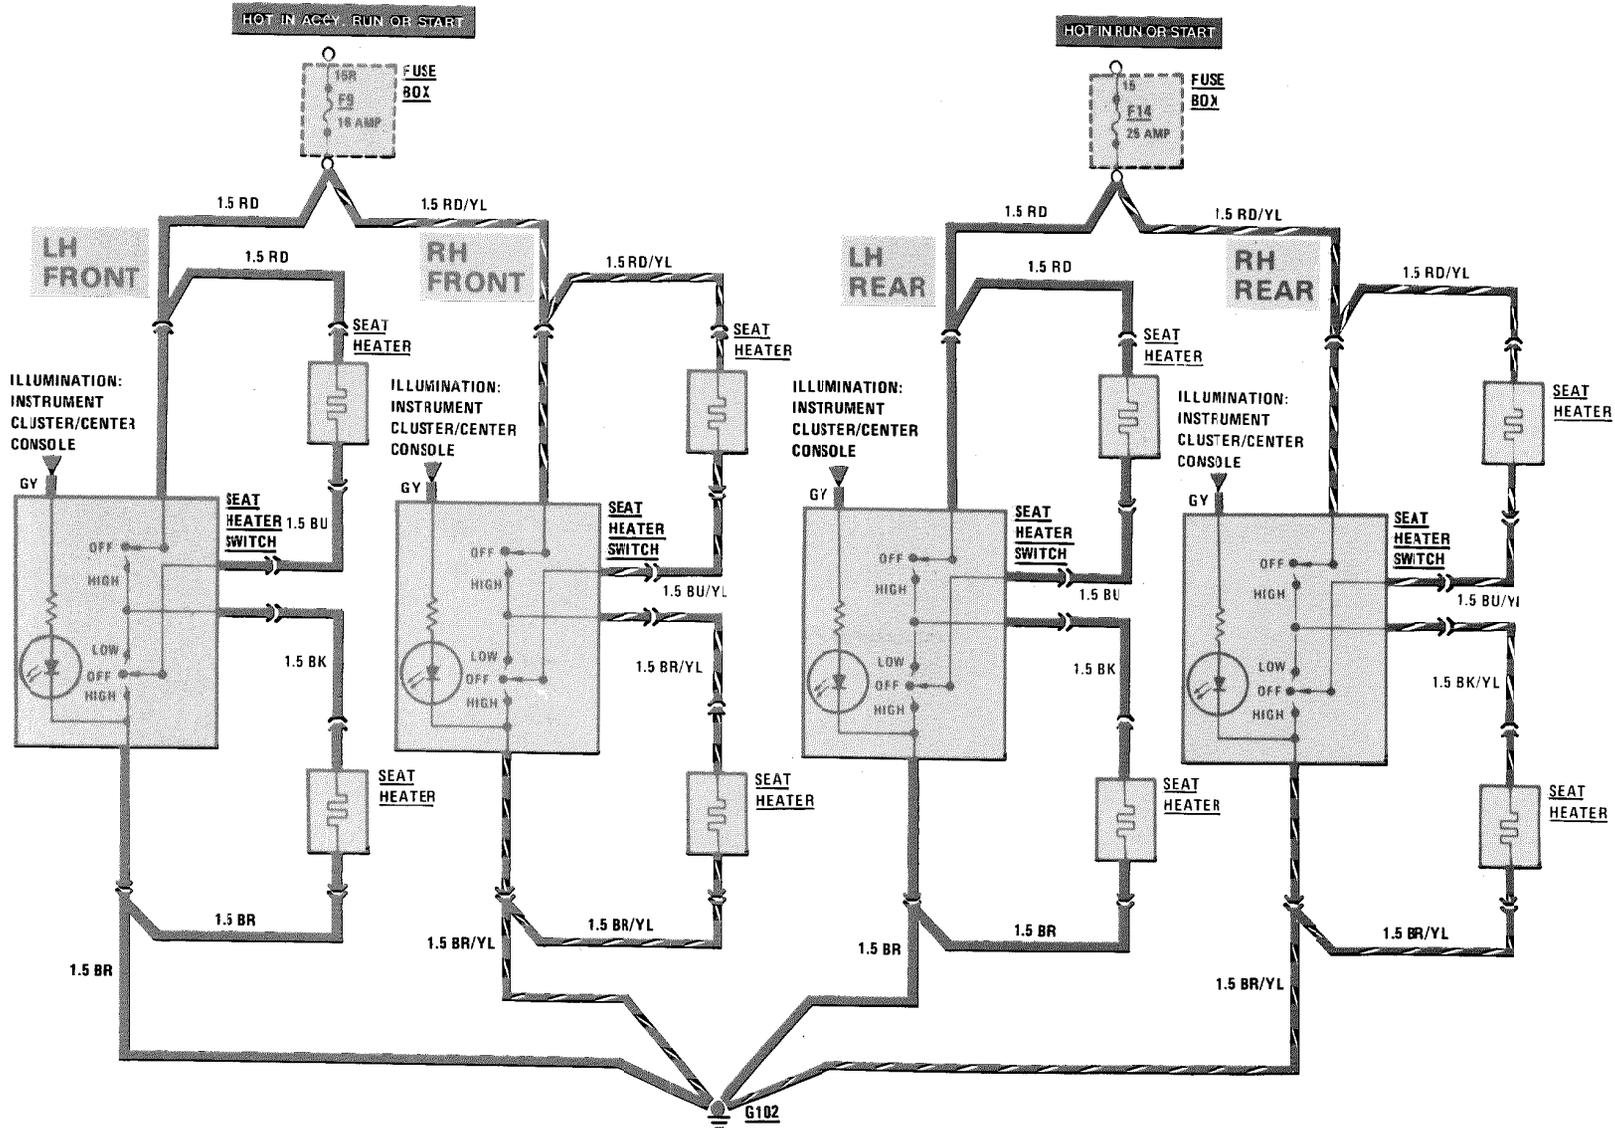

126.120


REVISIONS:

HEATED SEATS

(For Component Locations See Page 209)

MY 1984/MY 1985

NOT IN ACCY. CLIN. OR START

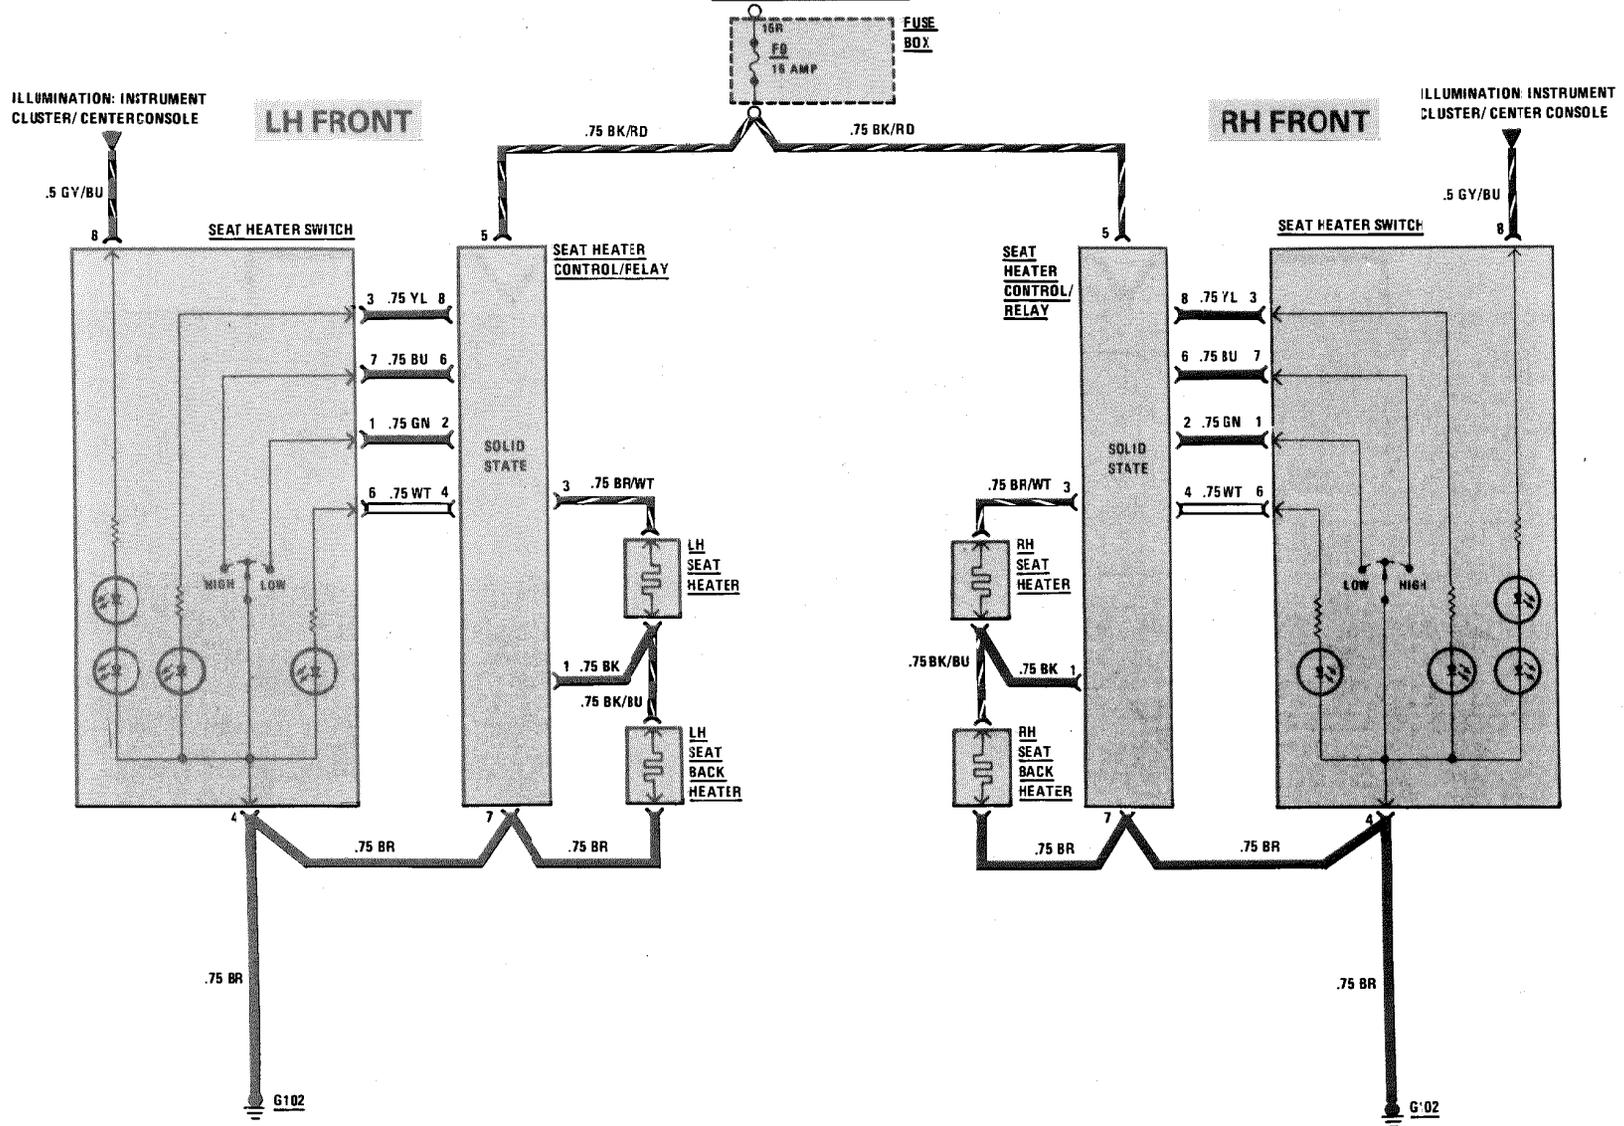

126.120


128/1

REVISIONS:

HEATED SEATS

(For Component Locations See Page 209)

MY 1984/MY 1985

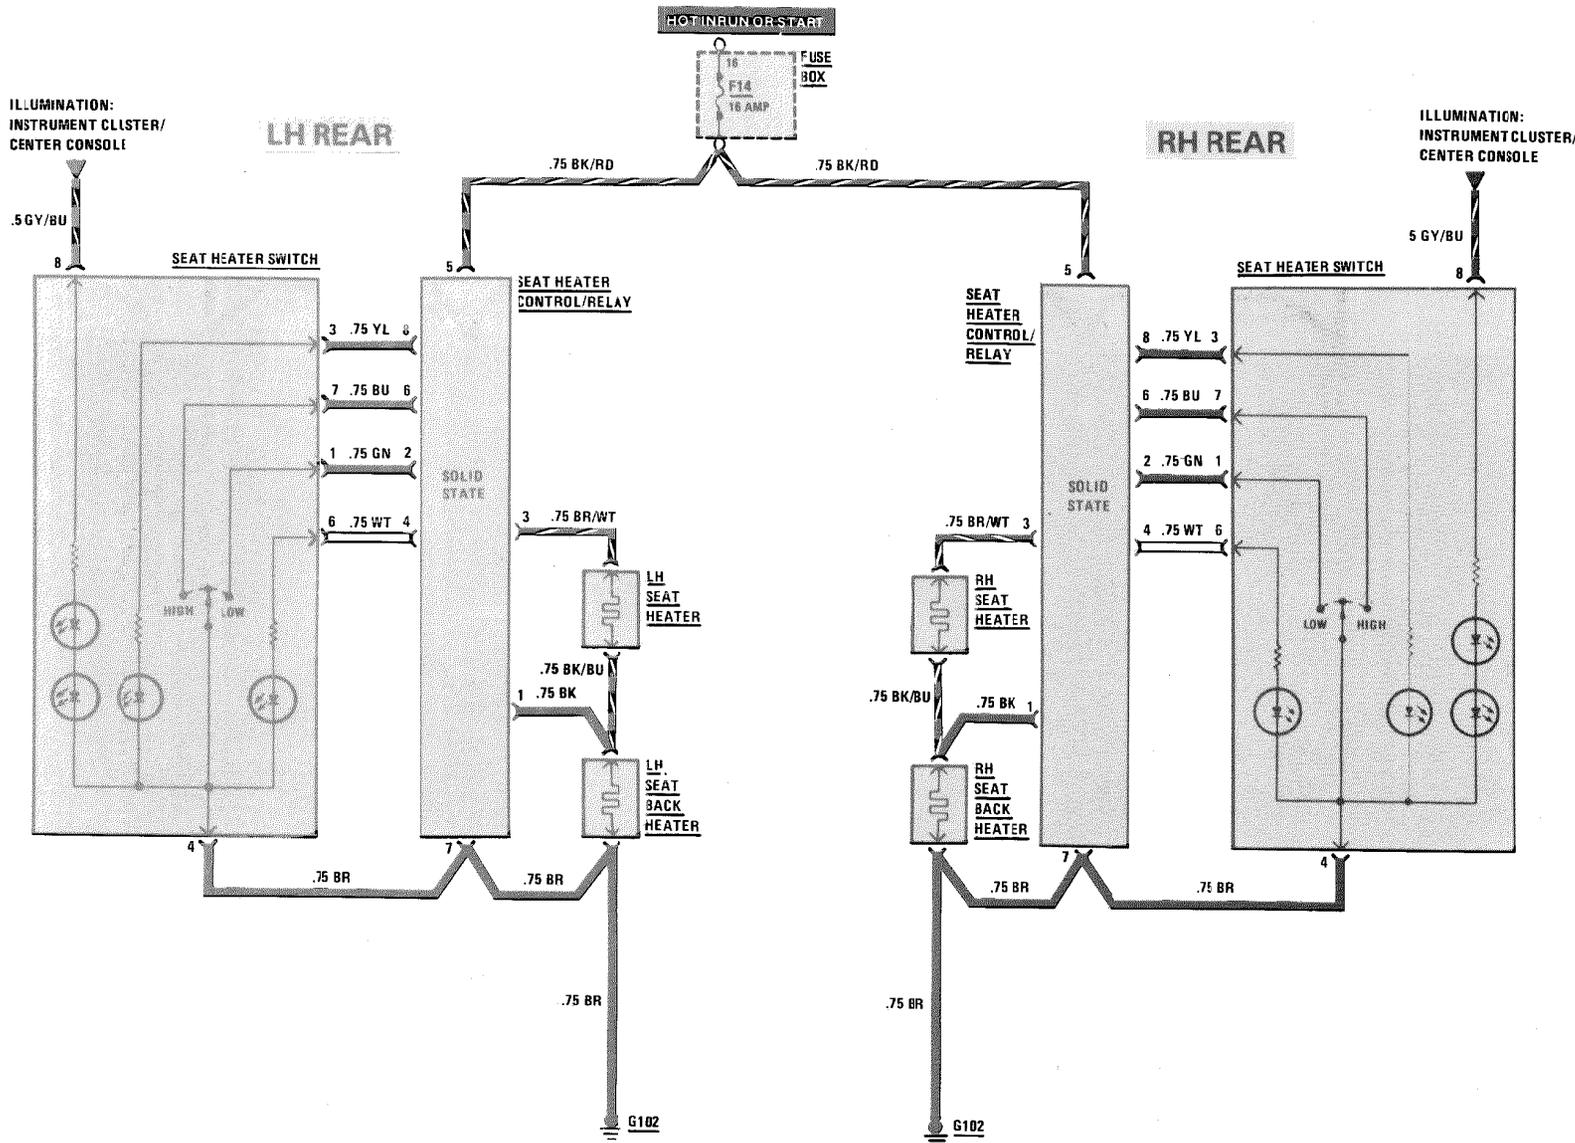

REVISIONS:

128/2

126.120


4/86

AUXILIARY FAN

(For Component Locations See Page 202)

MY 1983/MY 1984

4/86

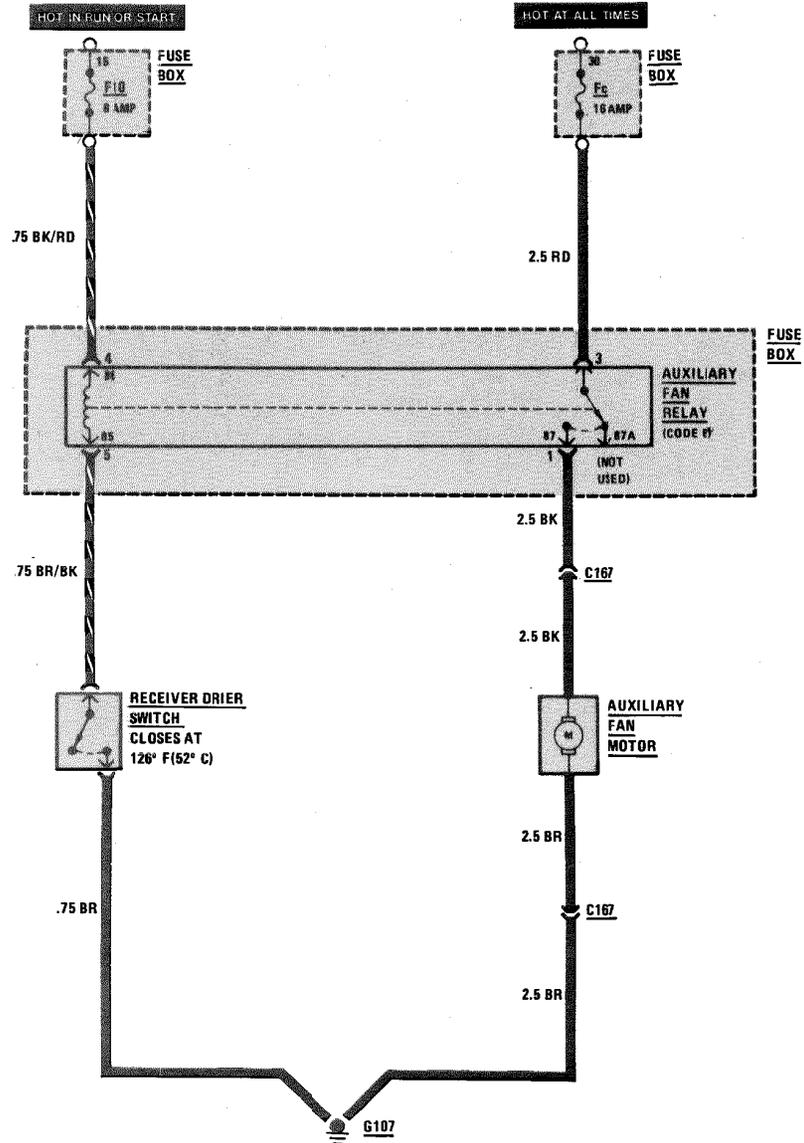

126.120

129

REVISIONS:

129/1


126.120

4/80

AUXILIARY FAN

(For Component Locations See Page 202)

MY 1985

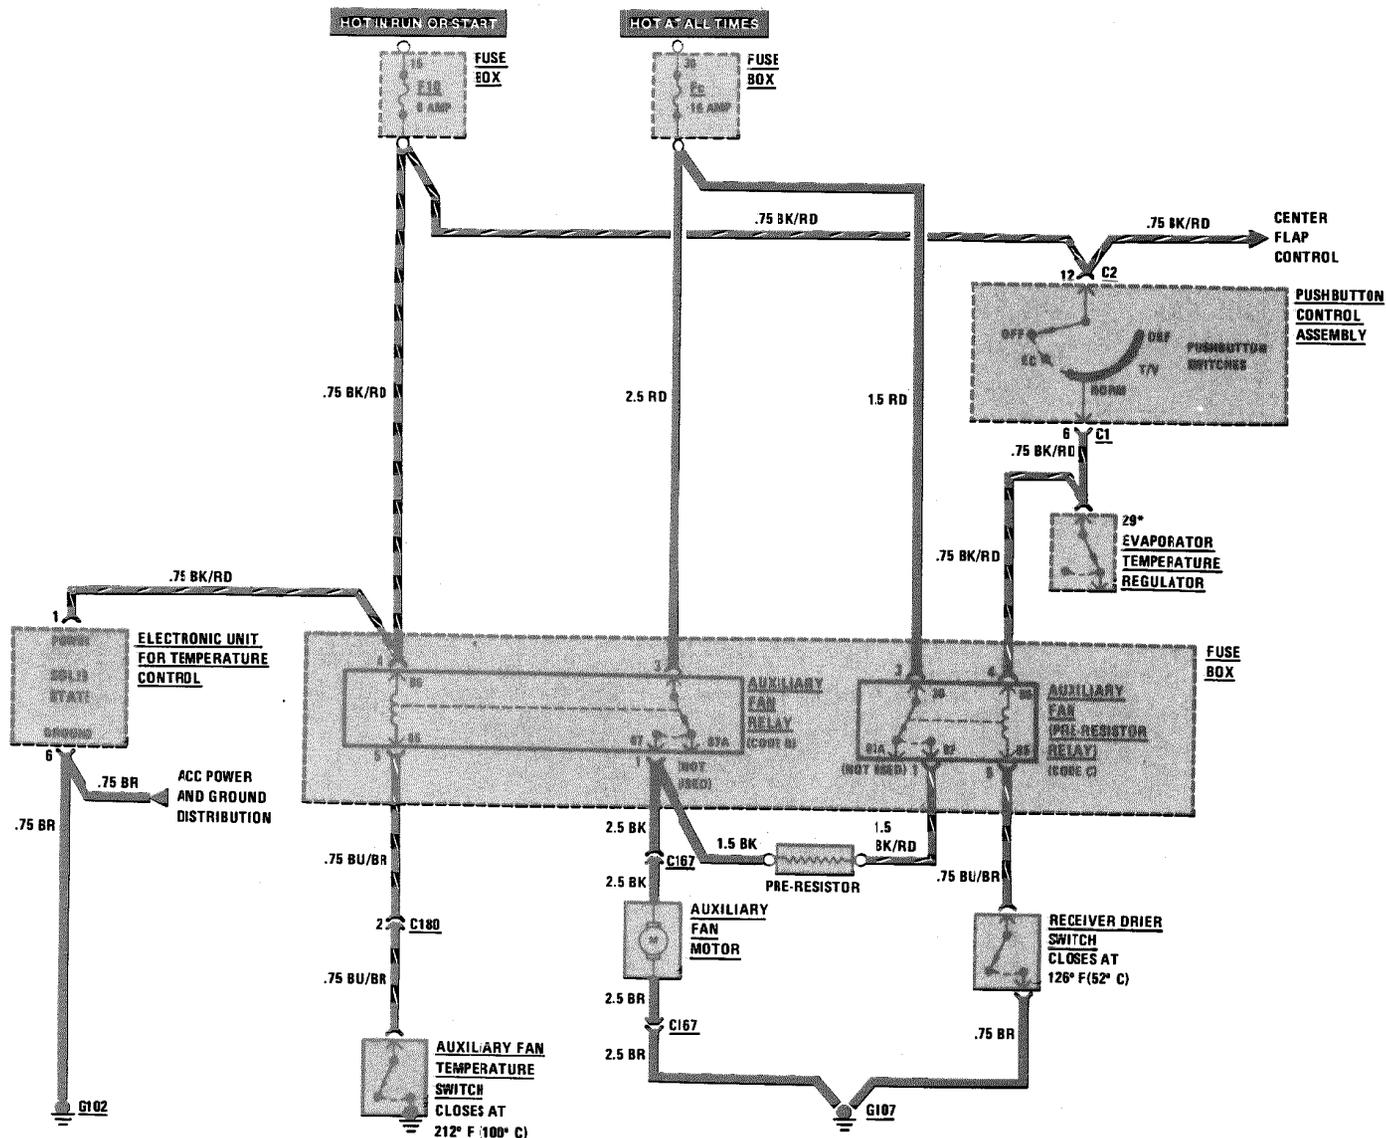

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

POWER WINDOWS

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 213)

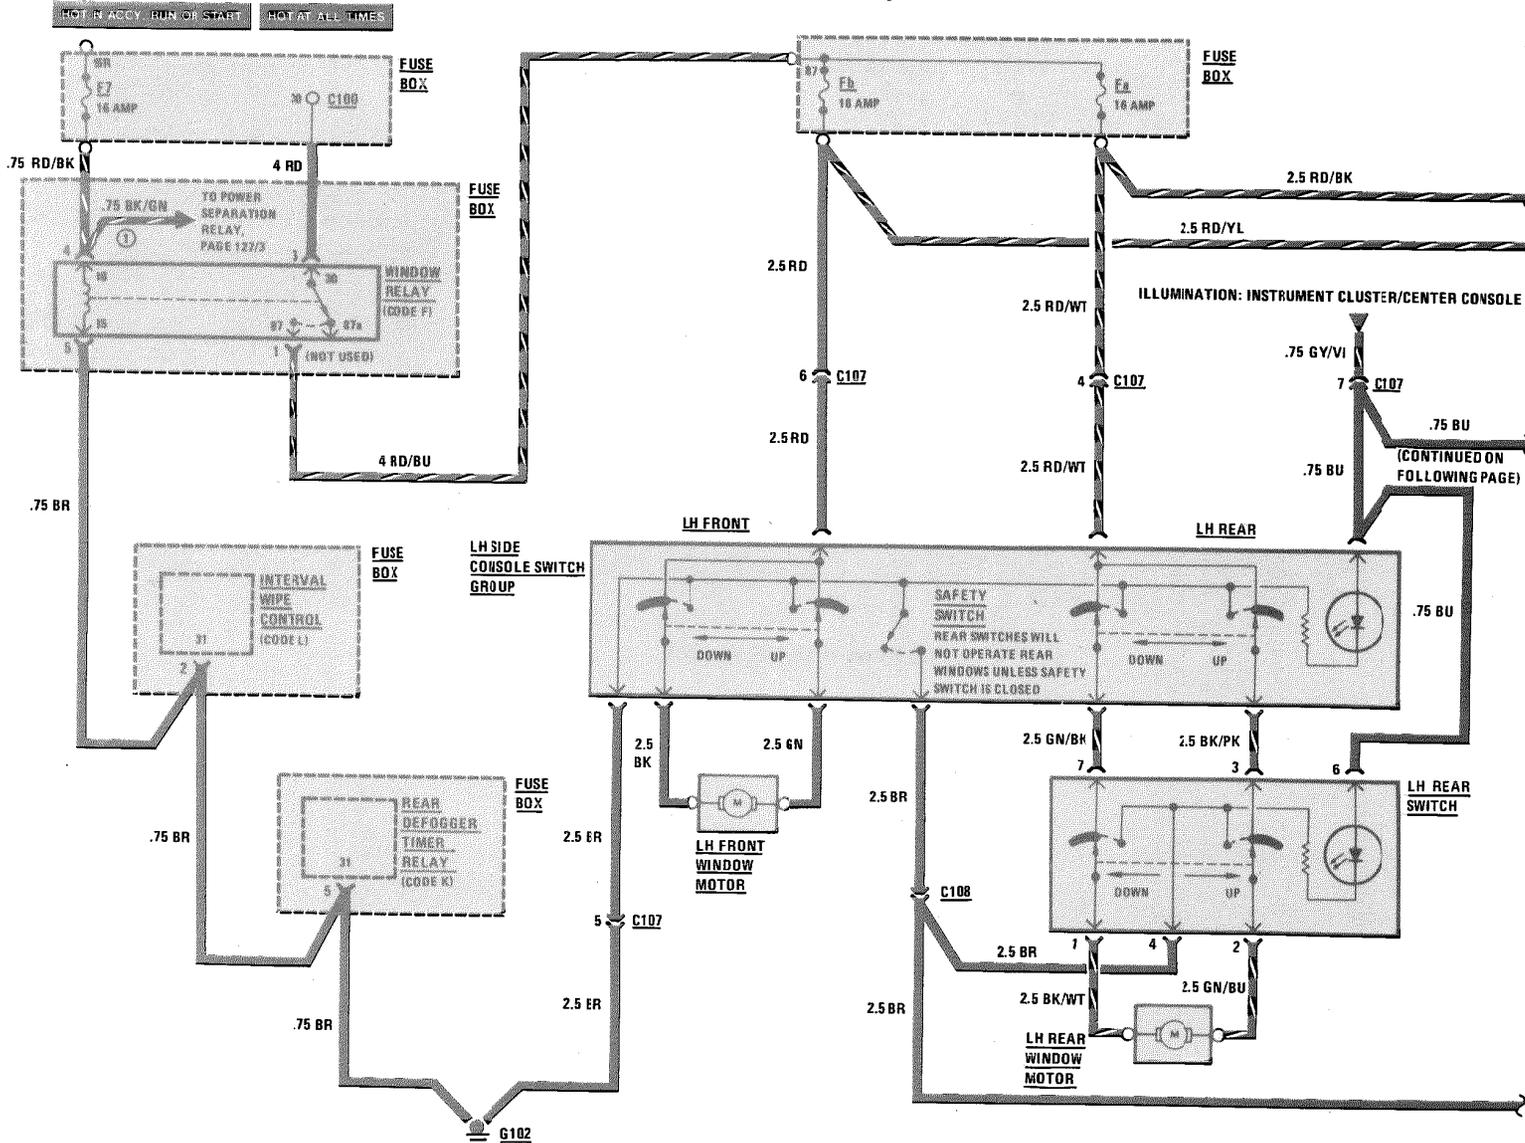

REVISIONS: ① AS OF MODEL YEAR 1984

2.5 RD/BK
2.5 RD/YL

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

.75 GV/VI
C107
.75 BU
(CONTINUED ON FOLLOWING PAGE)

LH FRONT

LH REAR

LH SIDE CONSOLE SWITCH GROUP

LH FRONT WINDOW MOTOR


LH REAR WINDOW MOTOR

G102

POWER WINDOWS

MY 1983/MY 1984/MY 1985

(For Component Locations See Page 213)

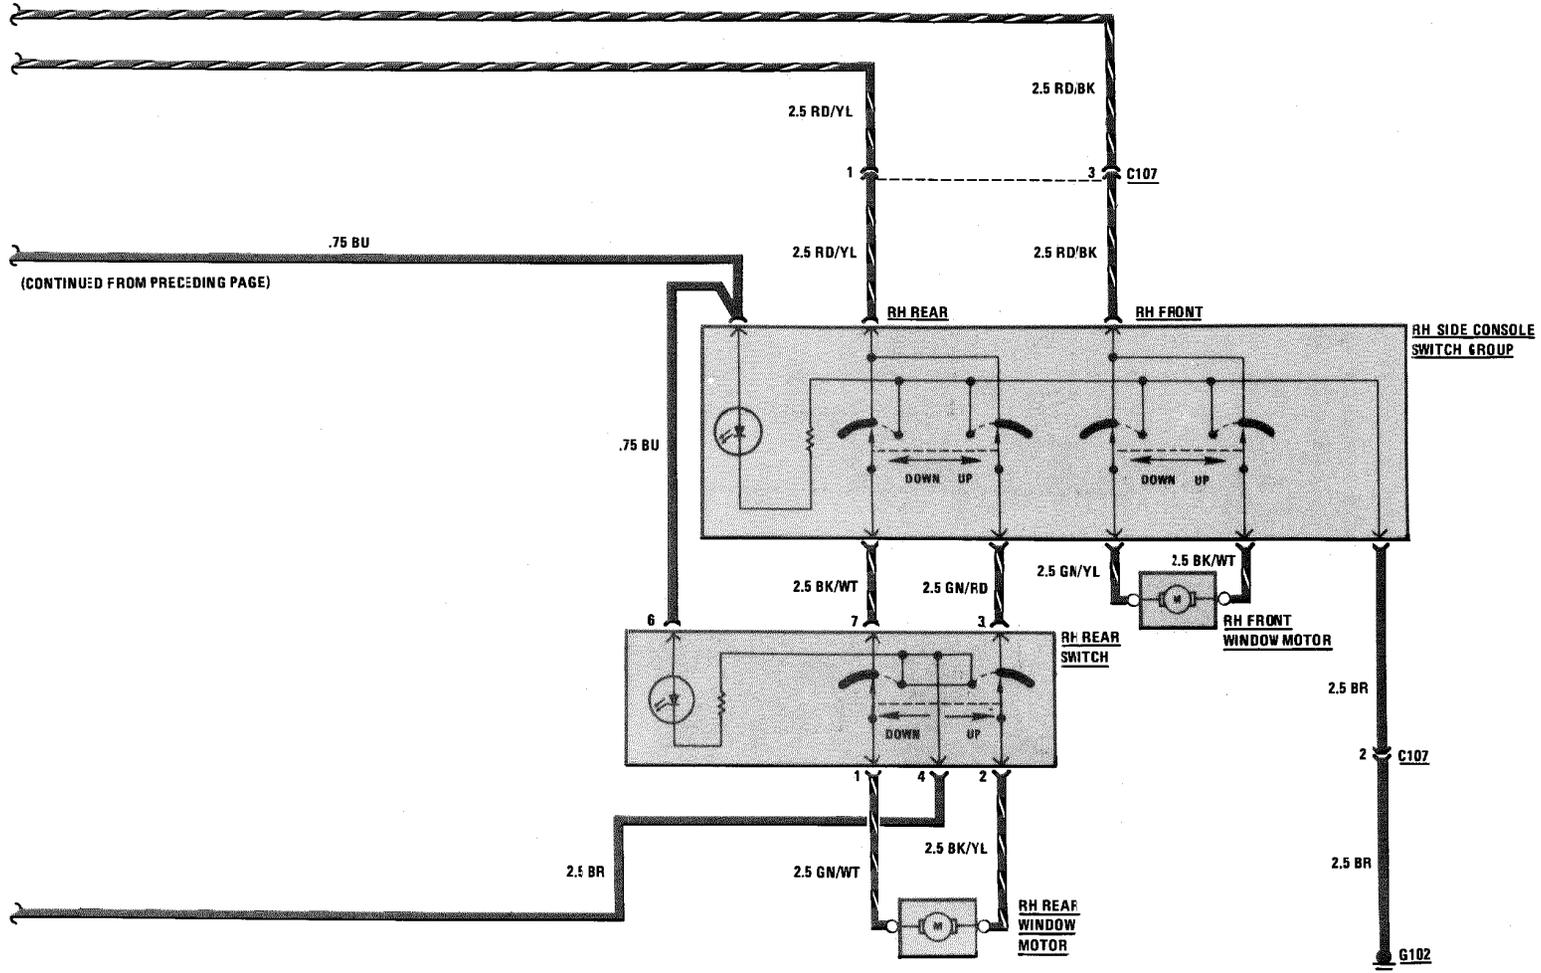

126.120


131

<p>REVISIONS:</p>

CENTRAL LOCKING SYSTEM

MY 1983

(For Component Locations See Page 204)

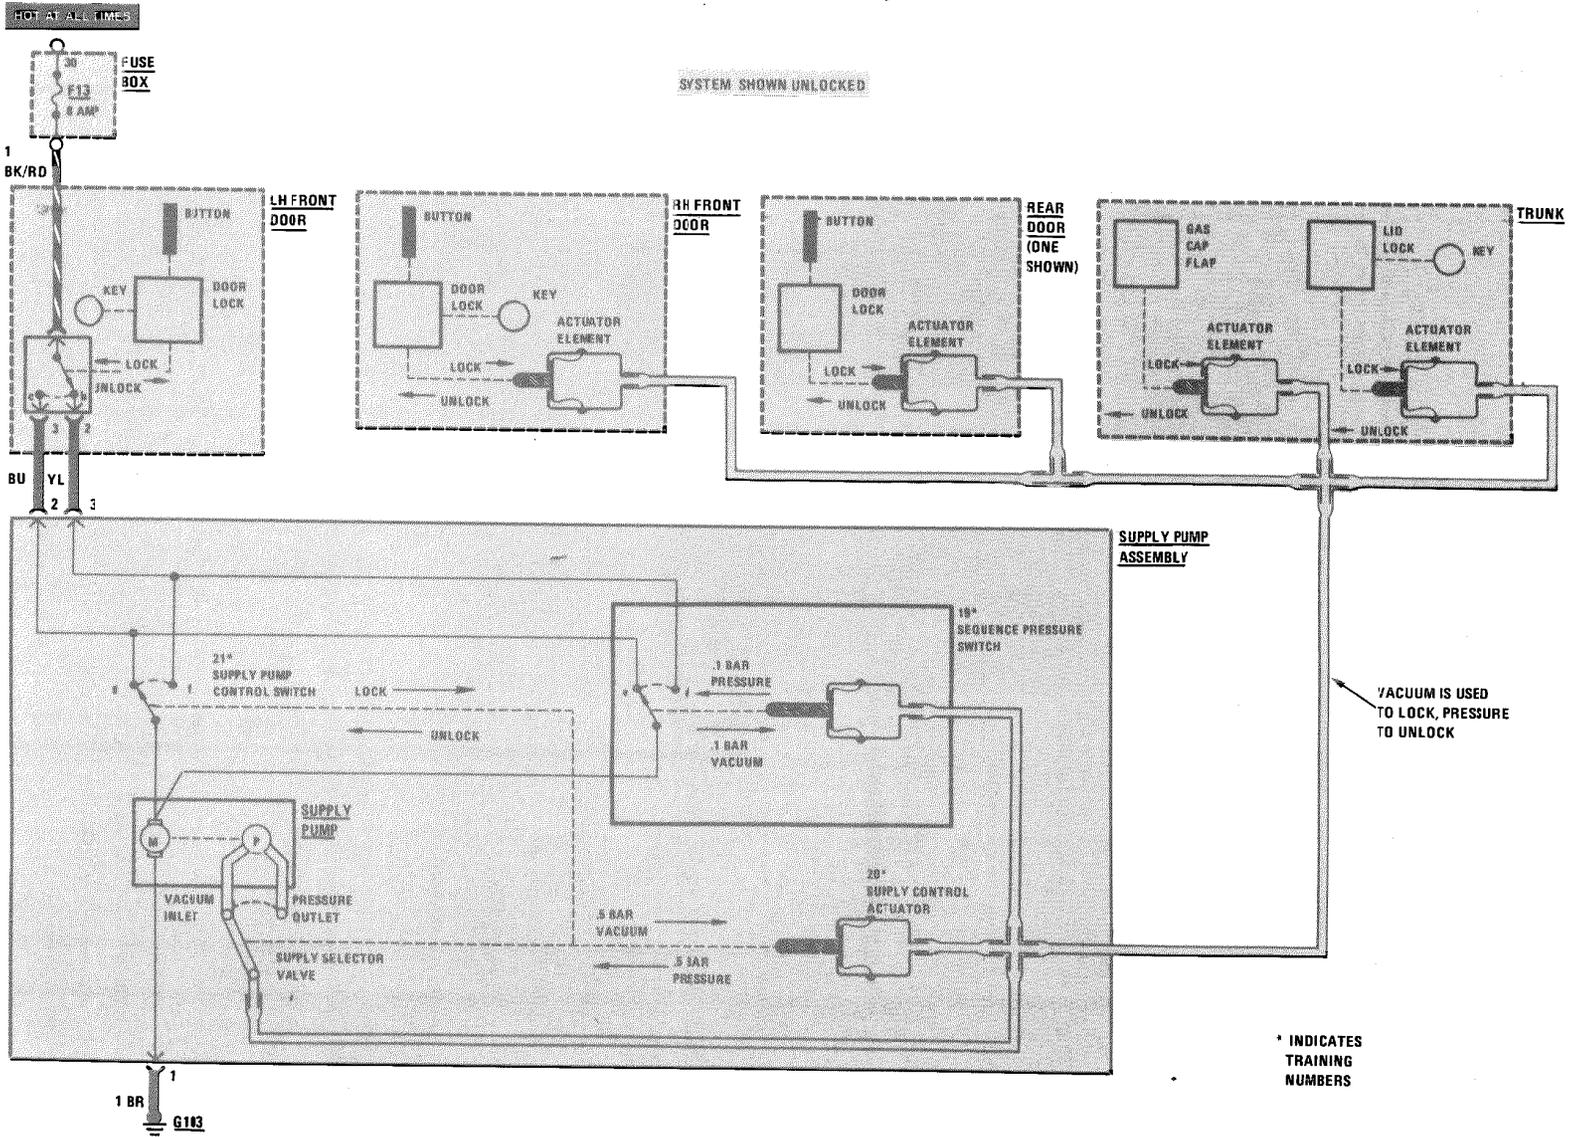

126.120

REVISIONS:


4/86

CENTRAL LOCKING SYSTEM

(For Component Locations See Page 204)

MY 1984

HOT AT ALL TIMES

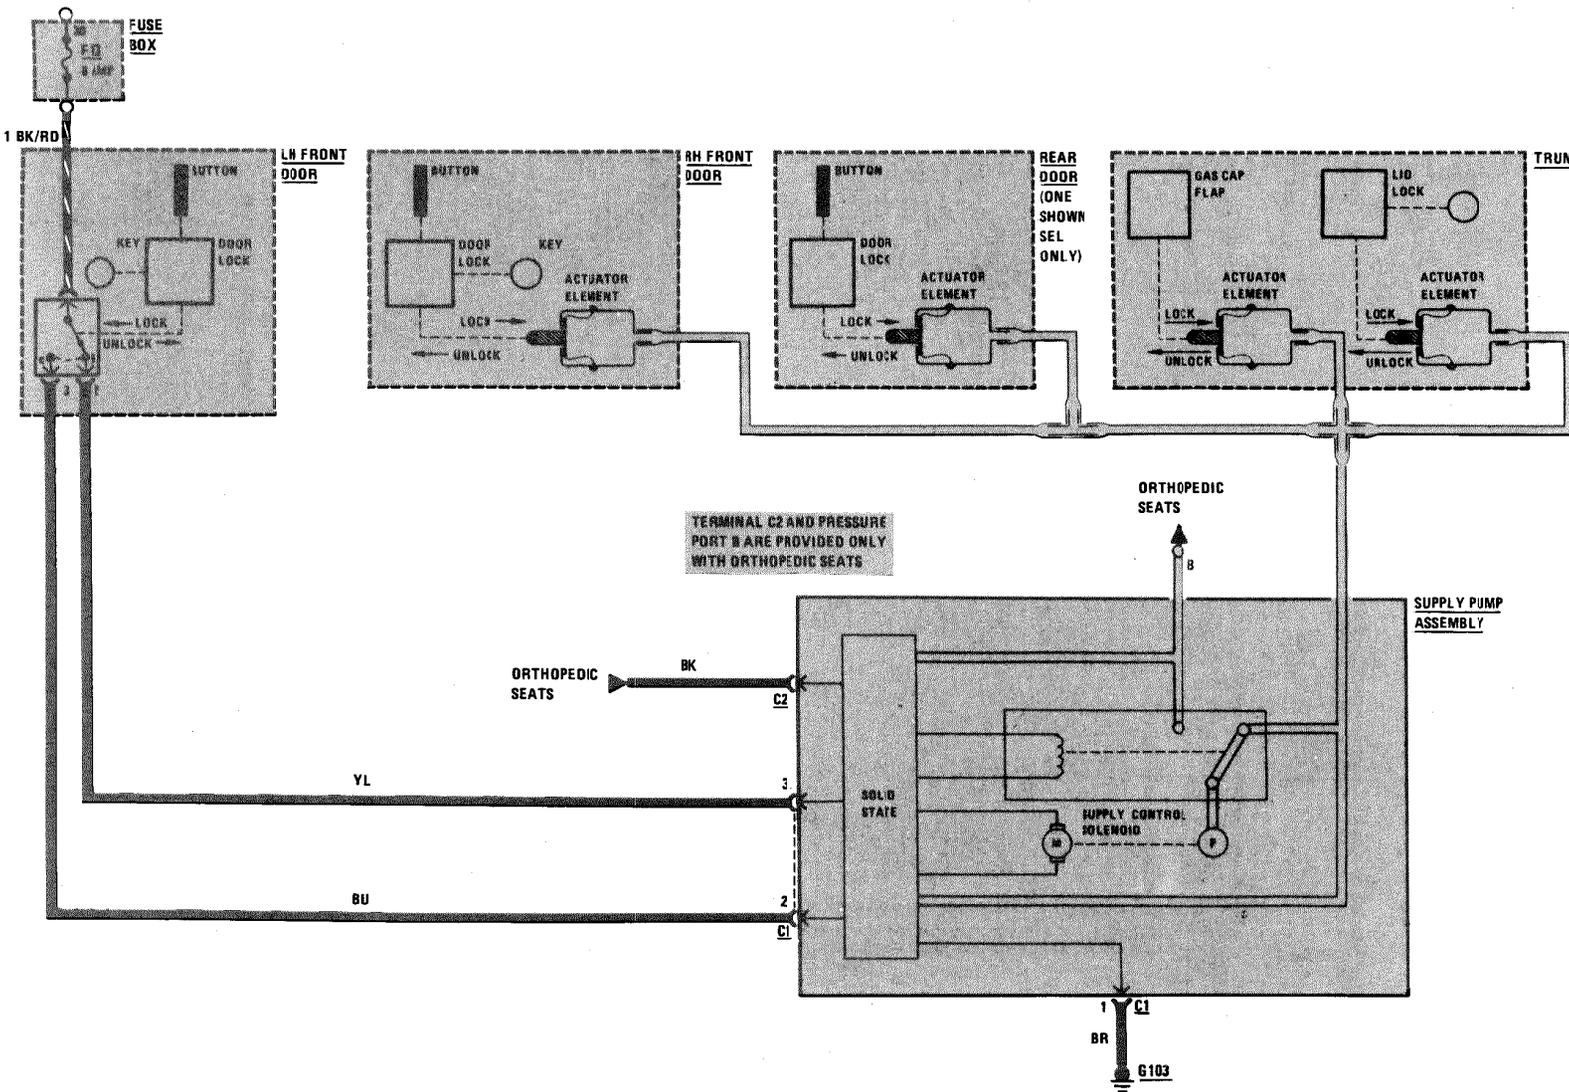

126.120

132/1


REVISIONS:

--

CENTRAL LOCKING SYSTEM

(For Component Locations See Page 204)

MY 1985

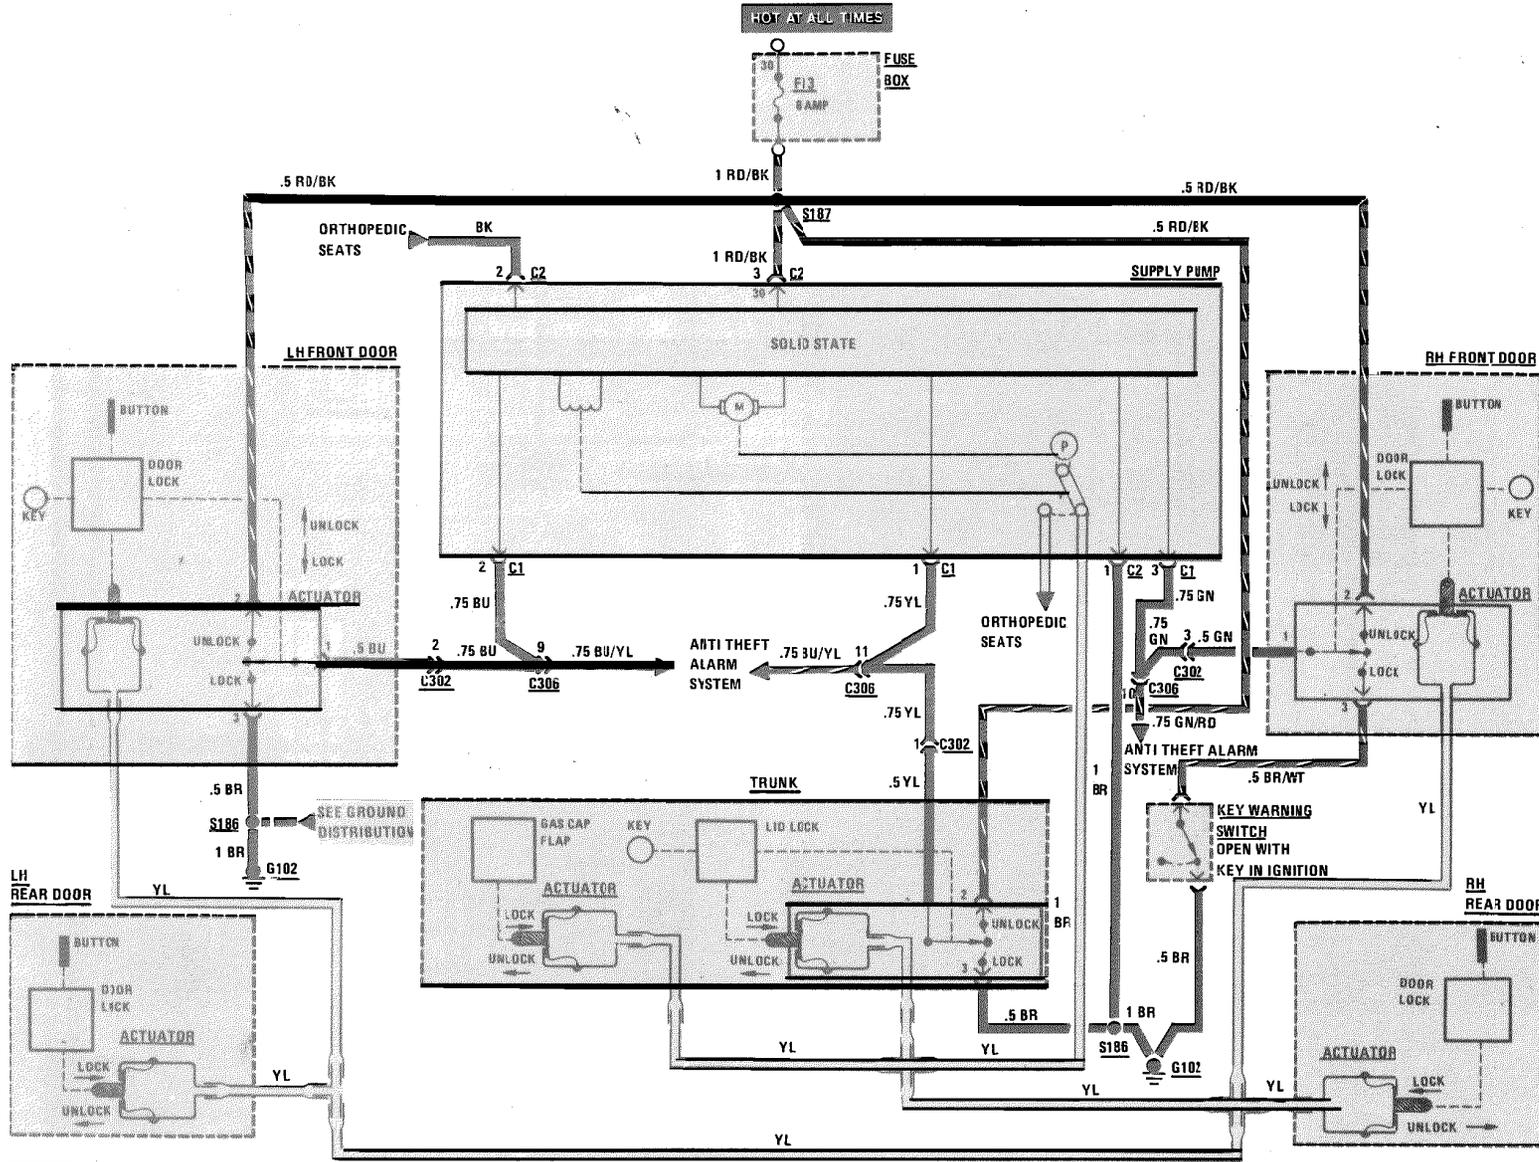

REVISIONS:

132/2

126.120

4/86


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

MY 1984

(For Component Locations See Page 216)

WARNING:

GAS GENERATORS ARE TI PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTALLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 13-PIN CONNECTOR (C176). THE CONNECTOR IS LOCATED UNDER THE RH FRONT FOOTREST. GROUP H OF THE SERVICE MICROFICHE SYSTEM AND GROUP 91 OF THE 1985 "INTRODUCTION MANUAL" CONTAIN PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

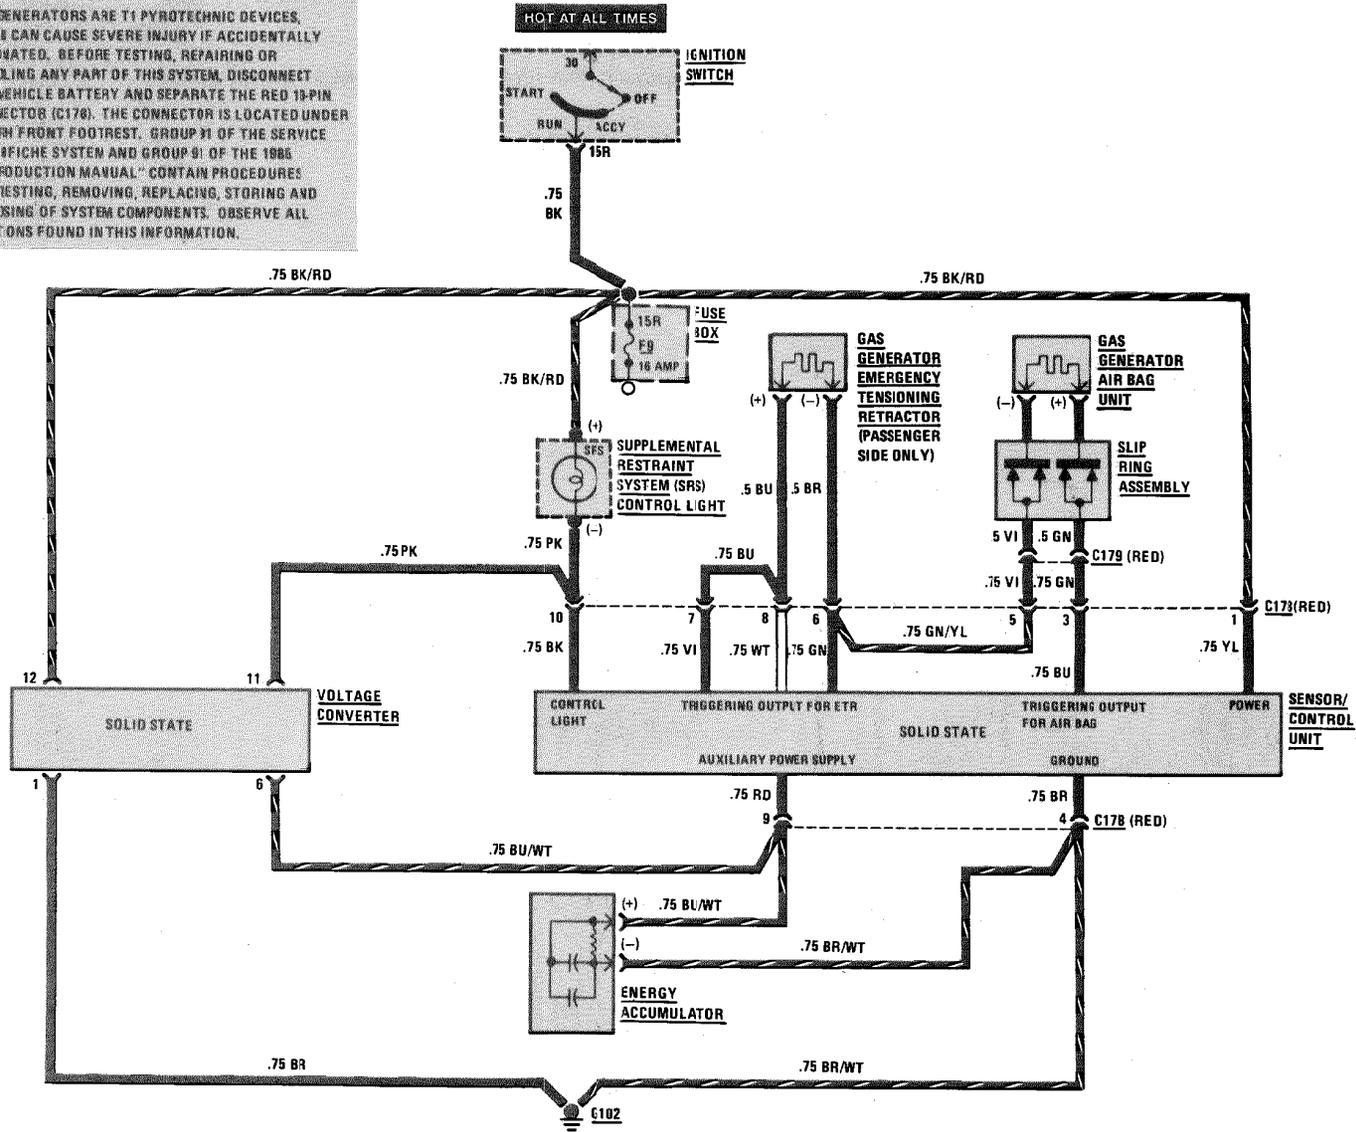

REVISIONS:


--

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) (WITH AIR BAG)

MY 1985

(For Component Locations See Page 216)

WARNING:
 GAS GENERATORS ARE TI PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTALLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 18-PIN CONNECTOR (C178). THE CONNECTOR IS LOCATED UNDER THE RR FRONT FOOTREST. GROUP 91 OF THE SERVICE MICROFICHE SYSTEM AND GROUP 91 OF THE 1985 "INTRODUCTION MANUAL" CONTAIN PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

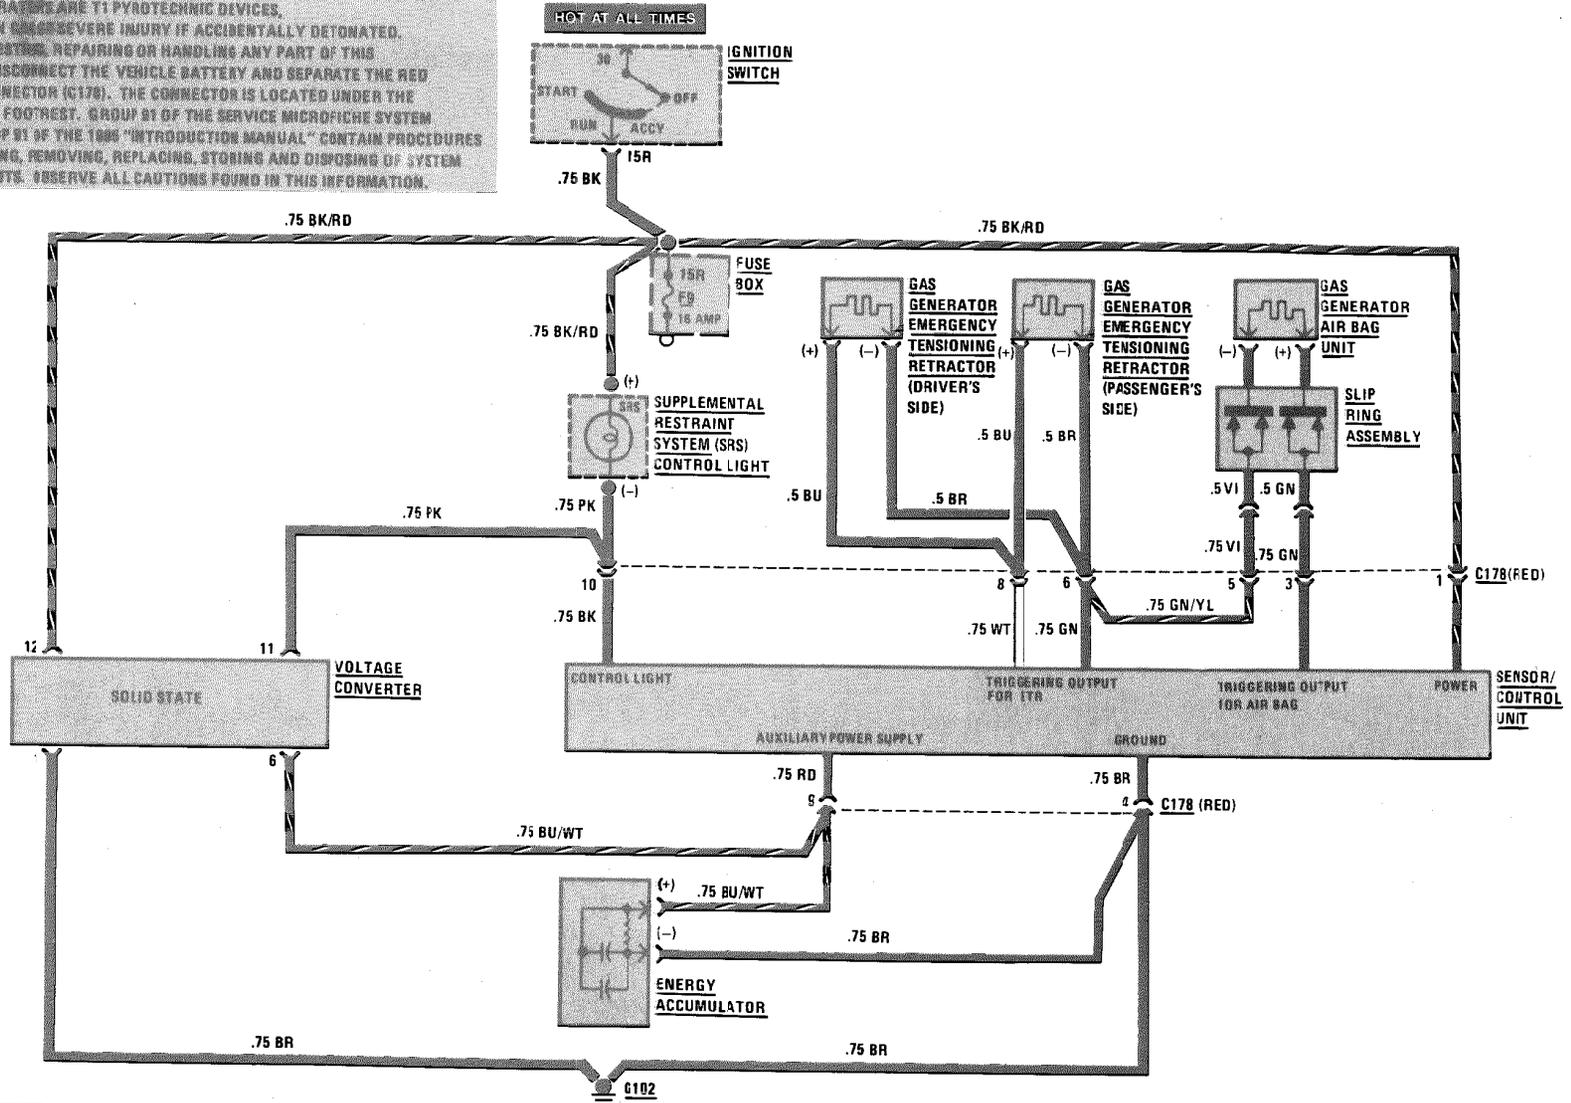


REVISIONS:

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) WITHOUT AIR BAG

MY 1985

(For Component Locations See Page 216)

WARNING:
 GAS GENERATORS ARE TI PYROTECHNIC DEVICES, WHICH CAN CAUSE SEVERE INJURY IF ACCIDENTALLY DETONATED. BEFORE TESTING, REPAIRING OR HANDLING ANY PART OF THIS SYSTEM, DISCONNECT THE VEHICLE BATTERY AND SEPARATE THE RED 19-PIN CONNECTOR (C178). THE CONNECTOR IS LOCATED UNDER THE AN FRONT FOOTREST. GROUP #1 OF THE SERVICE MICROPHONE SYSTEM AND GROUP #1 OF THE 1088 "INTRODUCTION MANUAL" CONTAINS PROCEDURES FOR TESTING, REMOVING, REPLACING, STORING, AND DISPOSING OF SYSTEM COMPONENTS. OBSERVE ALL CAUTIONS FOUND IN THIS INFORMATION.

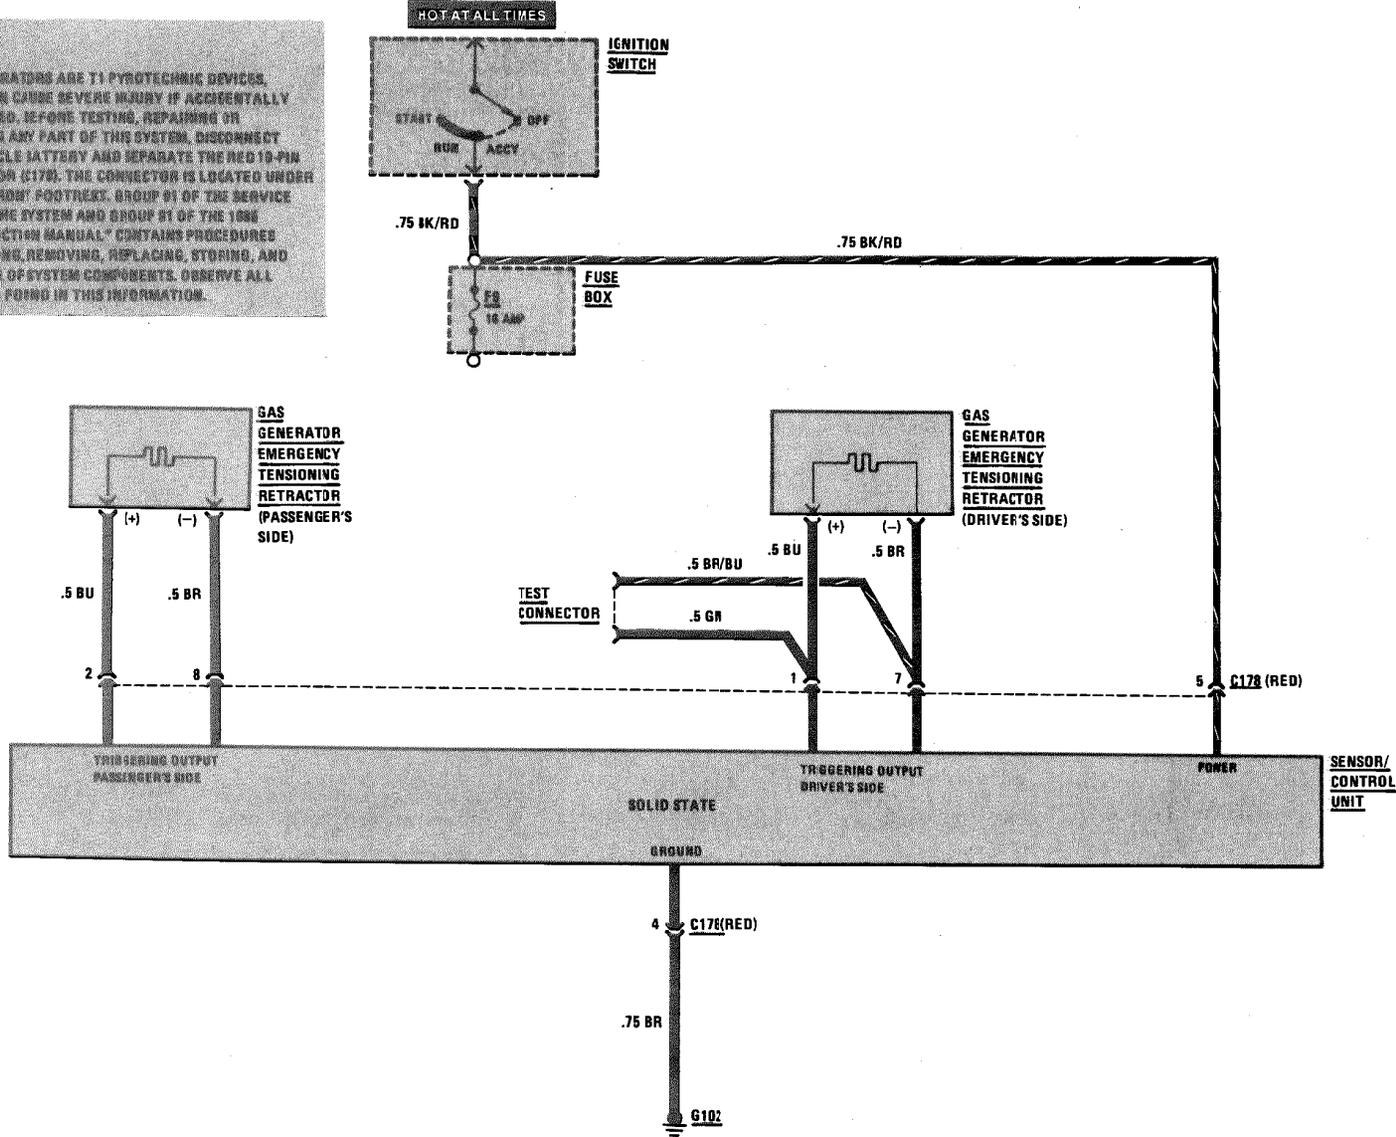

4/86

126.120

133/2


REVISIONS

--

REAR DEFOGGER/SLIDING ROOF

(For Component Locations See Page 214)

MY 1983/MY 1984/MY 1985

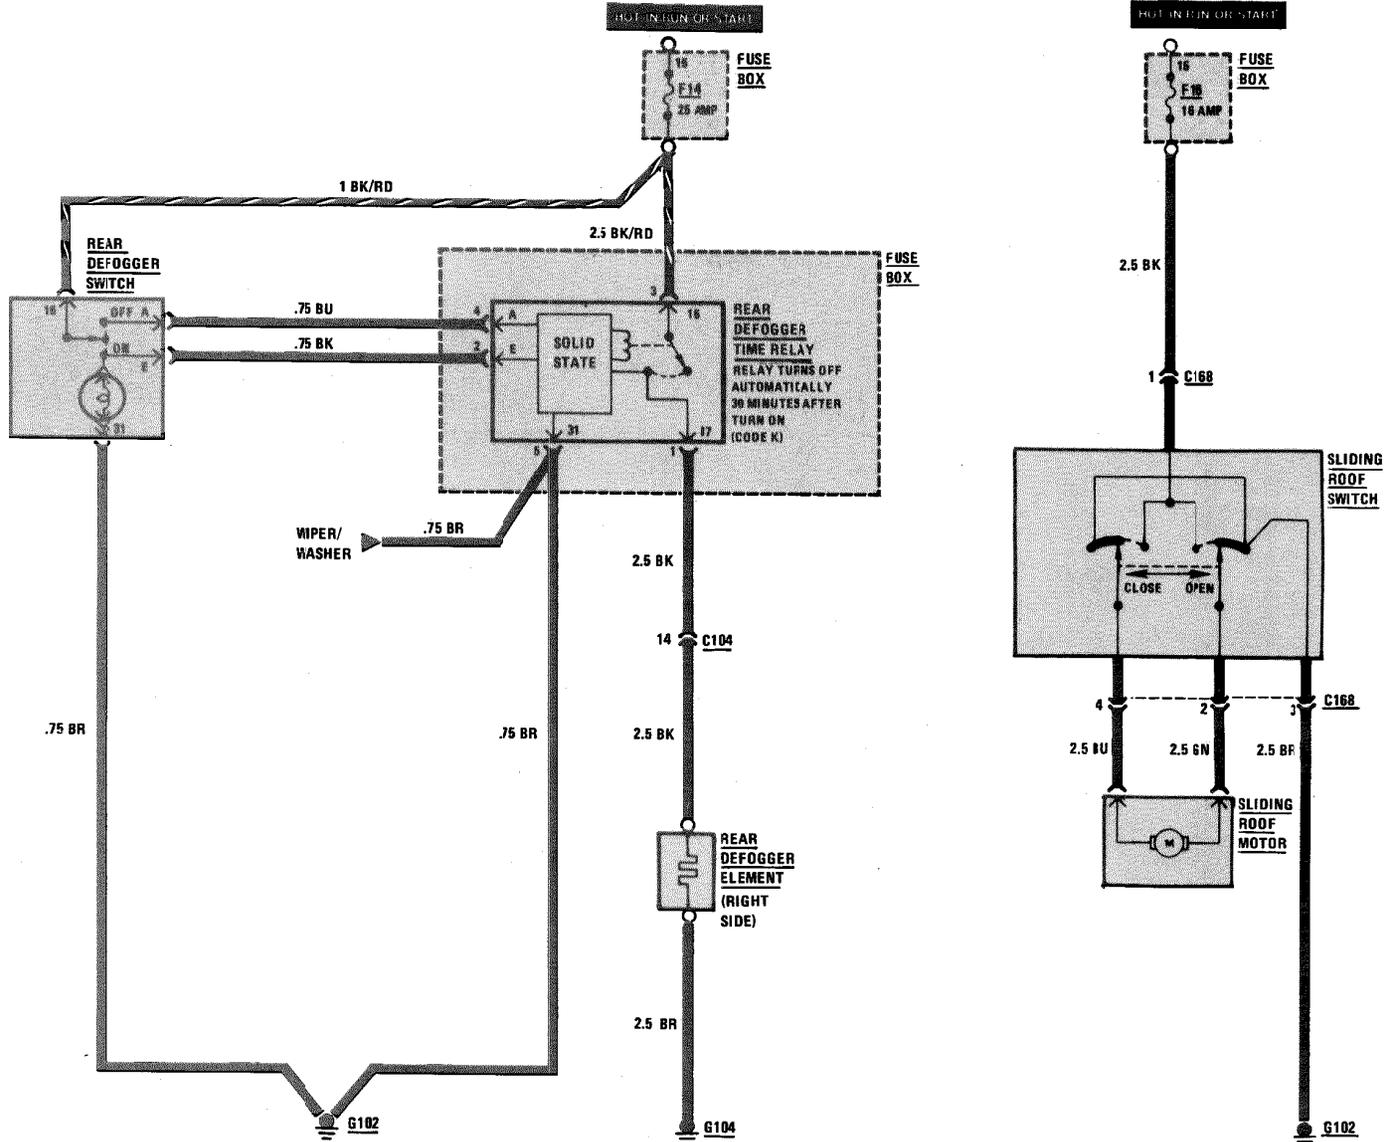


REVISIONS:

RH OUTSIDE MIRROR

(For Component Locations See Page 214)

MY 1983/MY 1984

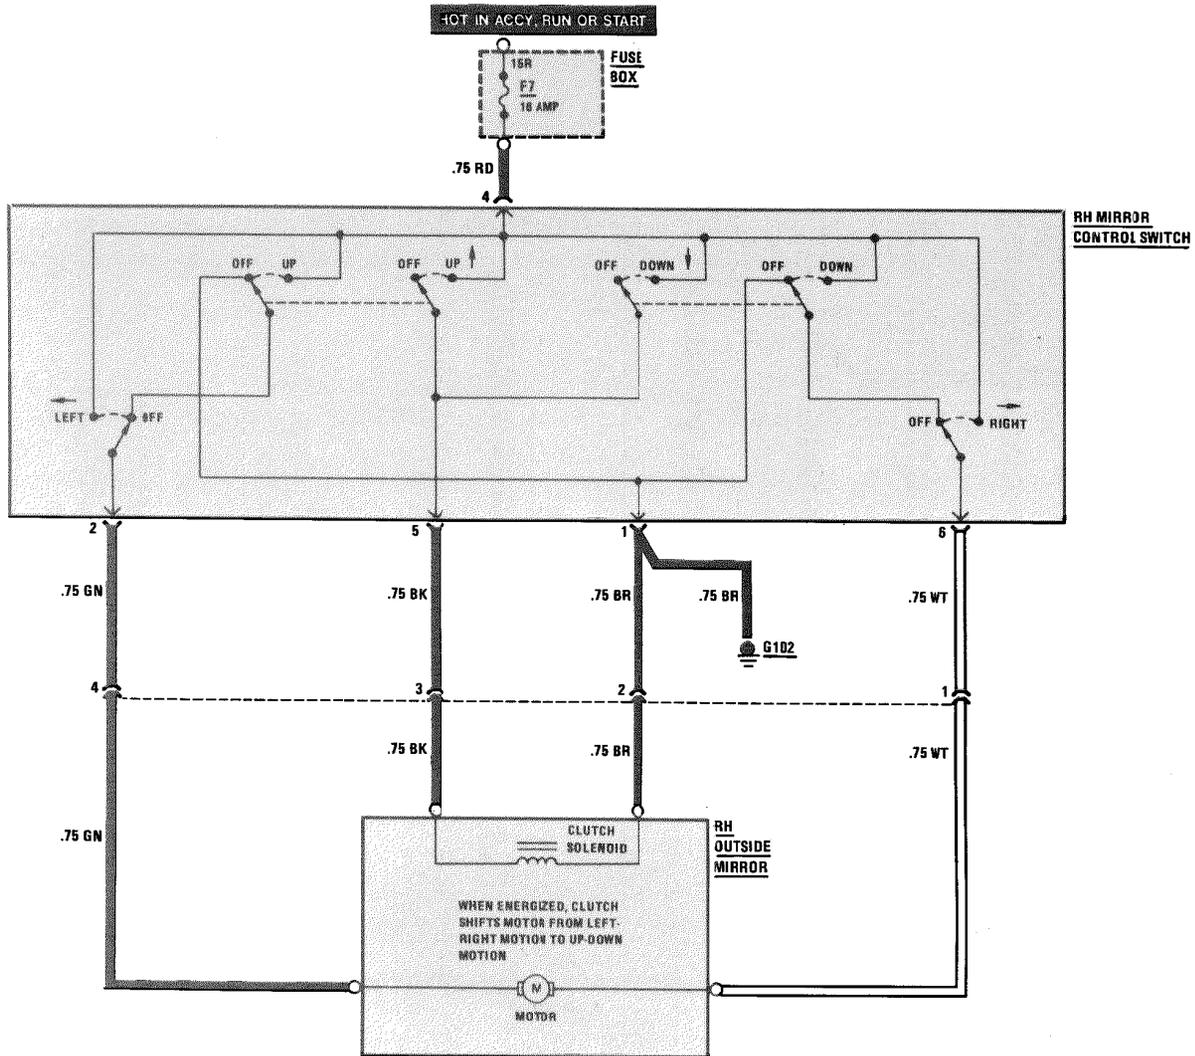


REVISIONS:

OUTSIDE HEATED MIRRORS

(For Component Locations See Page 211)

MY 1985

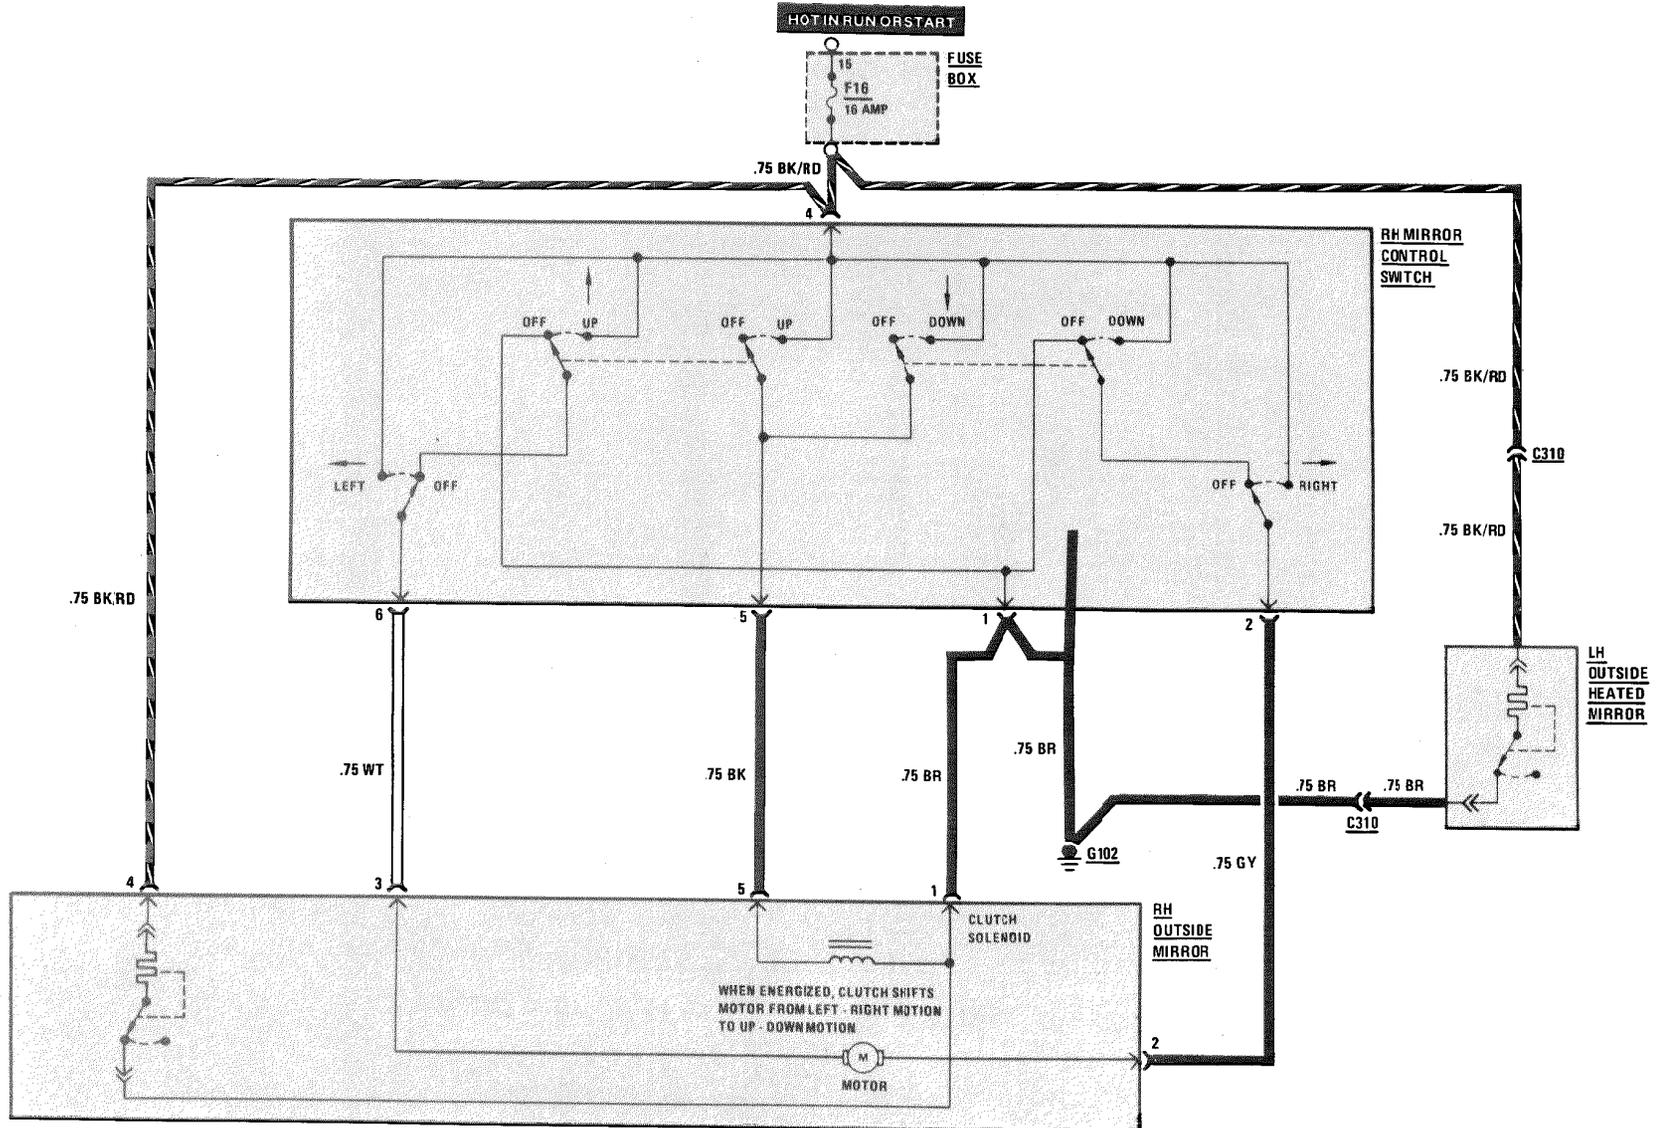

REVISIONS:

135/1

126.120

4/86

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

--

ANTI LOCK BRAKE SYSTEM

(For Component Locations See Page 201)

126.120

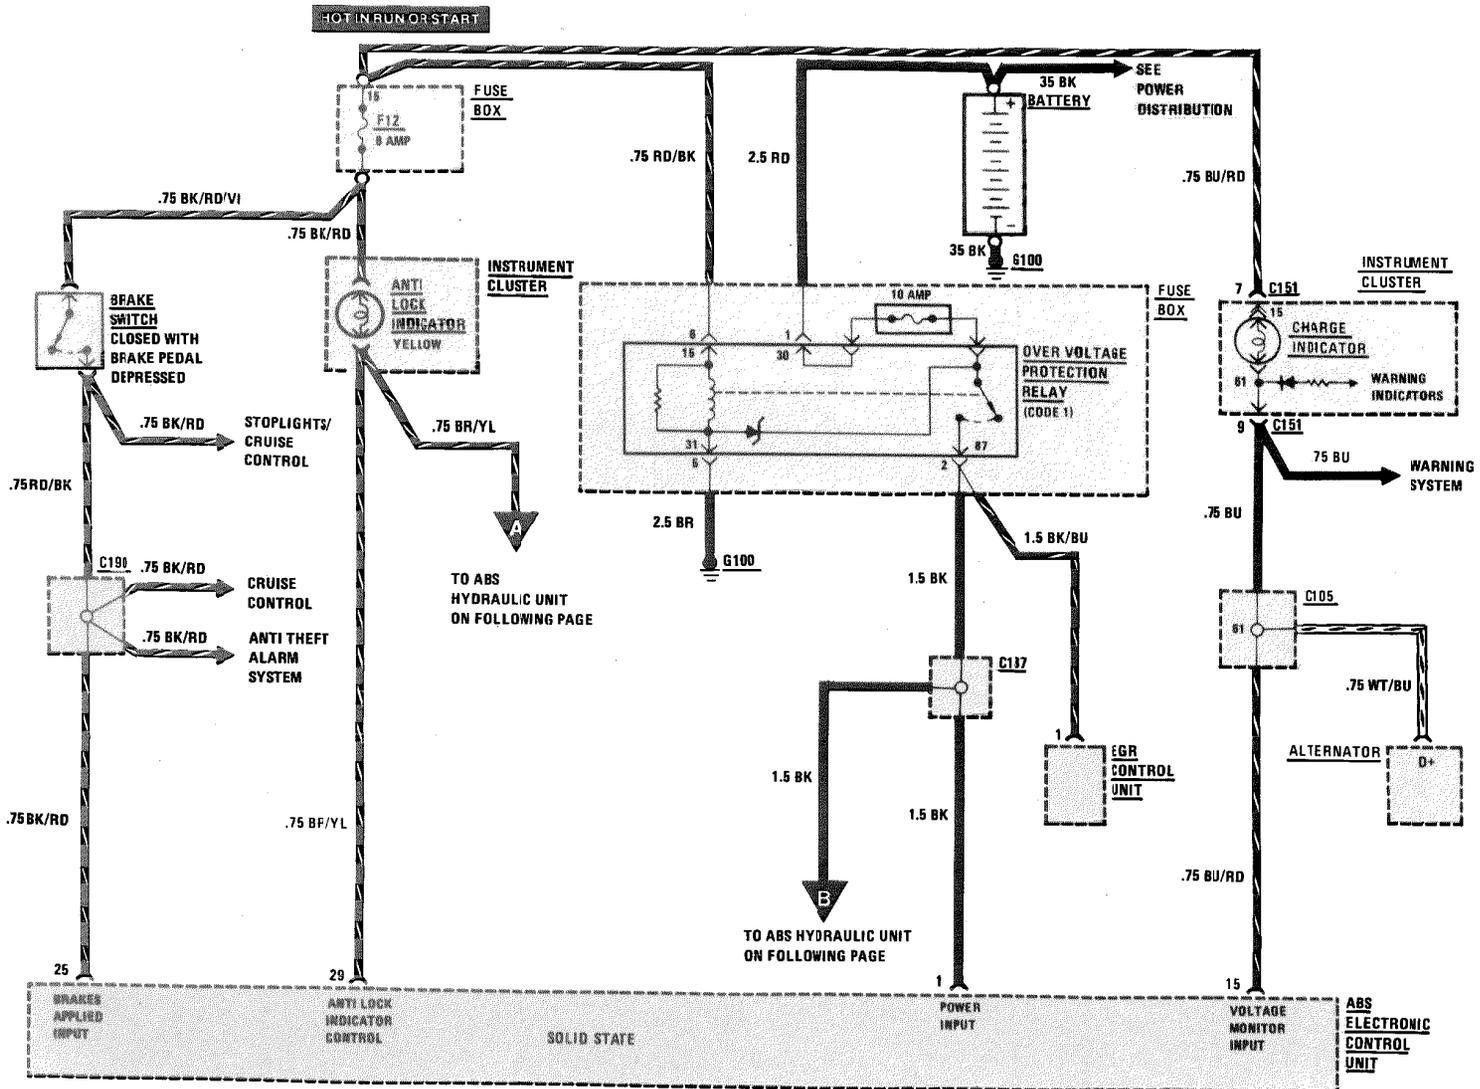


REVISIONS:

ANTI LOCK BRAKE SYSTEM

(For Component Locations See Page 201)

MY 1985

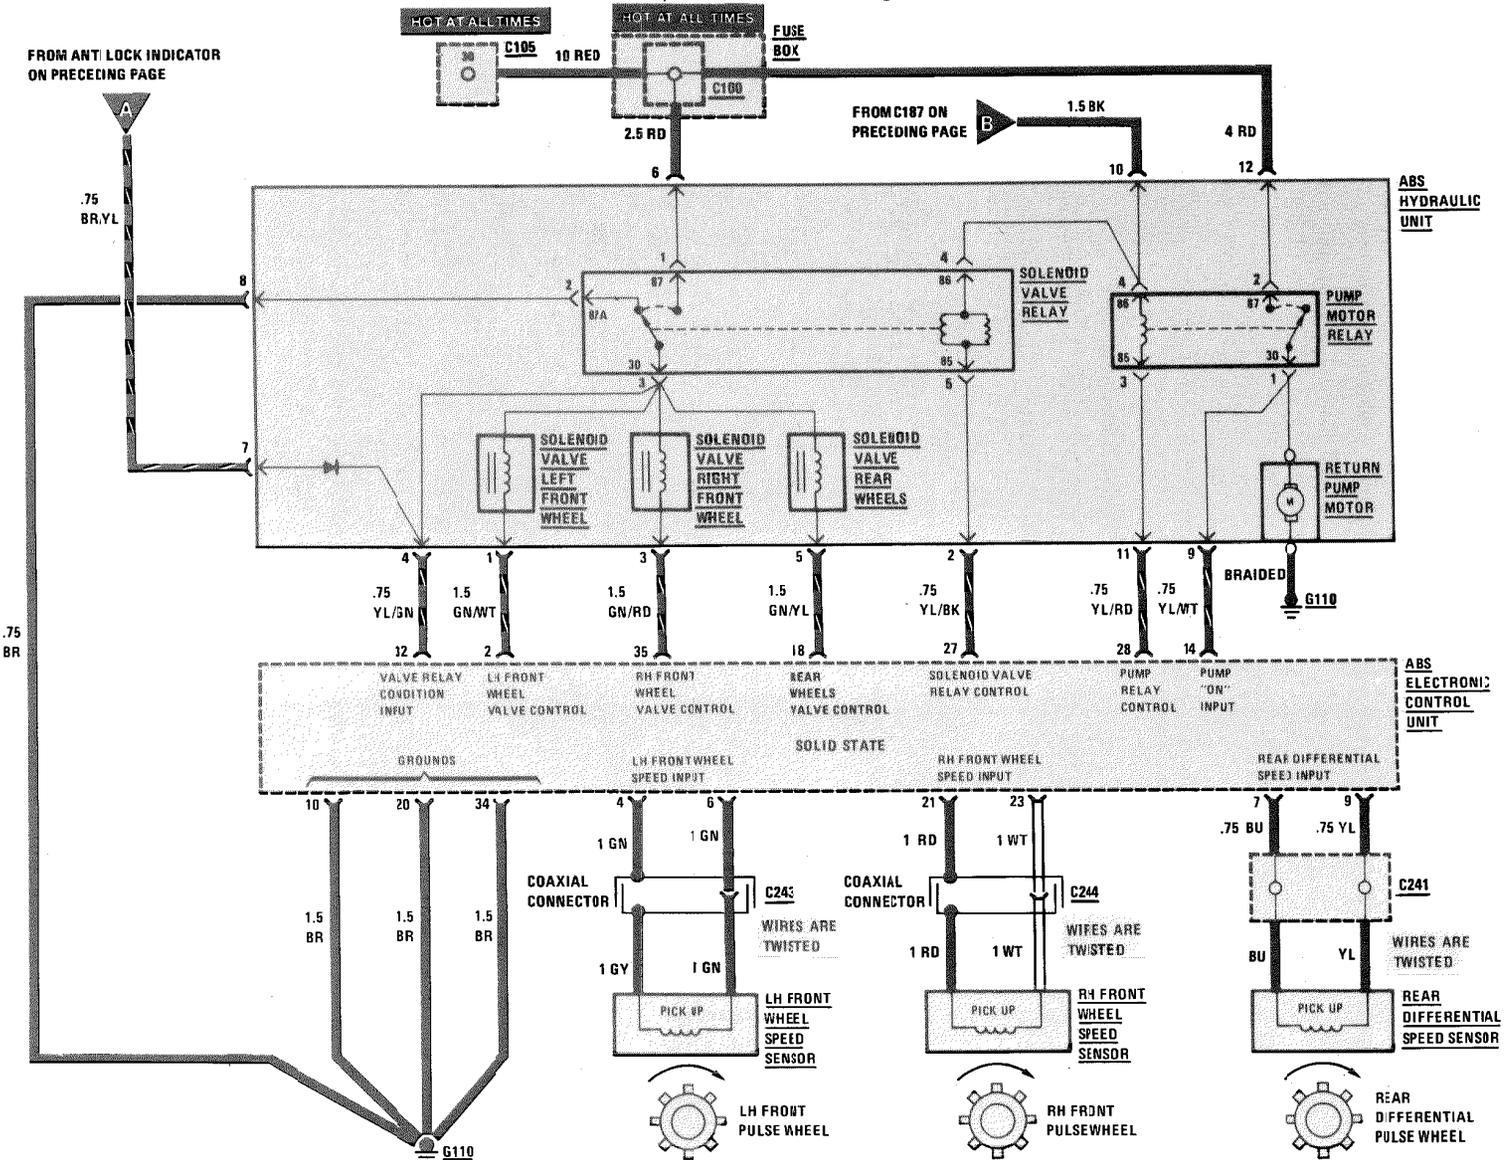

REVISIONS:

1/87

126.120


137

ANTI THEFT ALARM SYSTEM

(For Component Locations See Page 201)

MY 1984

137/1

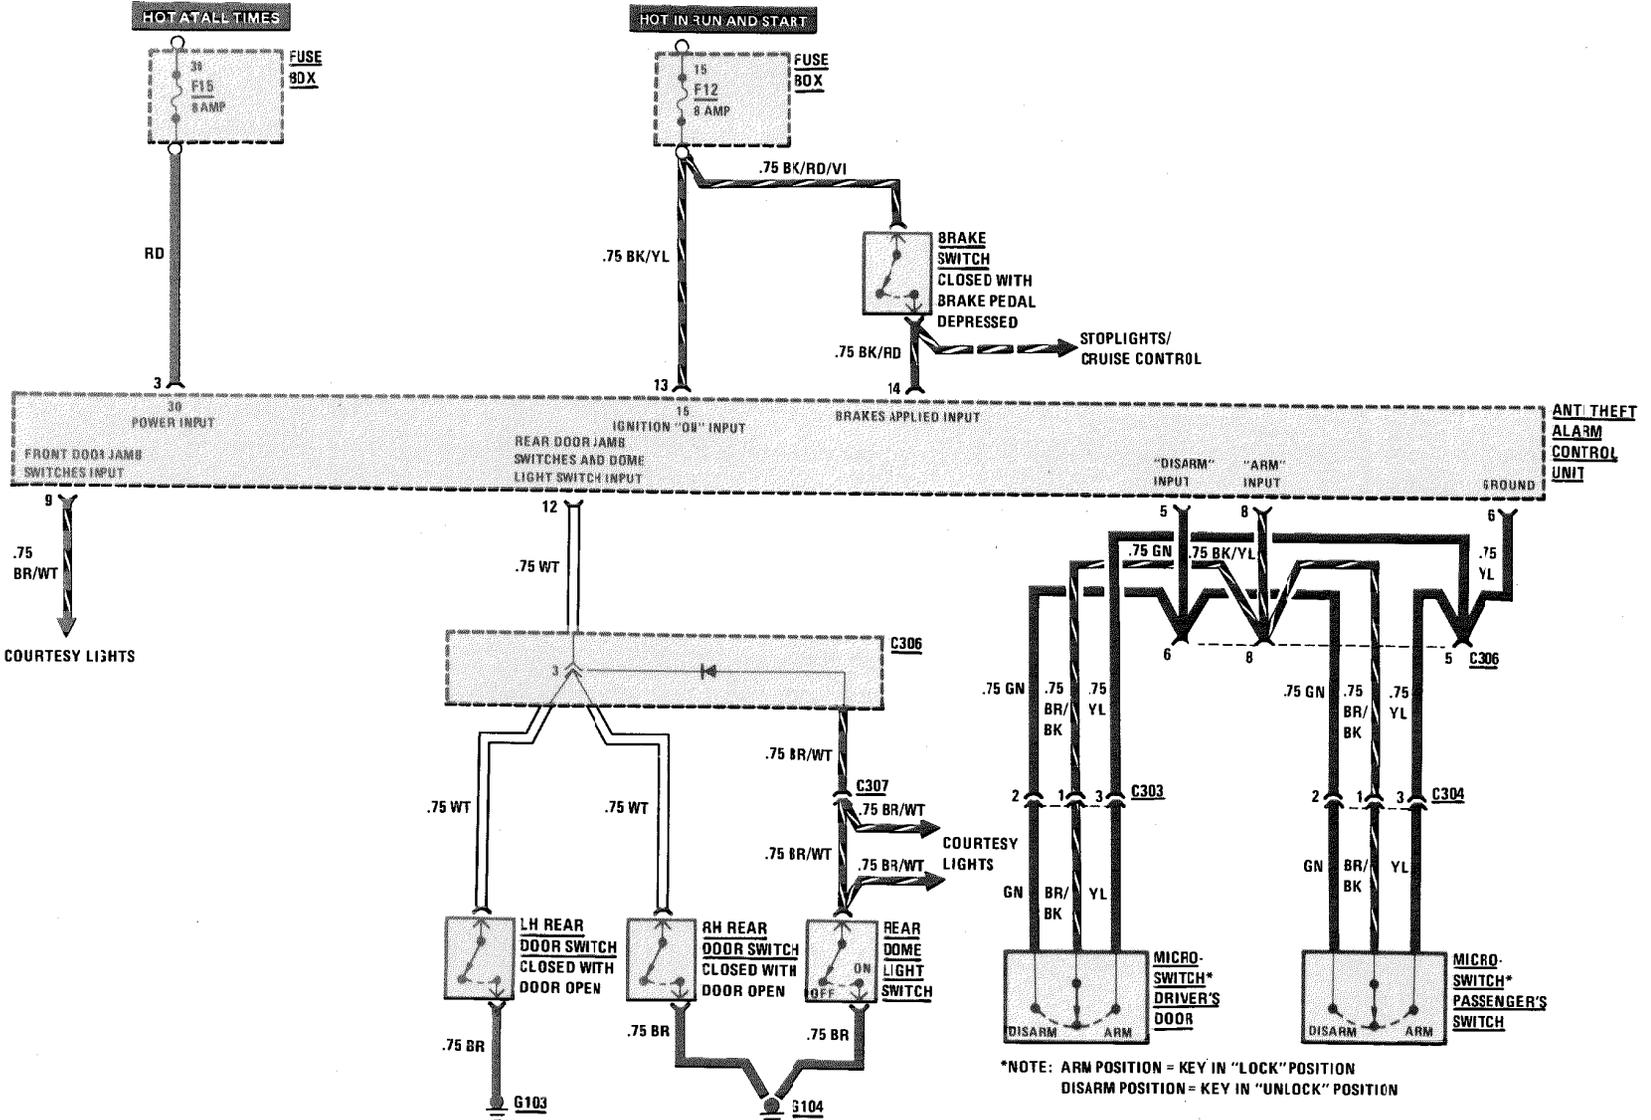

126.120


REVISIONS:

1/87

ANTI THEFT ALARM SYSTEM

MY 1985

(For Component Locations See Page 201)

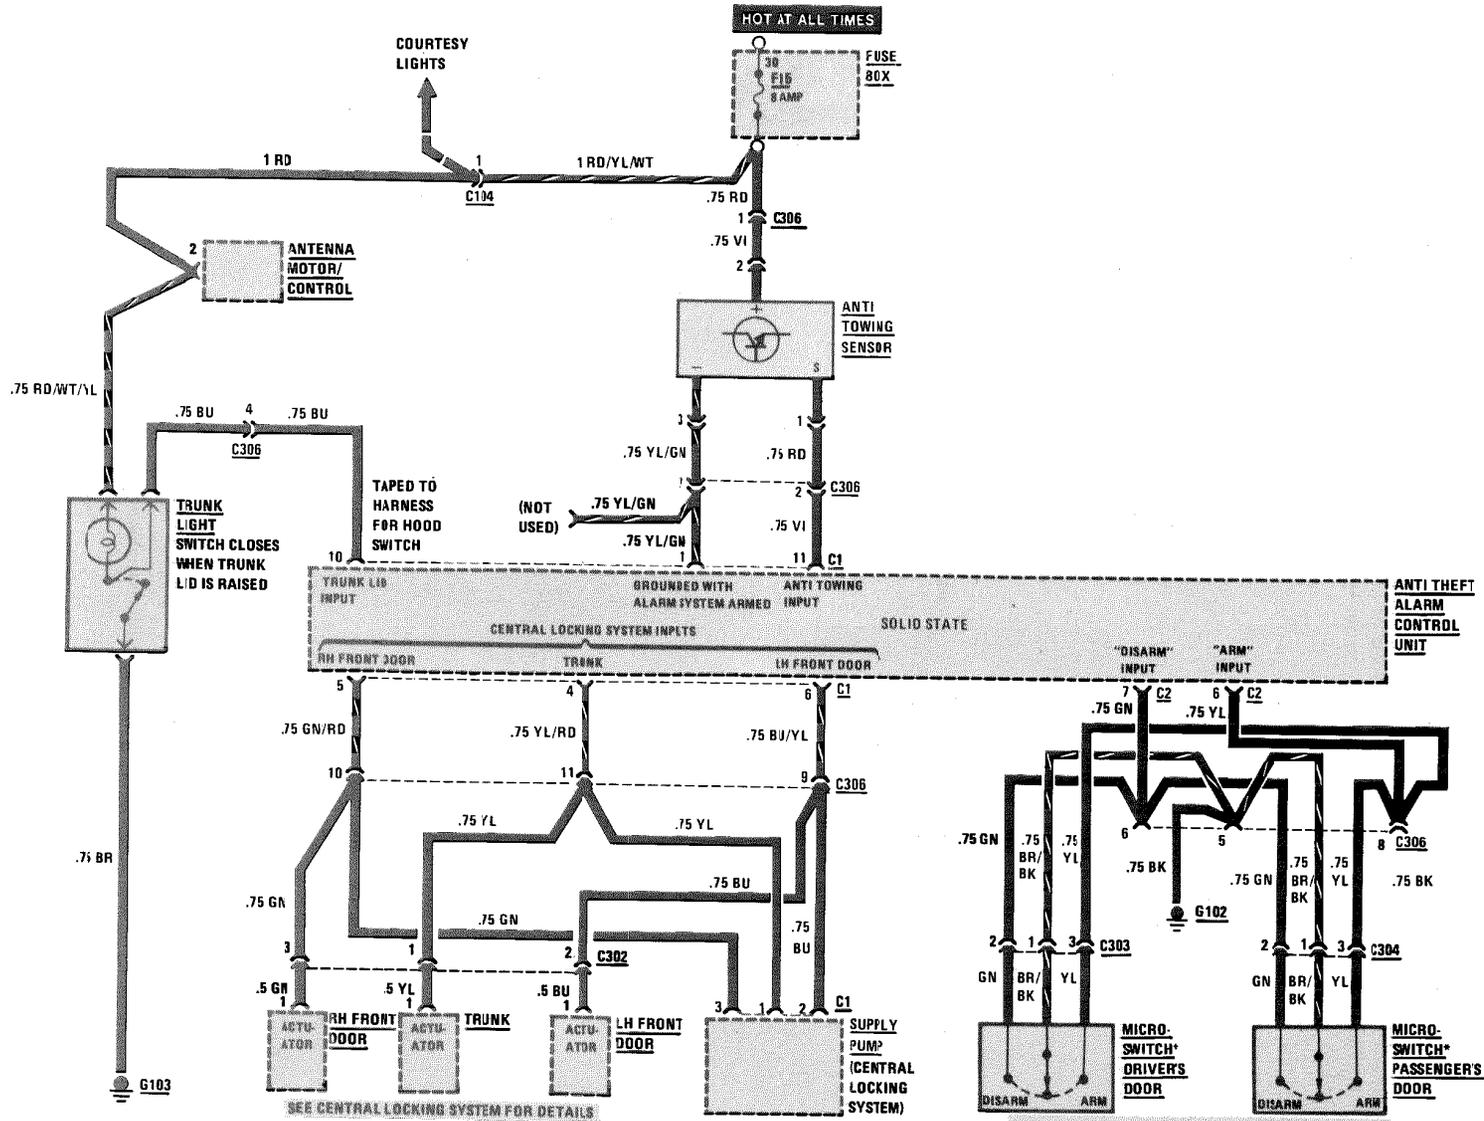

REVISIONS:


126.120

1/87

ANTI THEFT ALARM SYSTEM

MY 1985

(For Component Locations See Page 201)

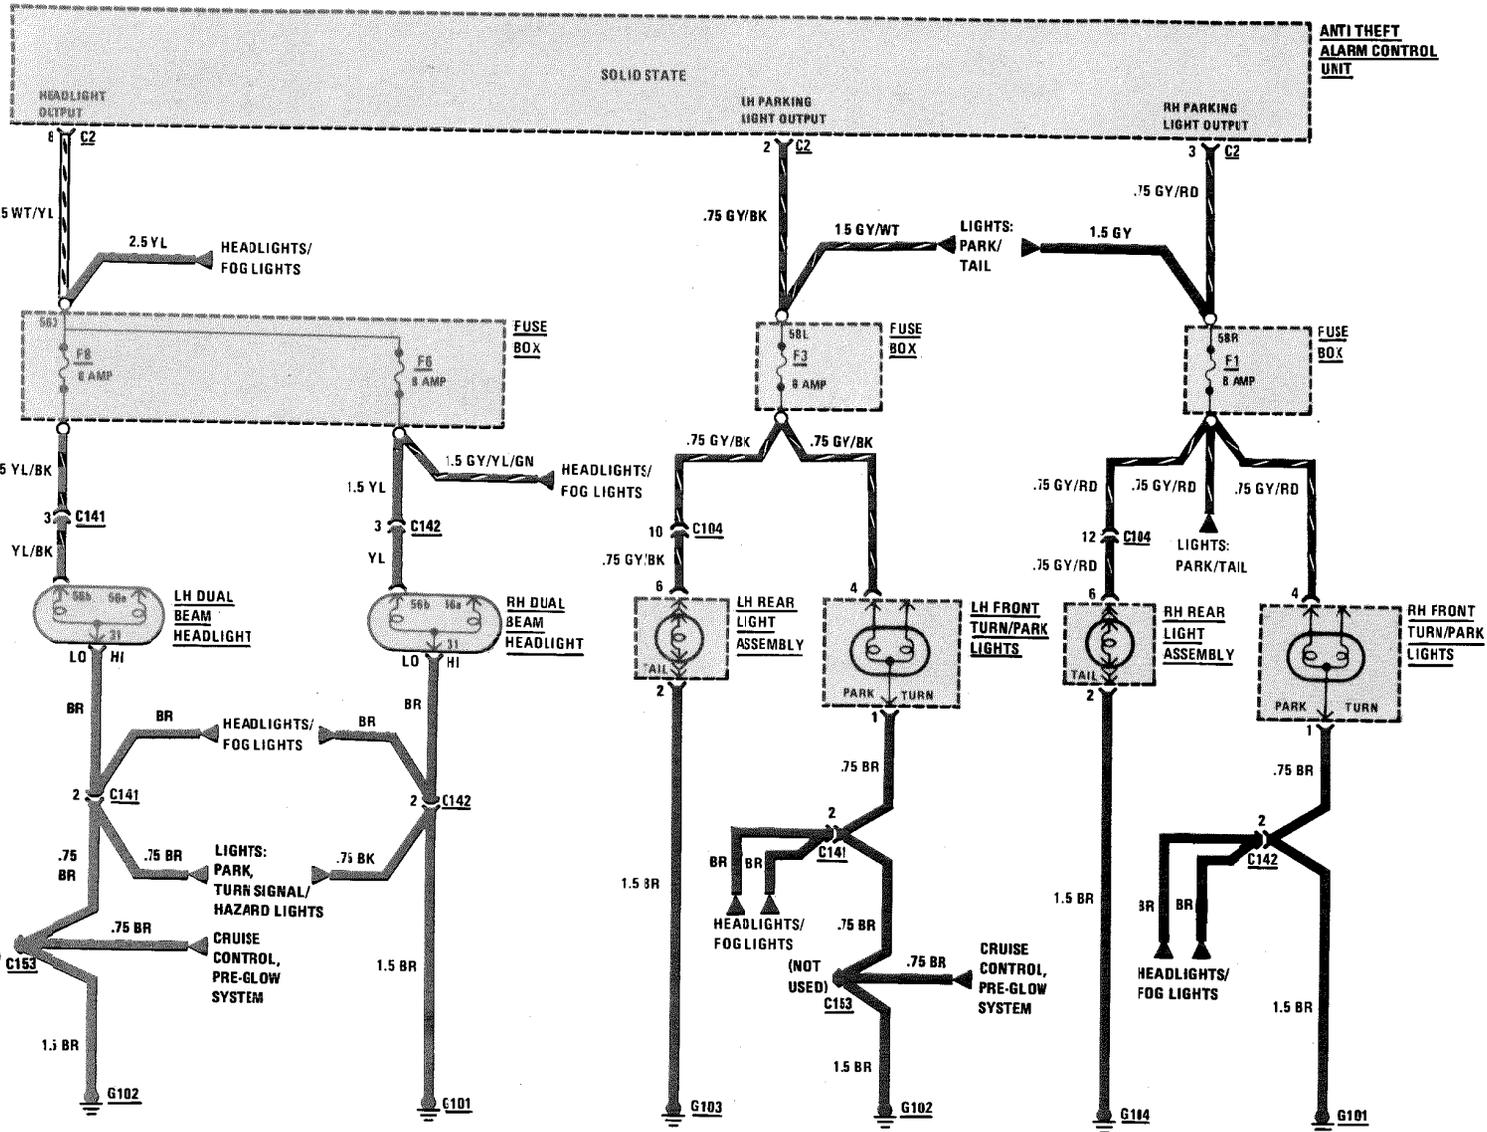


126.120

4/86


REVISIONS

GROUND DISTRIBUTION

MY 1983/MY 1984/MY 1985

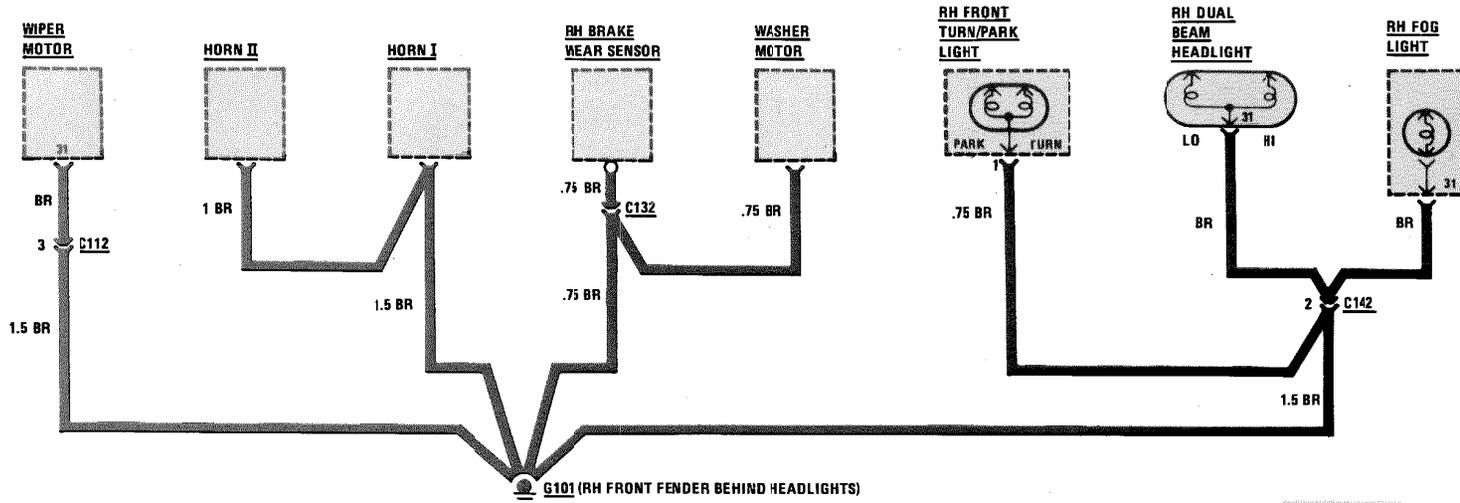



126.120

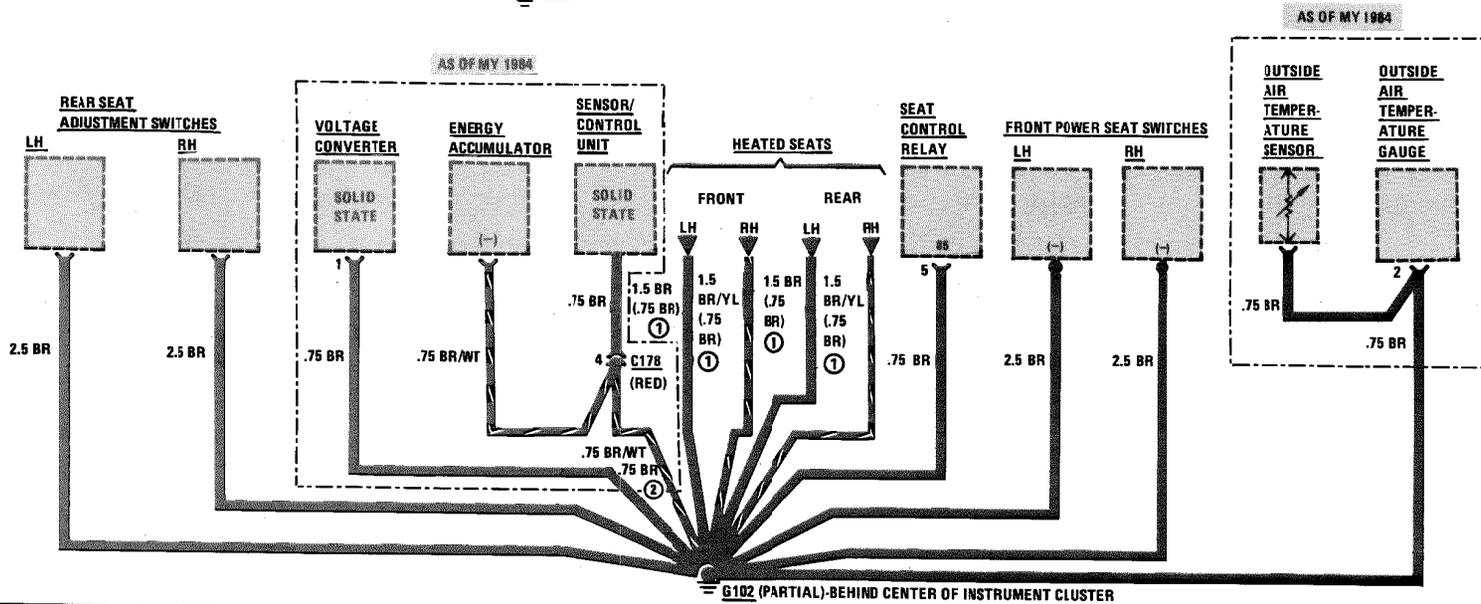

REVISIONS: ① MODEL YEAR 1984
 ② AS OF MODEL YEAR 1985

GROUND DISTRIBUTION



MY 1983/MY 1984/MY 1985

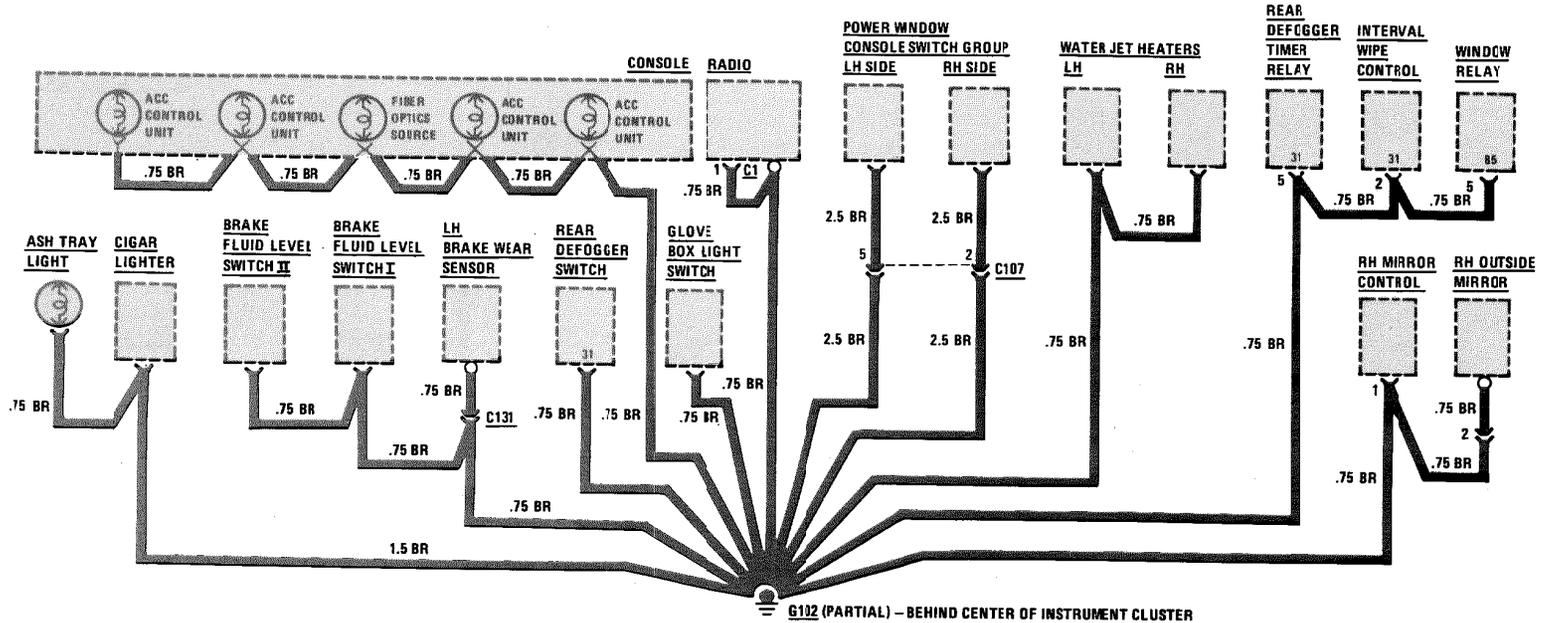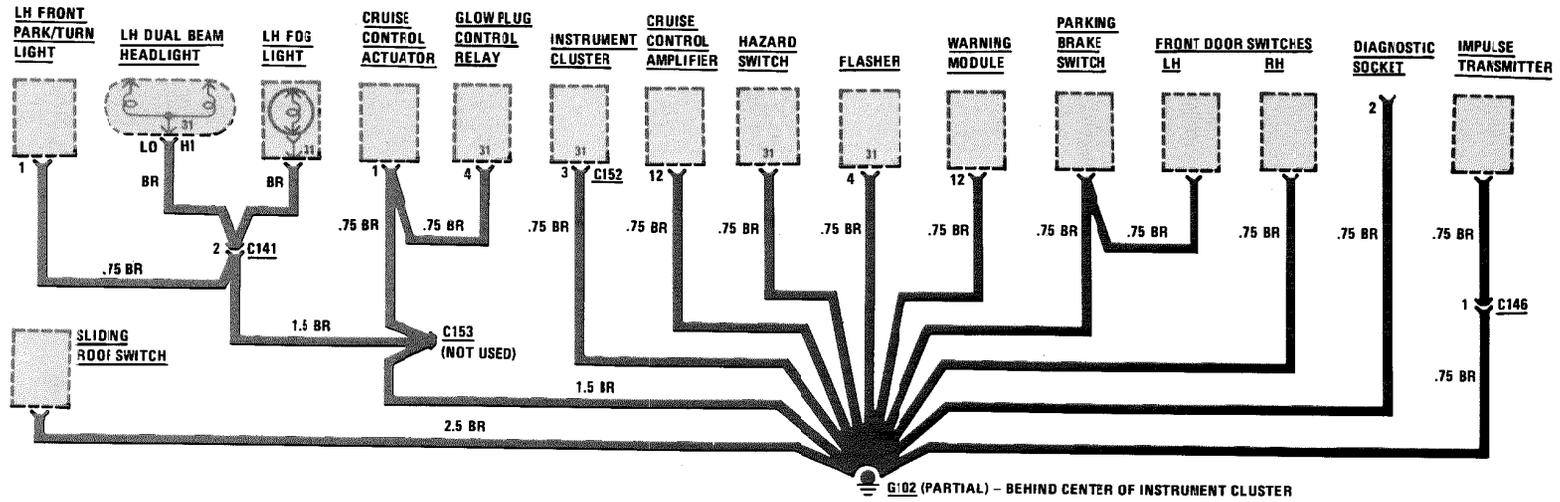

REVISIONS:

GROUND DISTRIBUTION

MY 1983/MY 1984/MY 1985

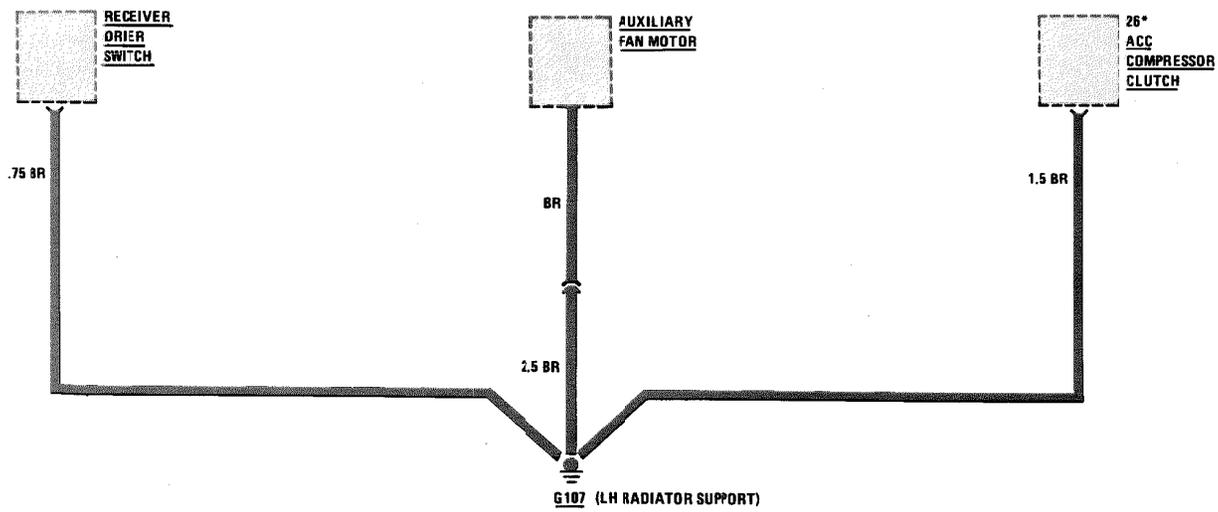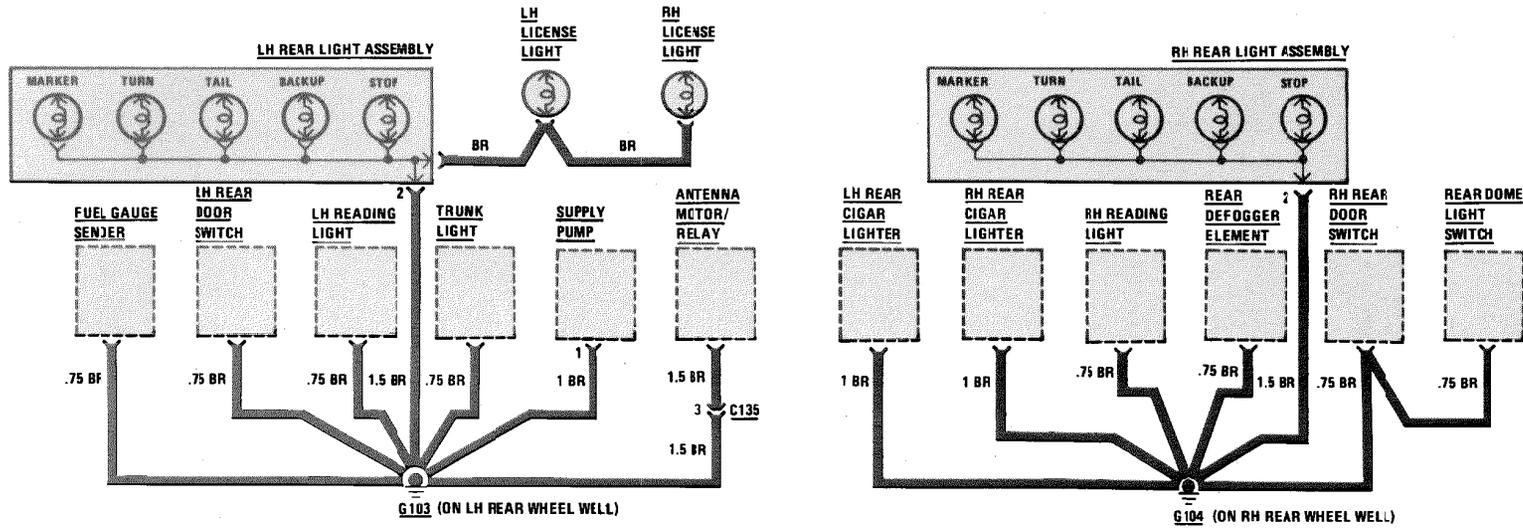

* INDICATES TRAINING NUMBER

REVISIONS:

--	--	--

COMPONENT LOCATIONS

1/87

ANTI LOCK BRAKE SYSTEM

		Page-Figure
ABS Electronic Control Unit . .	Center of components compartment, engine compartment.	209-1
ABS Hydraulic Unit	LH front corner of engine compartment.	207-2
Battery	RH rear corner of engine compartment	
Brake Switch	Top of brake pedal support	
EGR Control Unit	Behind RH kick panel	217-2
Fuse Box.	LH rear corner of engine compartment.	201-1
Rear Differential Speed Sensor.	In rear differential, under car	212-3
Wheel Speed Sensor.	Inside of each respective wheel	212-4
C105 (2 terminal)	RH front wheel well	209-2
C187 (1 terminal)	Under fuse box	208-1
C190 (1 terminal)	Behind instrument cluster	215-2
C241 (2 pin).	Under RH side of rear seat	219-2
C243 (2 pin).	LH rear of engine compartment	
C244 (2 pin).	RH rear of engine compartment	209-2
G100	RH rear corner of engine compartment	205-1
G110	RH front wheel well	

ANTI THEFT ALARM SYSTEM

		Page-Figure
Alarm Horn	RH front of engine compartment	
Antenna Motor/Control.	LH rear wheel well	220-1
Anti Theft Alarm Control Unit		
.	Front of passengers footwell	218-1
Anti Towing Sensor.	LH front corner of trunk	220-2
Auxiliary Fuse Holder.	LH side of engine compartment	208-2
Brake Switch	Top of brake pedal support	
Door Actuators	In each door	
Door Switches	In each door jamb.	218-2
Engine Hood Switch	RH rear of engine compartment	209-1
Fuse Box.	LH rear corner of engine compartment.	201-1
Instrument Cluster Switch.	Behind instrument cluster	
Microswitches	In each front door, near door handle	
Radio Protection Contact	Above radio.	216-2
Supply Pump	In spare tire well.	220-3

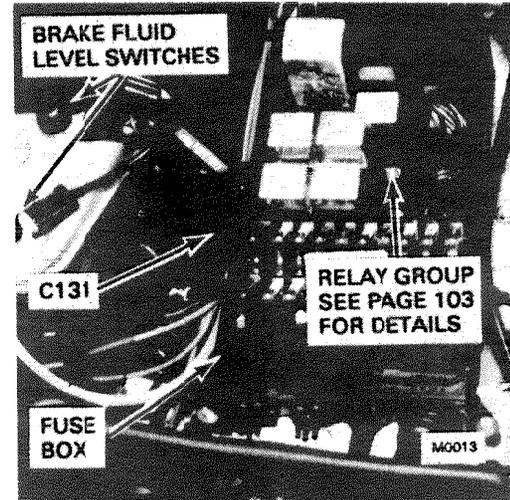


Figure 1 - LH Rear Corner of Engine Compartment

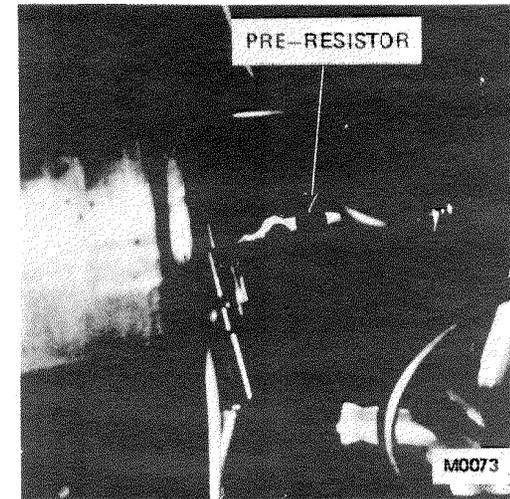


Figure 2 - Under Power Brake Booster

126, 120

201

REVISIONS:

--	--

COMPONENT LOCATIONS

ANTI THEFT ALARM SYSTEM (Continued)

		Page-Figure
Trunk Lock	In center of end panel	
C104 (14 pin)	LH side of driver's footwell	214-2
C141 (4 pin)	Behind LH headlights	204-1
C142 (4 pin)	Behind RH headlights	
C153 (6 pin)	LH front wheel well, on diagnostic socket bracket	206-1
C190 (1 terminal)	Behind instrument cluster	215-2
C201 (4 pin)	At RH kick panel	
C302 (3 pin)	In trunk, near supply pump	
C303 (3 pin)	In driver's door	219-1
C304 (3 pin)	At passenger's door handle	219-1
C306 (12 pin)	Passenger's footwell area	
C311 (3 pin)	In center of end panel	
G102	Behind instrument cluster	214-3
G103	LH rear wheel well	220-1
G104	RH rear wheel well	219-4

AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Temperature Switch	On water outlet	
Electronic Unit for Temperature Control	Above passenger's footwell	
Evaporator Temperature Regulator	LH side off plenum, above driver's footwell	214-2
Fuse Box	LH rear corner of engine compartment	201-1
Pre-Resistor	Under power brake booster	201-2
Receiver Drier Switch	Behind LH headlights	204-1
C167 (2 pin)	LH radiator support	211-1
C180	On LH side of engine compartment	207-2
G102	Behind instrument cluster	214-3
G107	LH radiator support	205-2

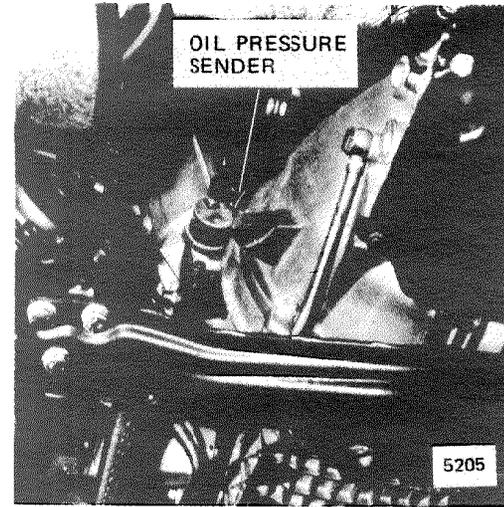


Figure 1- Lower Rear LH Side of Engine

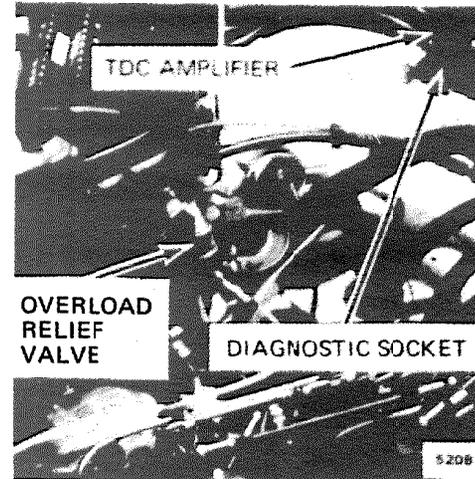


Figure 2- LH Side of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

1/87

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ENGINE

Page-Figure

OVERLOAD PROTECTION

Compressor/Kickdown Cutout		
Control Unit.....	Center rear of engine compartment	
EGR Control Unit.....	Behind RH kick panel	217-2
Fuse Bx.....	LH rear corner of engine compartment.....	201-1
Intake Manifold Pressure		
Switch.....	Top rear of intake manifold	
Overload Relief Valve	LH side of engine compartment	202-2
Starter Lockout/Backup Light		
Switch.....	LH side of transmission.....	210-1
Transmission Kickdown		
Solenoid	RH rear of transmission.....	210-2
Transmission Kickdown Switch		
.....	Under accelerator pedal	214-2
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C146 (6 pin).....	RH side of driver's footwell.....	214-2
C153 (6 pin).....	LH front wheel well, on diagnostic socket bracket	206-1
C186 (1 pin).....	Behind instrument cluster	
C191 (1 terminal)	Under fuse box	
G103	LH rear wheel well	220-1
G104	RH rear wheel well	219-4

126.120

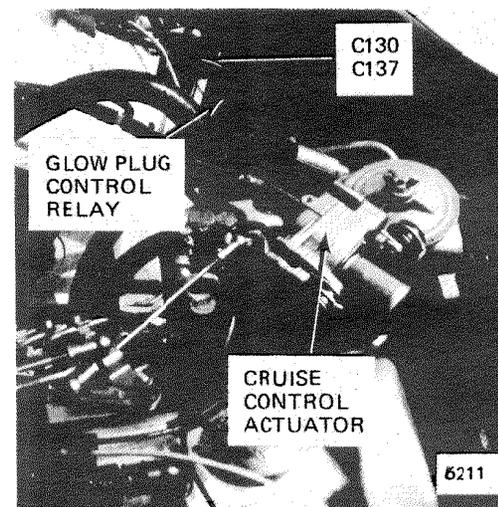


Figure 1 - Front LH Side of Engine

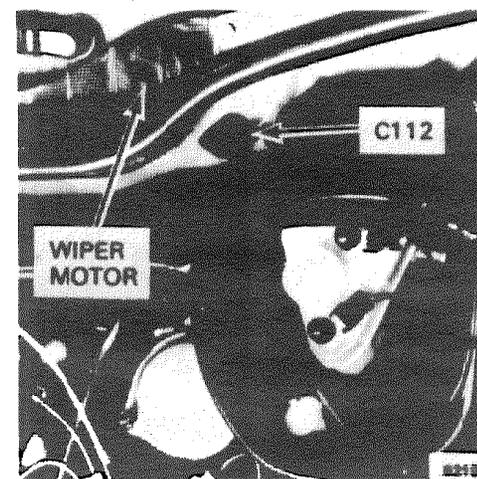


Figure 2 - LH Rear Corner of Engine Compartment

REVISIONS:

203

COMPONENT LOCATIONS

CENTRAL LOCKING SYSTEM

		Page-Figure
Door Actuators	In each door	
Fuse Box	LH rear corner of engine compartment	201-1
Key Warning Switch	Part of ignition switch	213-1
Supply Pump	In spare tire well	220-3
Trunk Lock	In center of end panel	
C302 (3 pin)	In trunk, near supply pump	
C306 (12 pin)	Passenger's footwell area	
G102	Behind instrument cluster	214-3
G103	LH rear wheel well	220-1
S186	Central locking harness	
S187	Central locking harness	

CHARGING SYSTEM

Battery	RH rear corner of engine compartment	
Brake Fluid Level Switches	LH rear corner of engine compartment, at brake fluid reservoir	201-1
Fuse Box	LH rear corner of engine compartment	201-1
Ignition Switch	In dash panel, right of steering column	213-1
Parking Brake Switch	On parking brake support	
Starter Assembly	Lower RH rear of engine	
Warning Module	LH side of driver's footwell	214-1
C105 (2 terminal)	RH front wheel well	209-2
G100	RH rear corner of engine compartment	205-1

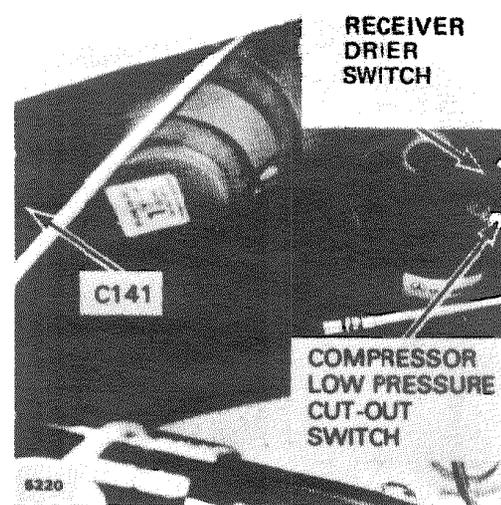


Figure1 - Behind LH Headlights

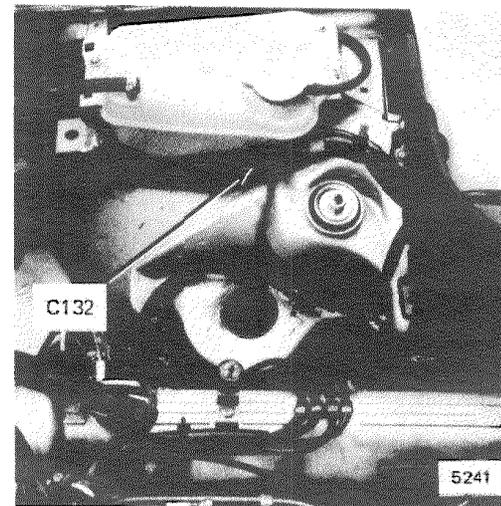


Figure2 - RH Front Wheel Well

REVISIONS:

COMPONENT LOCATIONS

COURTESY LIGHTS

		Page-Figure
Antenna Motor/Control	LH rear wheel well	220-1
Antenna Motor/Relay	LH rear wheel well	220-1
Anti Theft Alarm Control Unit	Front of passengers footwell	218-1
Door Switches	In each door jamb	218-2
Fuse Box	LH rear corner of engine compartment	201-1
Parking Brake Switch	On parking brake support	
Warning Module	LH side of driver's footwell	214-1
C104 (14 pin)	LH side of driver's footwell	214-2
C135 (6 pin)	Above LH rear wheel well	220-1
C156 (1 pin)	Behind LH front door switch	
C157 (1 pin)	Behind LH front door switch	
C200 (4 pin)	At LH kick panel	
C201 (4 pin)	At RH kick panel	
C306 (12 pin)	Passenger's footwell area	
G102	Behind instrument cluster	214-3
G103	LH rear wheel well	220-1
G104	RH rear wheel well	219-4
G111	Center of windshield header	216-1

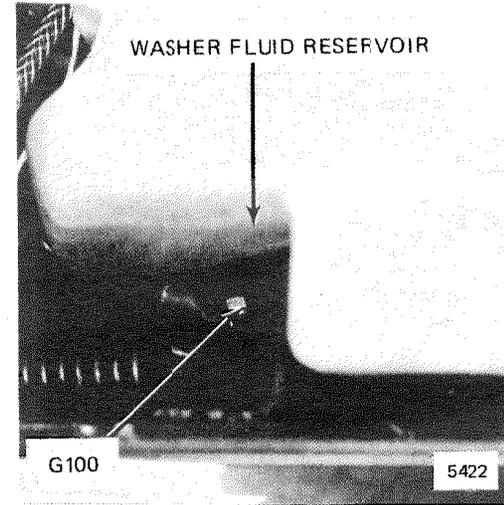


Figure 1 - RH Inner Fender Panel, Near Battery

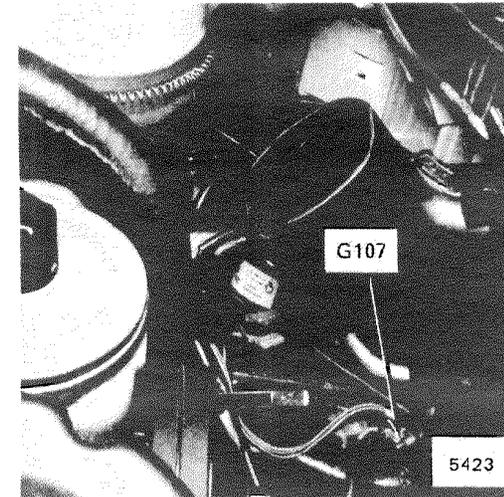


Figure 2 - Behind LH Headlights

REVISIONS:

--

COMPONENT LOCATIONS

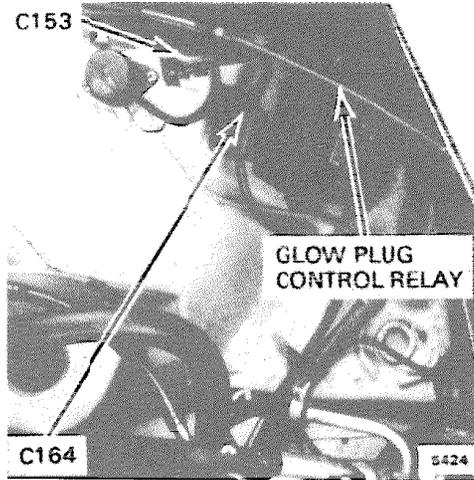


Figure 1 - LH Rear of Engine Compartment

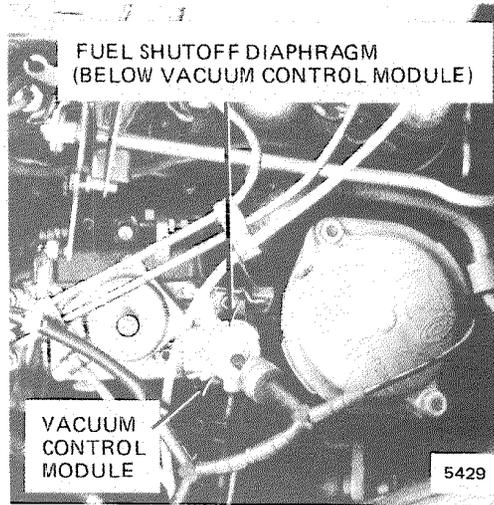


Figure 3 - Top of Fuel Injection Pump

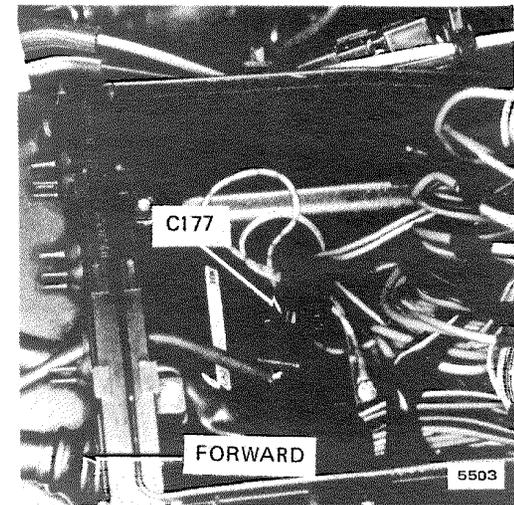


Figure 5 - Under Fuse Box

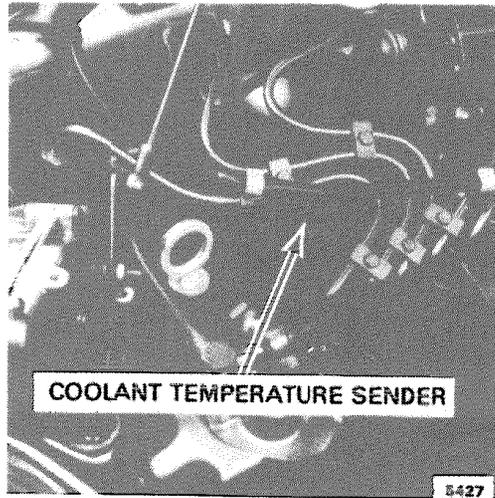


Figure 2 - LH Side of Engine

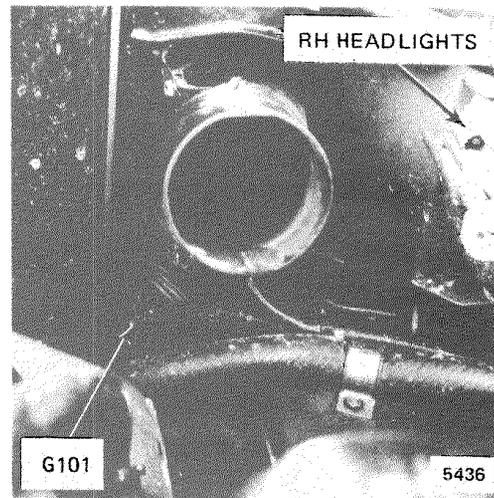


Figure 4 - Left of RH Headlights

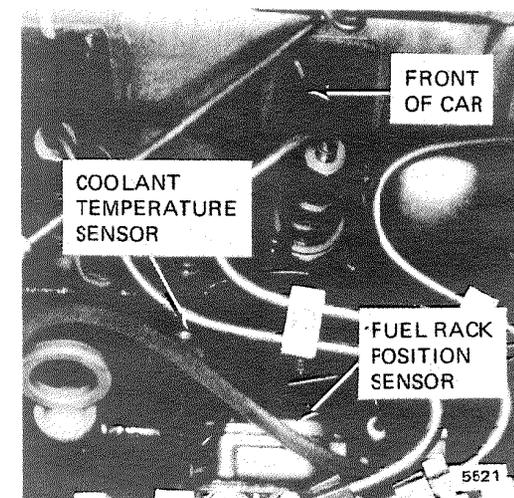


Figure 6 - LH Side of Engine Compartment

REVISIONS:

--

COMPONENT LOCATIONS

EXHAUST GAS RECIRCULATION

	Page-Figure
Battery	RH rear corner of engine compartment
Compressor/Kickdown Cutout	
Control Unit	Center rear of engine compartment
Coolant Temperature Sensor...	LH side of cylinder head 206-6
EGR Control Unit	Behind RH kick panel 217-2
EGR Vacuum Amplifier	Behind RH headlights 212-1
Engine Speed Sensor	On LH side of bell housing 212-2
Fuel Rack Position Sensor	LH side of engine compartment, on injection pump 206-6
Fuse Box	LH rear corner of engine compartment. 201-1
Recirc. Air Safety Valve	Behind RH headlights 212-1
Trimming Plug	Rear of fuse box
C155 (2 pin)	RH rear corner of engine compartment 207-1
C158 (3 pin)	RH rear corner of engine compartment 207-1
C186 (1 pin)	Behind instrument cluster
C187 (1 terminal)	Under fuse box 208-1
G100	RH rear corner of engine compartment 205-1
G102	Behind instrument cluster 214-3

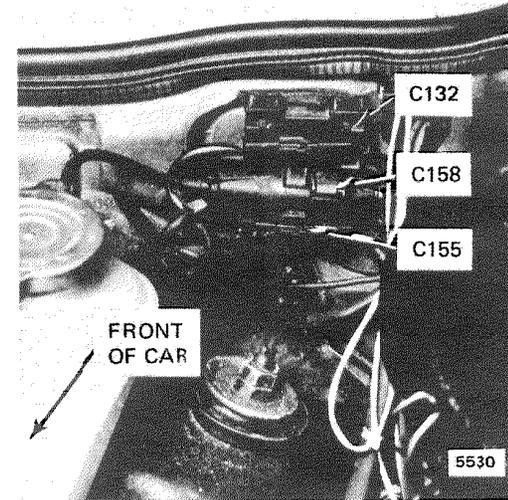


Figure 1 - RH Side of Engine Compartment

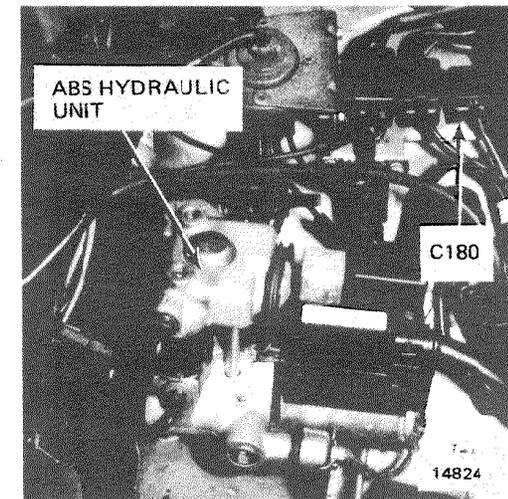


Figure 2 - LH Side of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

FRONT CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
Antenna Motor/Control.....	LH rear wheel well	220-1
Antenna Motor/Relay	LH rear wheel well	220-1
Fuse Box.....	LH rear corner of engine compartment.....	201-1
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C135 (6 pin).....	Above LH rear wheel well	220-1
G102.....	Behind instrument cluster	214-3
G103.....	LH rear wheel well	220-1
S101.....	Speaker harness	
S102.....	Speaker harness	

GLOVE BOX LIGHT/REAR CIGAR LIGHTERS/HORNS

		Page-Figure
Fuse Box.....	LH rear corner of engine compartment.....	201-1
Horn Switch.....	In steering wheel	
Slip Ring Assembly.....	Underside of steering wheel	
C106 (14 pin).....	LH side of driver's footwell	214-1
G101.....	On radiator support, near RH headlights.....	206-4
G102.....	Behind instrument cluster	214-3
G104.....	RH rear wheel well	219-4

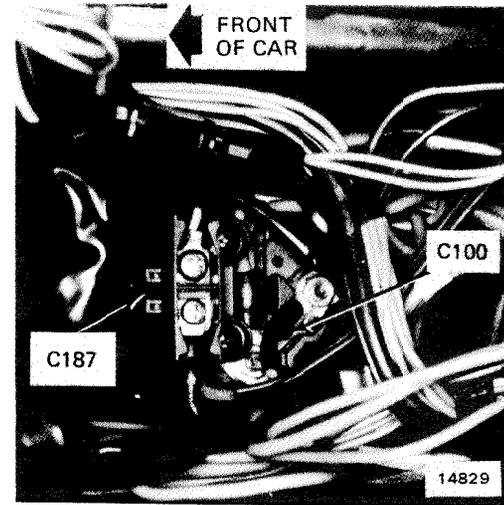


Figure 1 - Under Fuse Box

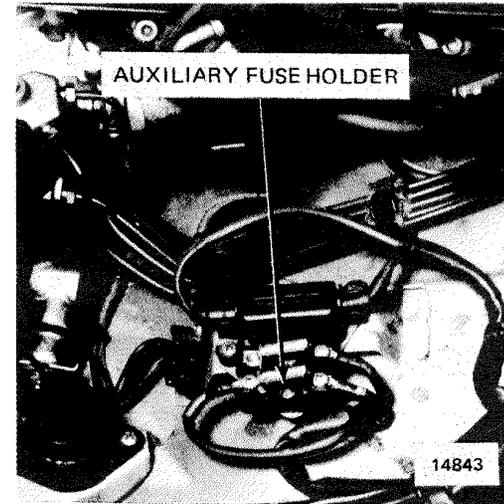


Figure 2 - LH Side of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

HEADLIGHTS/FOG LIGHTS

	Page-Figure
Combination Switch	Top LH side of steering column
Fuse Box.....	LH rear corner of engine compartment. 201-1
C106 (14 pin).....	LH side of driver's footwell 214-1
C141 (4 pin).....	Behind LH headlights 204-1
C142 (4 pin).....	Behind RH headlights
C153 (6 pin).....	LH front wheel well, on diagnostic socket bracket 206-1
G101	On radiator support, near RH headlights..... 206-4
G102	Behind instrument cluster..... 214-3

HEATED SEATS

	Page-Figure
Fuse Box.....	LH rear corner of engine compartment. 201-1
Seat Heater Control/Relays (Front).....	Under each front seat, on air duct..... 218-3
Seat Heater Control/Relays (Rear).....	Behind rear seat backrest 219-3
Seat Heaters.....	In each seat cushion
G102	Behind instrument cluster..... 214-3

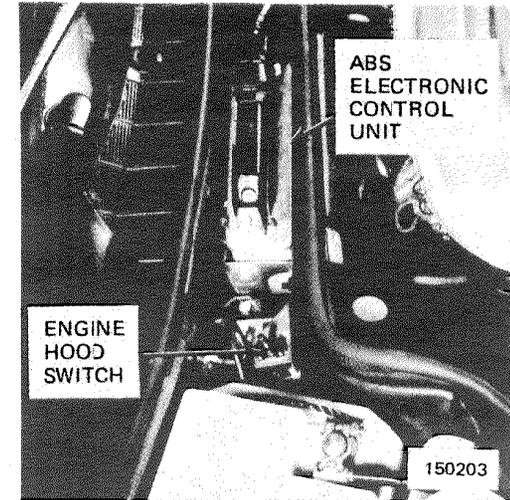


Figure 1 - Rear of Engine Compartment

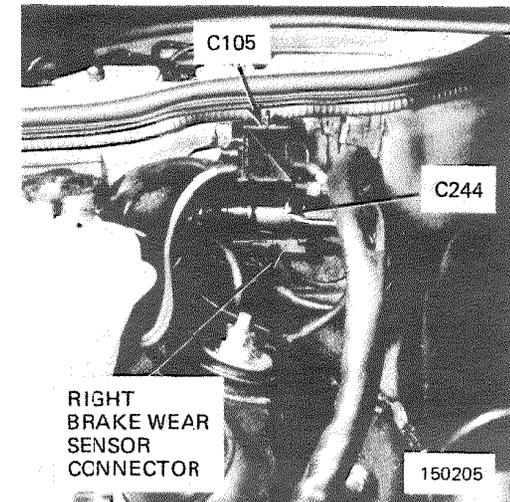


Figure 2 - RH Rear of Engine Compartment

REVISIONS

--	--

COMPONENT LOCATIONS

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Page-Figure

Fuse Box.....	LH rear corner of engine compartment.....	201-1
C107 (6 pin).....	Under center console	
C108 (2 pin).....	Under center console	
C124 (1 terminal).....	RH side of driver's footwell	
G102.....	Behind instrument cluster.....	214-3

LIGHTS: PARK/TAIL/MARKER/LICENSE

Page-Figure

Fuse Box.....	LH rear corner of engine compartment.....	201-1
C104 (14 pin).....	LH side of driver's footwell.....	214-2
C141 (4 pin).....	Behind LH headlights.....	204-1
C142 (4 pin).....	Behind RH headlights	
C153 (6 pin).....	LH front wheel well, on diagnostic socket bracket.....	206-1
G101.....	On radiator support, near RH headlights.....	206-4
G102.....	Behind instrument cluster.....	214-3
G103.....	LH rear wheel well.....	220-1
G104.....	RH rear wheel well.....	219-4

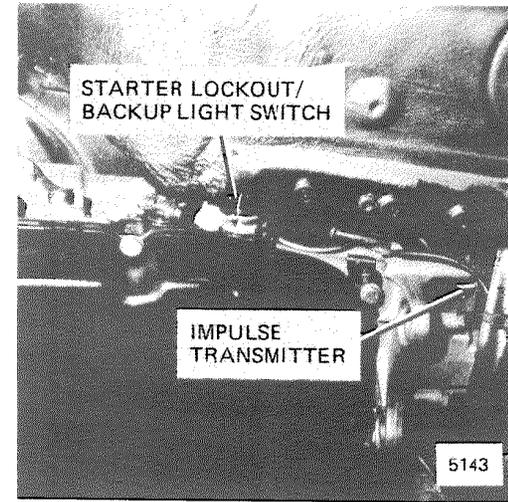


Figure 1 - LH Side of Transmission

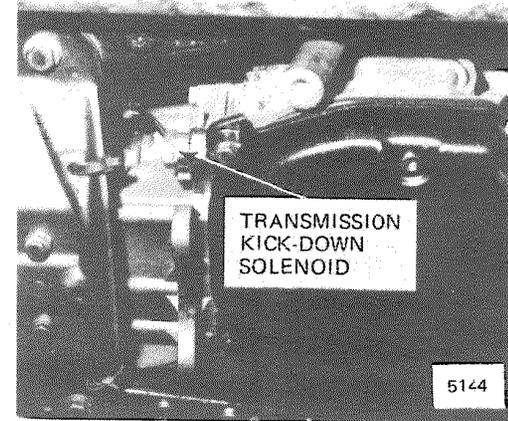


Figure 2 - Rear RH Side of Transmission

REVISIONS:

COMPONENT LOCATIONS

ORTHOPEDIC SEATS

	Page-Figure
Air Pressure Reservoir	Above RH rear wheel well
Fuse Box	LH rear corner of engine compartment 201-1
Supply Pump	In spare tire well 220-3
G102	Behind instrument cluster 214-3

OUTSIDE HEATED MIRRORS

	Page-Figure
Fuse Box	LH rear corner of engine compartment 201-1
C310 (2 pin)	In LH front door
G102	Behind instrument cluster 214-3

POWER DISTRIBUTION

	Page-Figure
Battery	RH rear corner of engine compartment
Fuse Box	LH rear corner of engine compartment 201-1
Ignition Switch	In dash panel, right of steering column 213-1
Seat Heater Control/Relays (Front)	Under each front seat, on air duct 218-3
Starter Assembly	Lower RH rear of engine
C104 (14 pin)	LH side of driver's footwell. 214-2
C105 (2 terminal)	RH front wheel well. 209-2
G100	RH rear corner of engine compartment 205-1

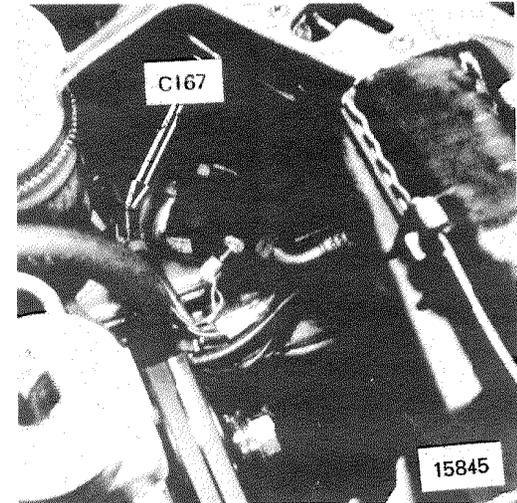


Figure 1 - Lower Left Front Corner of Engine Compartment

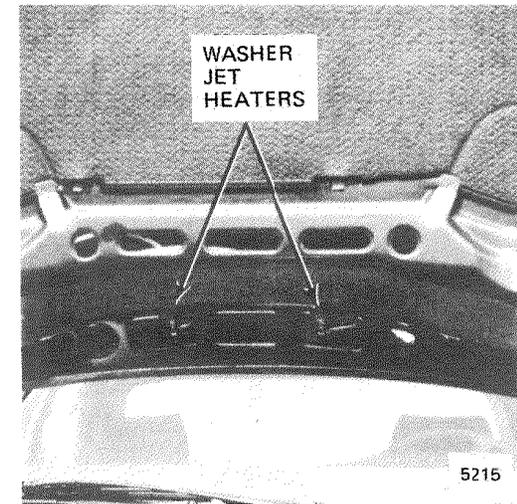


Figure 2 - Rear Center of Hood

1/87

126, 120

211

REVISIONS:

--

COMPONENT LOCATIONS

POWER SEATS

		Page-Figure
Door Switches	In each door jamb	218-2
Fuse Box	LH rear corner of engine compartment	201-1
Head Restraint Dual Relay	Under driver's seat	
Power Seat Control Module	Under front of driver's seat	218-4
Power Seat Motors	Under front seats	
C181 (4 pin)	Under driver's seat	
C182 (2 pin)	Under driver's seat	
C201 (4 pin)	At RH kick panel	
G102	Behind instrument cluster	214-3

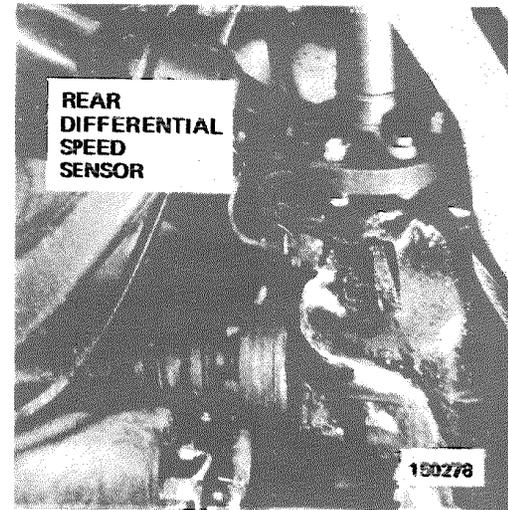


Figure 3 - Rear Underside of Car

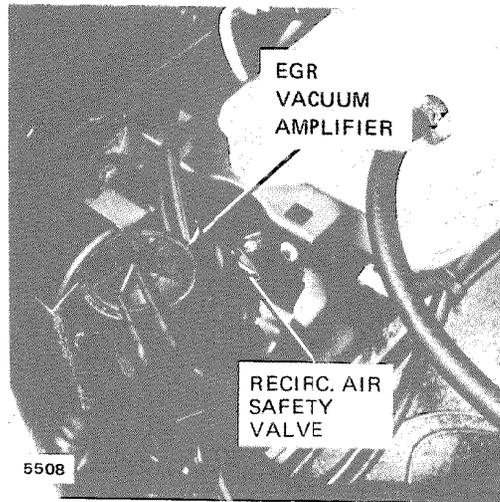


Figure 1 - Behind RH Headlights

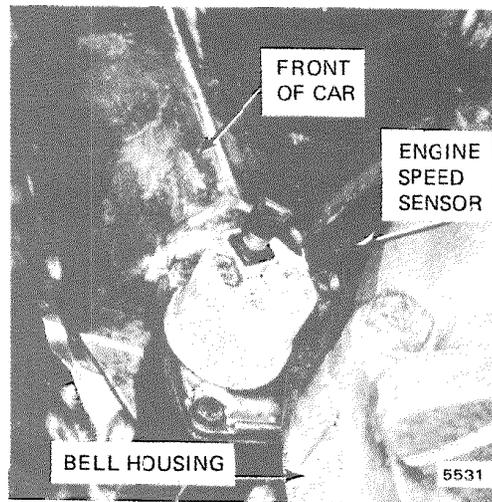


Figure 2 - Under LH Rear of Engine, at Bell Housing

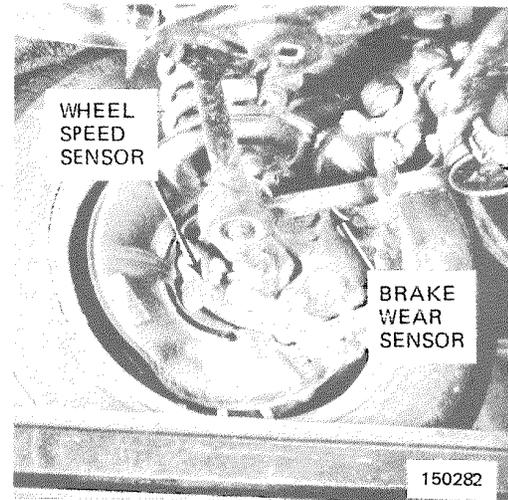


Figure 4 - Inside of RH Front Wheel

REVISIONS:

--

COMPONENT LOCATIONS

POWER WINDOWS

		Page-Figure
Fuse Box	LH rear corner of engine compartment	201-1
Window Motor	Below each side window	
C107 (6 pin)	Under center console	
C108 (2 pin)	Under center console	
G102	Behind instrument cluster	214-3

PRE-GLOW SYSTEM

		Page-Figure
Battery	RH rear corner of engine compartment	
Cruise Control Actuator	LH front of engine compartment	203-1
Fuse Box	LH rear corner of engine compartment	201-1
Glow Plug Control Relay	LH front wheel well	203-1
Ignition Switch	In dash panel, right of steering column	213-1
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup Light Switch ..	LH side of transmission	210-1
C105 (2 terminal)	RH front wheel well	209-2
C146 (6 pin)	RH side of driver's footwell	214-2
C153 (6 pin)	LH front wheel well, on diagnostic socket bracket ...	206-1
C164 (8 pin)	LH front wheel well	206-1
G100	RH rear corner of engine compartment	205-1
G102	Behind instrument cluster	214-3

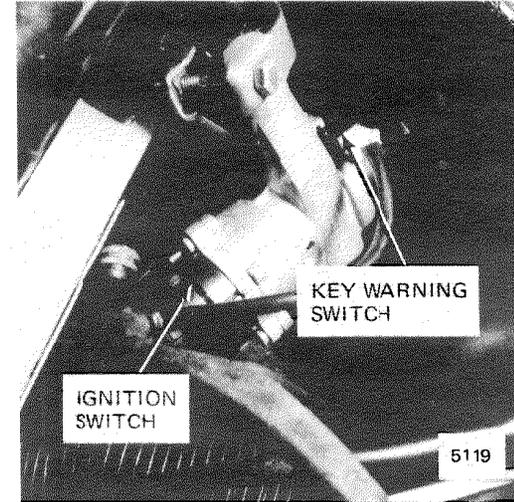


Figure1 - Behind LH Side of Dash

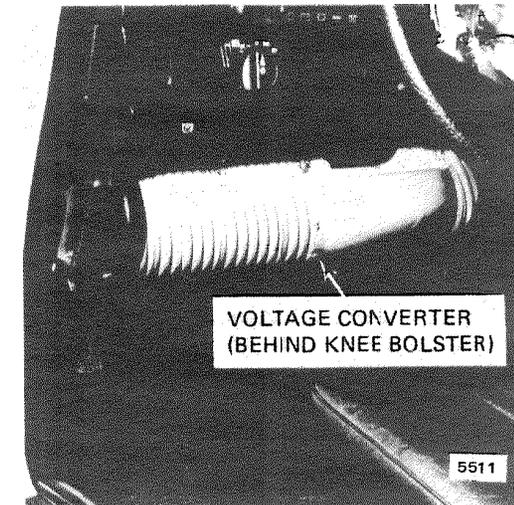


Figure 2 - Lower LH Side of Dash Panel

REVISIONS:

--	--


COMPONENT LOCATIONS

REAR DEFOGGER/SLIDING ROOF

		Page-Figure
Fuse Box	LH rear corner of engine compartment	201-1
Sliding Roof Motor	Front LH side of trunk	220-1
C104 (14 pin)	LH side of driver's footwell	214-2
C168 (4 pin)	Above LH rear wheel well	220-1
G102	Behind instrument cluster	214-3
G104	RH rear wheel well	219-4

RH OUTSIDE MIRROR

		Page-Figure
Fuse Box	LH rear corner of engine compartment	201-1
G102	Behind instrument cluster	214-3

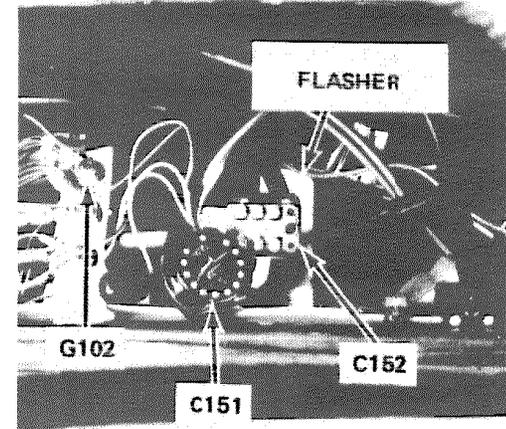

5214

Figure 3 - Behind Instrument Cluster

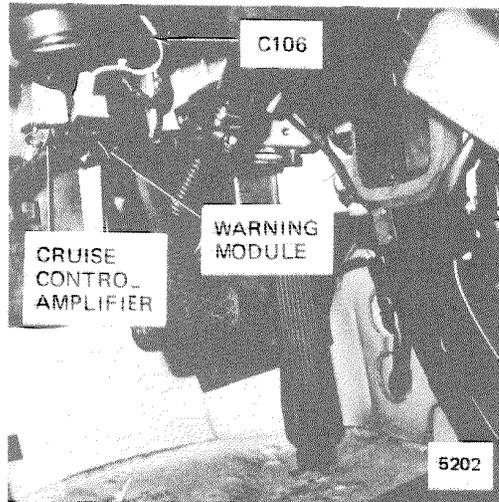


Figure 1 - LH Side of Driver's Footwell

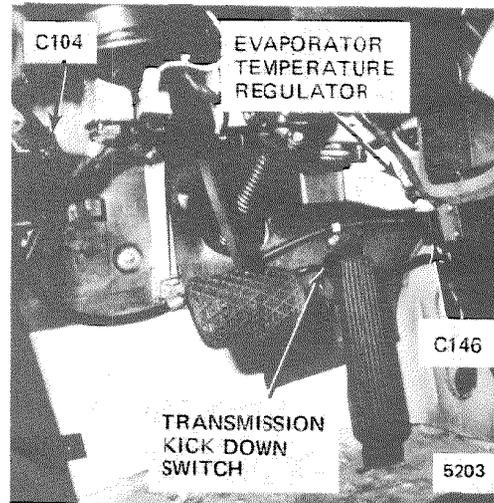


Figure 2 - Driver's Footwell Area

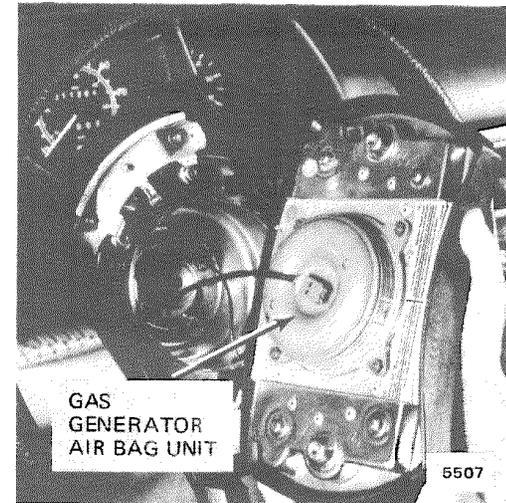


Figure 4 - Steering Wheel

REVISIONS:

--	--

COMPONENT LOCATIONS

1/87

START/STOP (IGNITION SWITCH)

	Page-Figure
Battery	RH rear corner of engine compartment
Fuel Shutoff Diaphragm	Rear of fuel injection pump. 206-3
Fuse Box	LH rear corner of engine compartment 201-1
Ignition Switch	In dash panel, right of steering column 213-1
Starter Assembly	Lower RH rear of engine
Starter Lockout/Backup Light Switch... ..	LH side of transmission 210-1
C105 (2 terminal)	RH front wheel well. 209-2
C146 (6 pin).....	RH side of driver's footwell 214-2
G100	RH rear corner of engine compartment 205-1

STOPLIGHTS/BACKUP LIGHTS/CRUISE CONTROL

	Page-Figure
Brake Switch	Top of brake pedal support
Cruise Control Actuator	LH front of engine compartment 203-1
Cruise Control Amplifier.....	LH side of driver's footwell. 214-1
Fuse Box	LH rear corner of engine compartment 201-1
C104 (14 pin).....	LH side of driver's footwell. 214-2
C140 (6 pin)	Behind LH side oof dash panel, at base of steering column
C153 (6 pin).....	LH front wheel well, on diagnostic socket bracket 206-1
C164 (8 pin).....	LH front wheel well. 206-1
C190 (1 terminal)	Behind instrument cluster 215-2
G102	Behind instrument cluster 214-3
G103	LH rear wheel well. 220-1
G104	RH rear wheel well 219-4

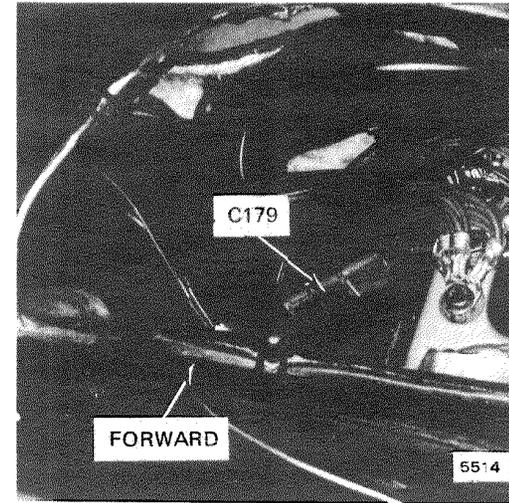


Figure 1- Behind Instrument Cluster

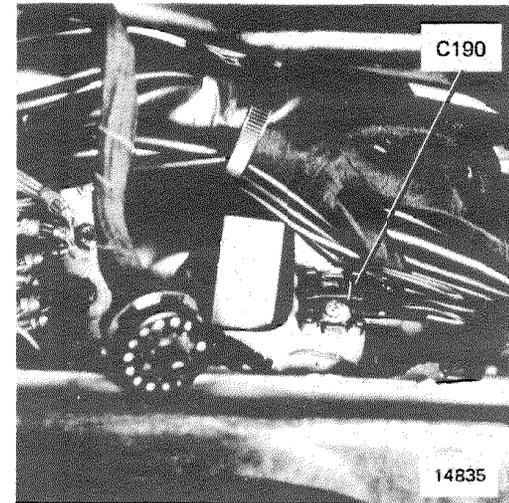


Figure 2 - Behind Instrument Cluster

126, 120

REVISIONS

--	--

215

COMPONENT LOCATIONS

216

SUPPLEMENTAL RESTRAINT SYSTEM

	Page-Figure
Energy Accumulator	Behind RH front footrest
Fuse Box	LH rear corner of engine compartment 201-1
Gas Generator Air Bag Unit	Behind steering wheel insert..... 214-4
Gas Generator Emergency Tensioning	
Retractor	In base of door pillars 217-1
Ignition Switch	In dash panel, right of steering column 213-1
Sensor/Control Unit	Below front of console..... 216-2
Slip Ring Assembly	Underside of steering wheel
Voltage Converter	Behind LH side of dash panel 213-2
C178 (10 pin).....	In passenger's footwell area
C179 (2 pin).....	Behind instrument cluster 215-1
G102	Behind instrument cluster 214-3

TRUNK LIGHT

	Page Figure
Antenna Motor/Control	LH rear wheel well 220-1
Antenna Motor/Relay	LH rear wheel well 220-1
Fuse Box	LH rear corner of engine compartment 201-1
C104 (14 pin).....	LH side of driver's footwell 214-2
C135 (6 pin).....	Above LH rear wheel well 220-1
G103	LH rear wheel well 220-1

126, 120

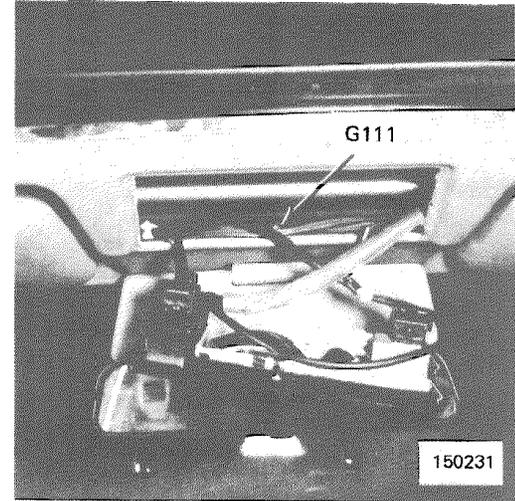


Figure 1- Center of Windshield Header

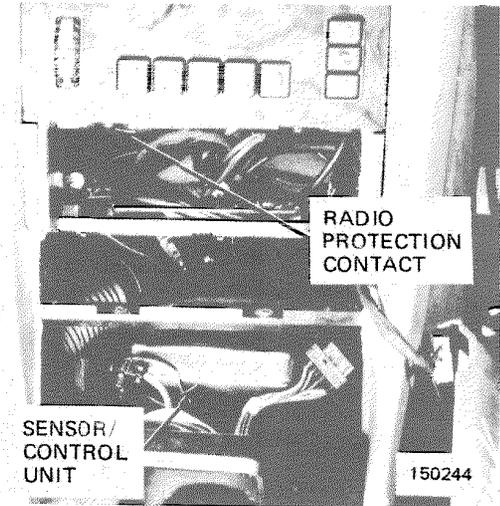


Figure 2- Front of Console

REVISIONS:

--

1/87

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LIGHTS

	Page-Figure
Combination Switch	Top LH side of steering column
Flasher	Behind instrument cluster 214-3
Fuse Box	LH rear corner of engine compartment 201-1
C104 (14 pin)	LH side of driver's footwell 214-2
C106 (14 pin)	LH side of driver's footwell 214-1
C141 (4 pin)	Behind LH headlights 204-1
C142 (4 pin)	Behind RH headlights
C153 (6 pin)	LH front wheel well, on diagnostic socket bracket 206-1
G101	On radiator support, near RH headlights 206-4
G102	Behind instrument cluster 214-3
G103	LH rear wheel well 220-1
G104	RH rear wheel well 219-4

WARNING INDICATORS/GAUGES/CLOCK/TACHOMETER

	Page-Figure
Brake Wear Sensors	In front brake pads 212-4
Coolant Temperature Sender	LH side of cylinder head 206-2
Diagnostic Socket	LH front wheel well 202-2
Engine Speed Sensor	On LH side of bell housing 212-2
Fuel Gauge Sender	Under first aid kit tray
Fuse Box	LH rear corner of engine compartment 201-1
Impulse Transmitter	Rear of LH side of transmission 210-1
Oil Pressure Sender	Lower LH rear of engine 202-1
Outside Air Temperature Sensor	Behind front license bracket
TDC Amplifier	In cap of diagnostic connector 202-2
C104 (14 pin)	LH side of driver's footwell 214-2
C131 (2 pin)	RH side of fuse box 201-1
C132 (2 pin)	Top of RH front wheel well 204-2
C146 (6 pin)	RH side of driver's footwell 214-2
C153 (6 pin)	LH front wheel well, on diagnostic socket bracket 206-1
C155 (2 pin)	RH rear corner of engine compartment 207-1
C177 (2 pin)	LH rear corner of engine compartment, under fuse box 206-5
G101	On radiator support, near RH headlights 206-4
G102	Behind instrument cluster 214-3
G103	LH rear wheel well 220-1

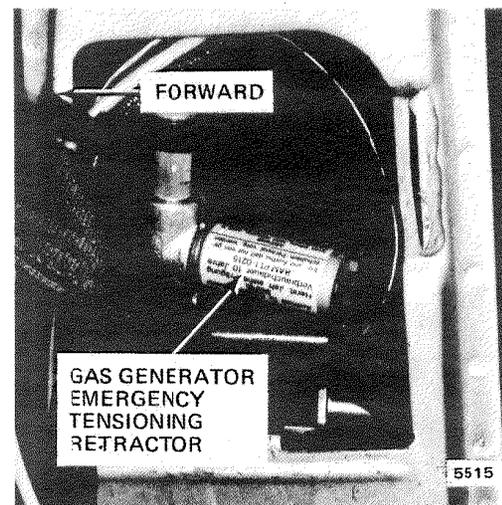


Figure 1 - Inside of RH Door Pillar

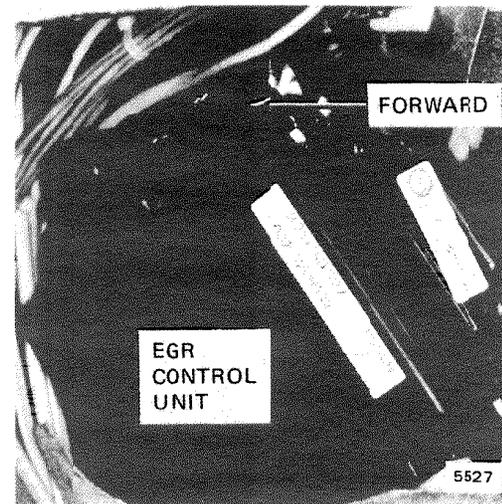


Figure 2 - Behind RH Kick Panel

REVISIONS:

--

COMPONENT LOCATIONS

WARNING SYSTEM

		Page-Figure
Brake Fluid Level Switches	LH rear corner of engine compartment, at brake fluid reservoir	201-1
Door Switches	In each door jamb	218-2
Driver's Seatbelt Switch	In driver's seatbelt buckle	
Fuse Box	LH rear corner of engine compartment	201-1
Key Warning Switch	Part of ignition switch	213-1
Parking Brake Switch	On parking brake support	
Warning Module	LH side of driver's footwell	214-1
C104 (14 pin)	LH side of driver's footwell	214-2
C131 (2 pin)	RH side of fuse box	201-1
C156 (1 pin)	Behind LH front door switch	
C166 (2 pin)	Under driver's seat	
C200 (4 pin)	At LH kick panel	
G102	Behind instrument cluster	214-3

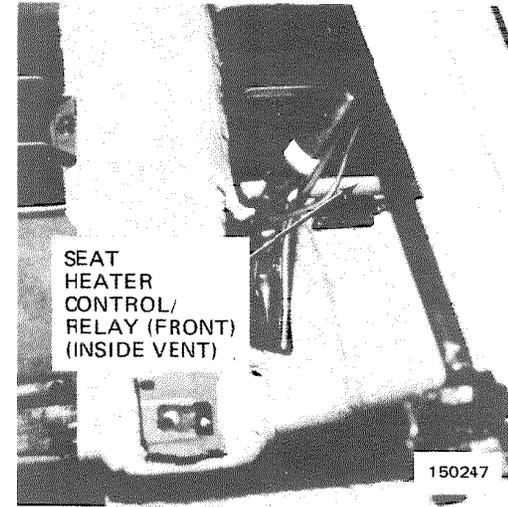


Figure 3 - Below Driver's Seat

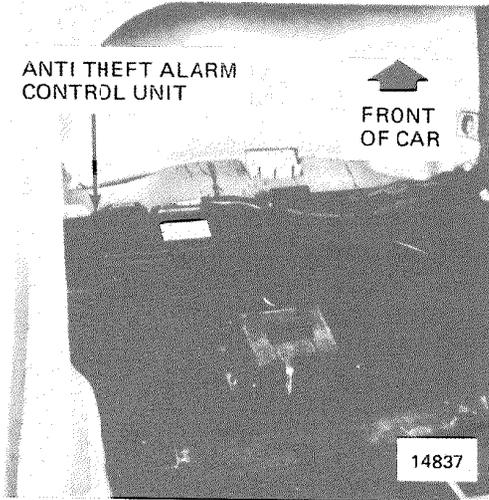


Figure 1 - Passenger's Footwell Area

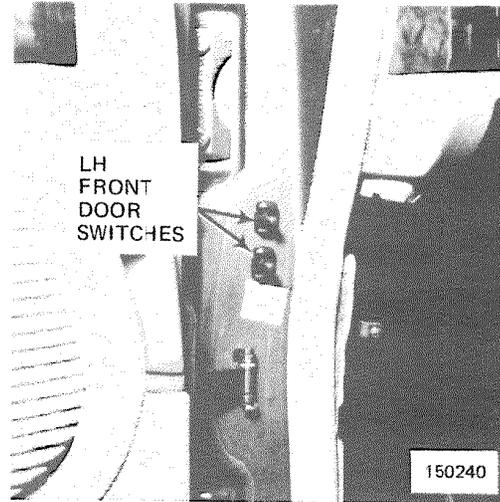


Figure 2 - LH Front Door Jamb (RH Similar)

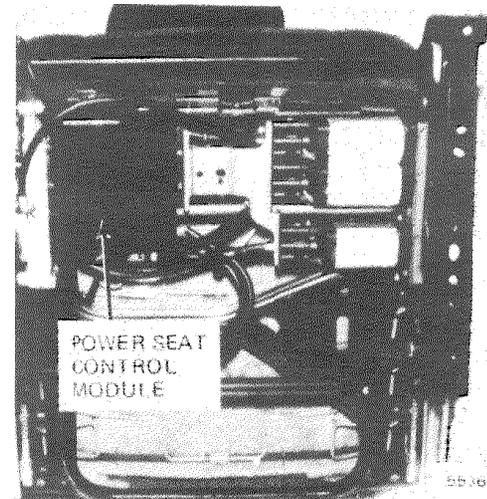


Figure 4 - Underside of Driver's Seat

REVISIONS:

--

COMPONENT LOCATIONS

1/87

WIPER/WASHER

		Page-Figure
Brake Wear Sensors	In front brake pads	212-4
Combination Switch	Top LH side of steering column	
Fuse Box	LH rear corner of engine compartment	201-1
Washer Jet Heaters	In water jets, rear center of hood	211-2
Washer Motor	In washer fluid reservoir	
Wiper Motor	In center of fresh air duct	203-2
C106 (14 pin)	LH side of driver's footwell	214-1
C112 (6 pin)	To right of power brake booster	203-2
C132 (2 pin)	Top of RH front wheel well	204-2
G101	On radiator support, near RH headlight	206-4
G102	Behind instrument cluster	214-3

Page-Figure

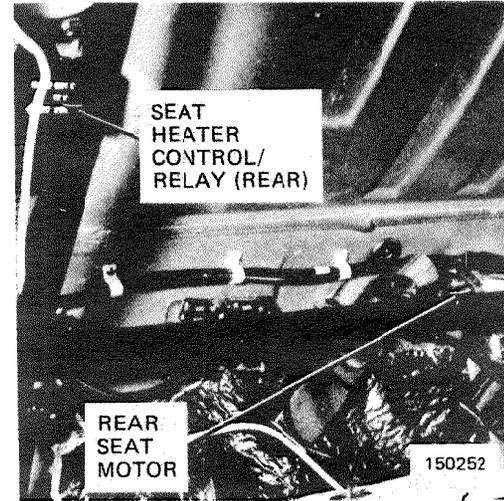


Figure 3 - Behind Rear Seat (RH Side Shown, LH Similar)

126.120

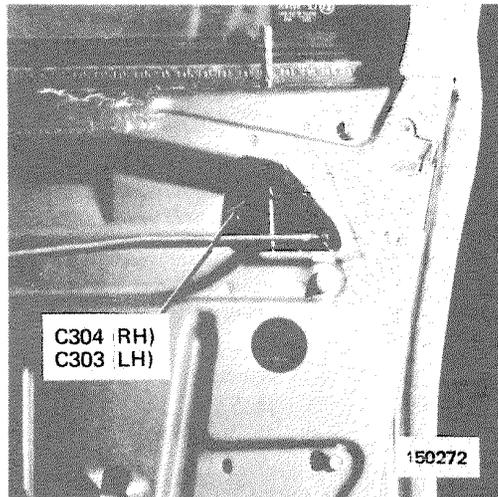


Figure 1- RH Front Door (LH Similar)

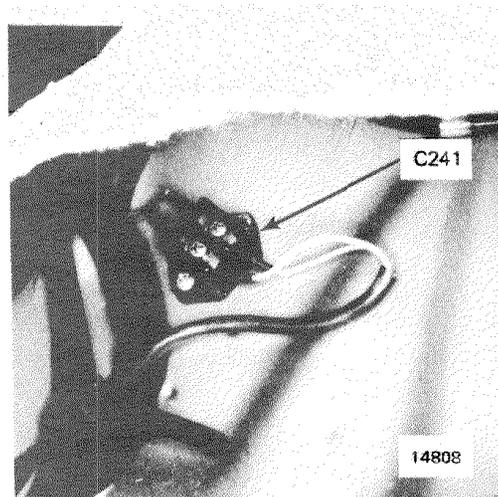


Figure 2 - Under RH Side of Rear Seat

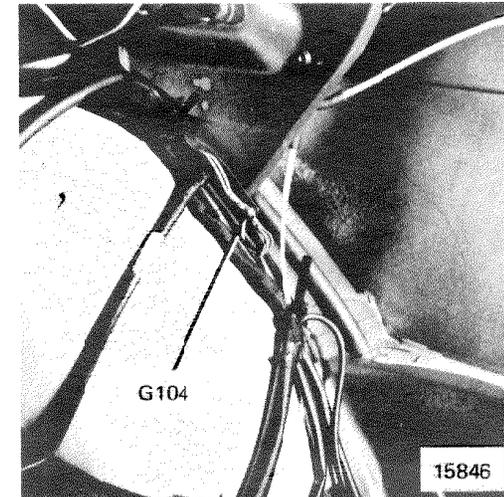


Figure 4 - RH Rear Wheel Well, in Trunk

REVISIONS:

--

219

COMPONENT LOCATIONS

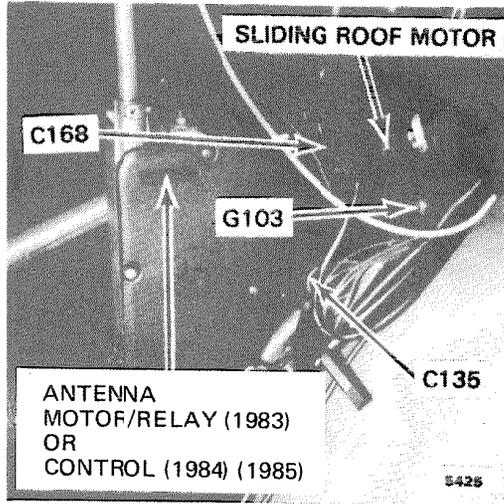


Figure 1 - LH Rear Wheel Well, In Trunk

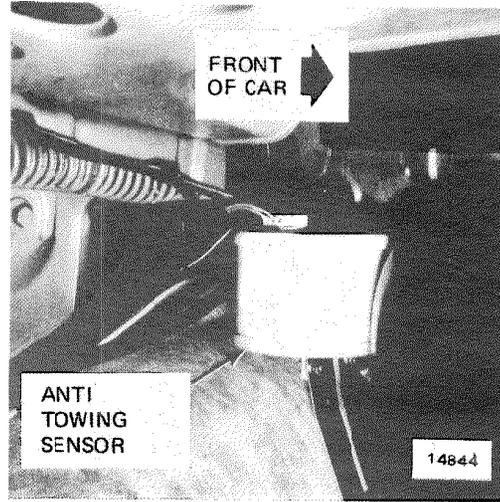


Figure 3 - Bottom of Trunk

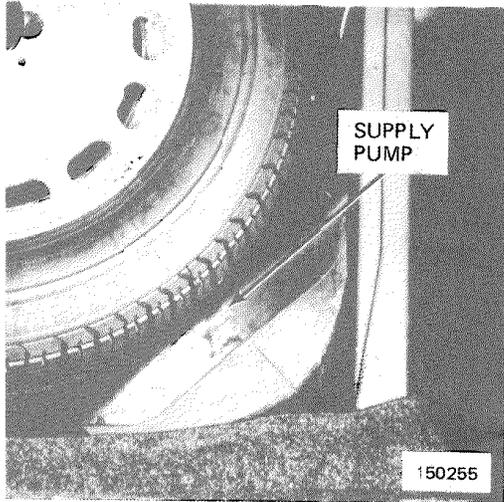


Figure 2 - LH Front Corner of Trunk

REVISIONS:

--