

Heated Seats

- 1 Normal heating mode
- 2 Rapid heating mode

The front seat heaters can be switched on with the key in steering lock positions 1 or 2, the rear seat heaters only in steering lock position 2.

The switches for the front seats are located at the forward end of the center console, those for the rear seats are located in the rear doors.

Heater operation:

Push in upper switch portion; position 1 = normal heating mode, one indicator lamp lights up.

Push in lower switch portion; position 2 = rapid heating mode, both indicator lamps light up.

After approximately 5 minutes in the rapid heating mode, the heater automatically switches to normal operation and only one indicator lamp will stay on.

Turning off heater:

If one indicator lamp is on, press in upper part of switch, position 1.

If both indicator lamps are on, press in lower part of switch, position 2.


The heater automatically turns off after approximately 30 minutes of operation.

Notes:

When in operation, the seat heater consumes a large amount of power. It is advisable not to use the seat heater longer than necessary.

The seat heaters may automatically switch off if too many power consumers are switched on at the same time, or if the battery charge is low. When this occurs, the indicator lamp in the switch will blink (both indicator lamps blink during rapid seat heating). The seat heaters will switch on again as soon as sufficient voltage is available.


If the blinking of the indicator lamps is distracting to you, the seat heaters can be switched off.

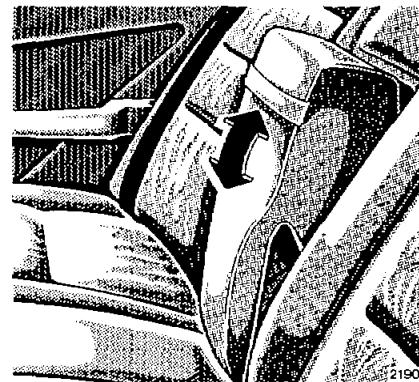

Arm Rest (Rear Bench Seat)

When pulling out the arm rest by its strap, the seat belt buckles for the outboard seats swing out automatically.


For the removal of the rear seat cushion, see "Practical Hints", page 101.

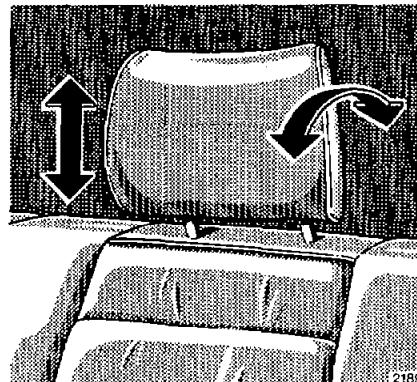

Head Restraints, Rear

Adjust head restraint to support the back of the head approximately at ear level. Do not extend the head restraint past the stop.


For removal of head restraint refer to "Practical Hints", page 100.

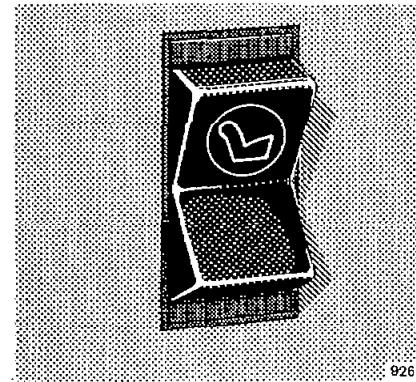


Power Seats, Rear

Turn key in steering lock to position 1 or 2.


The rear seat can be adjusted using the switch located in either of the rear doors. The inclination of the seat back changes with the adjustment of the seat cushion.

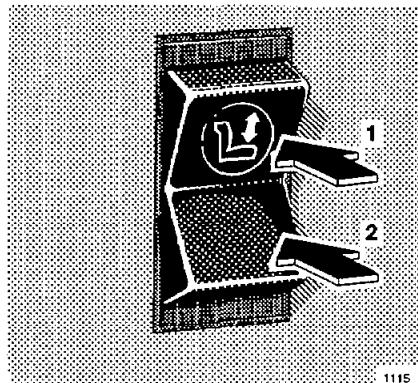

1115

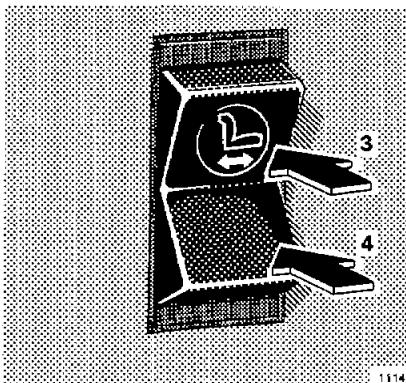

1114

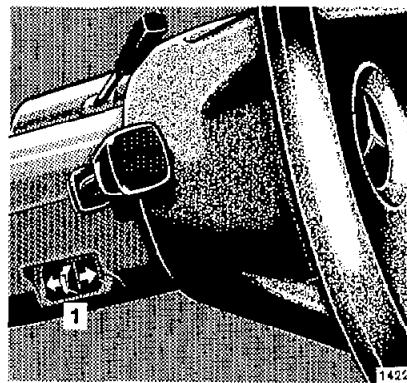

1422

Individual Rear Seats

The switches are located on the console between the seats.

Turn key in steering lock to position 1 or 2.

Press switches:

- 1 Upward seat cushion adjustment
- 2 Downward seat cushion adjustment
- 3 Forward seat cushion adjustment
- 4 Rearward seat cushion adjustment

The inclination of the seat back is altered together with the fore/aft adjustment of the seat cushion.

Adjusting Telescopic Steering Column

Turn key in steering lock to position 1 or 2 (with the driver's or front passenger's door open, the telescopic steering column can be operated with the key removed or in steering lock position 0).

To lengthen or shorten the steering column, actuate the switch (1).

Note:

The steering wheel position is stored in memory with the seat and head restraint position.