


1123

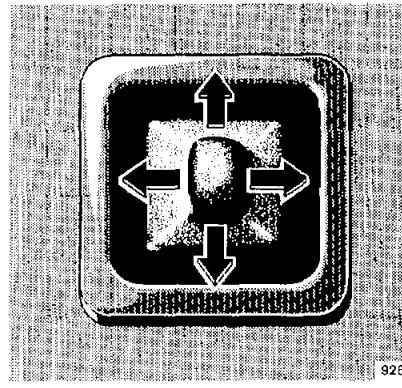

9268

Exterior Rear View Mirrors

- 1 Adjusting lever
- 2 Exterior mirror

The exterior mirrors have electrically heated glass. The heater switches on automatically, depending on outside temperature.

Driver's side:

The exterior mirror (2) can be adjusted from inside the vehicle by moving adjusting lever (1) in the desired direction.

Passenger-side:

The passenger-side exterior mirror is convex (outwardly curved surface for a wider field of view).

Warning!

Exercise care when using the passenger-side mirror. The passenger-side exterior mirror is convex (outwardly curved surface for a wider field of view). Objects in mirror are closer than they appear. Check your inside rear view mirror or glance over your shoulder before changing lanes.

To adjust the mirror:

Turn key in steering lock to position 2. The exterior mirror can be adjusted using the switch located in the center console. Adjust the mirror so you can just see the side of your vehicle in the portion of the mirror closest to the car.

Note:

If the mirror housing is forcibly pivoted from its normal position, it must be repositioned manually by applying firm pressure until it snaps into place.